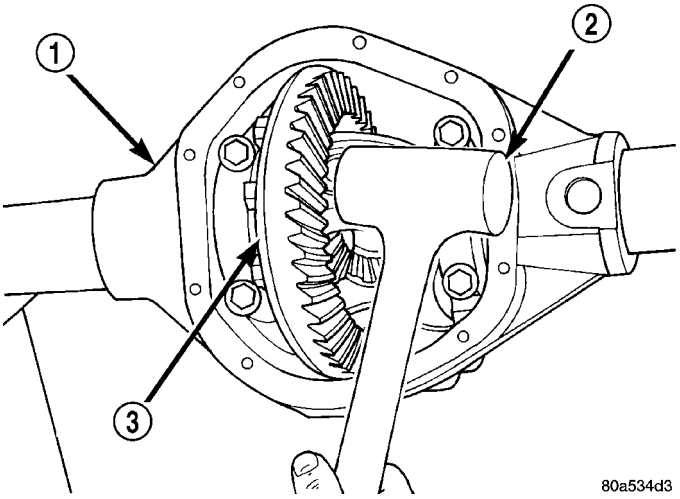

Fig. 15 SEAT DUMMY BEARING RING GEAR SIDE

1 - DIFFERENTIAL HOUSING
2 - MALLET
3 - DIFFERENTIAL CASE

(8) Thread Pilot Stud C-3288-B into rear cover bolt hole below ring gear (Fig. 16).

(9) Attach Dial Indicator C-3339 to the pilot stud and position indicator plunger on a flat surface of the ring gear bolt head (Fig. 16).

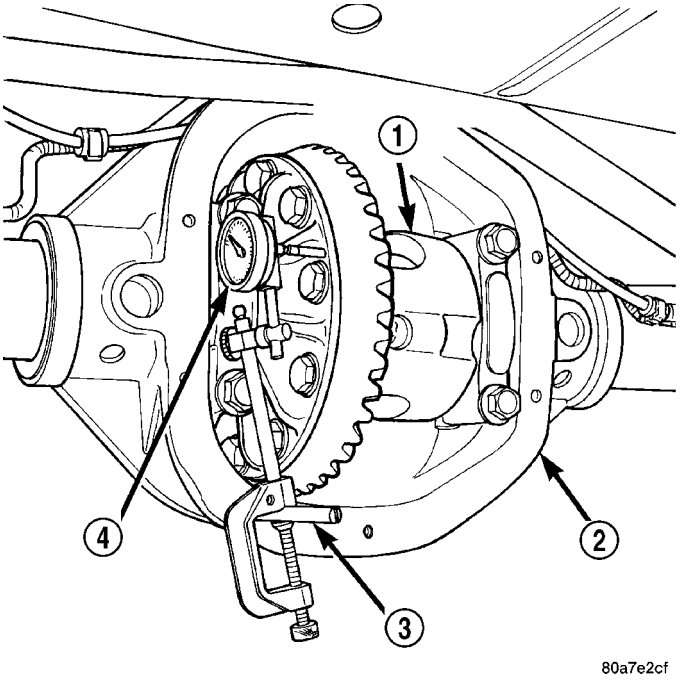

Fig. 16 DIFFERENTIAL SIDE PLAY MEASUREMENT

1 - DIFFERENTIAL CASE
2 - DIFFERENTIAL HOUSING
3 - PILOT STUD
4 - DIAL INDICATOR

(10) Push differential case to the pinion gear side of the housing (Fig. 17) and zero dial indicator.

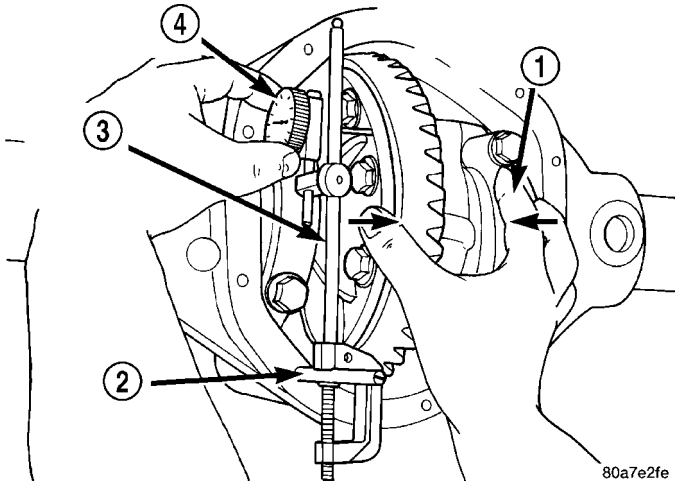

Fig. 17 ZERO DIAL INDICATOR

1 - DIFFERENTIAL CASE TO PINION GEAR SIDE
2 - PILOT STUD
3 - DIAL INDICATOR EXTENSION
4 - ZERO DIAL INDICATOR FACE

(11) Push differential case to the ring gear side and record dial indicator reading (Fig. 18).

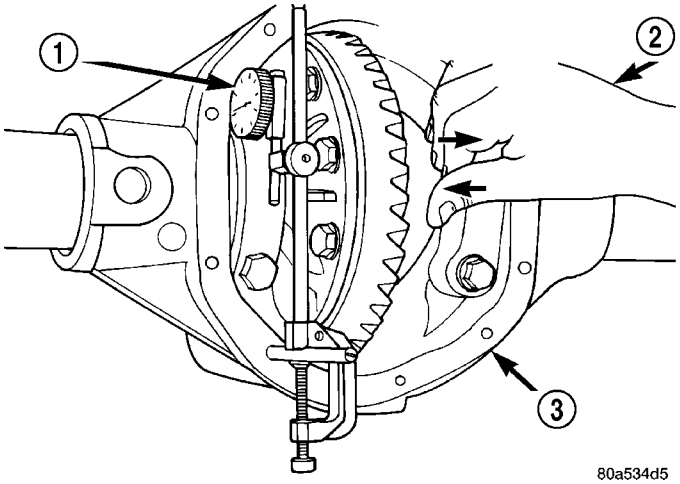

Fig. 18 RECORD DIAL INDICATOR READING

1 - READ DIAL INDICATOR
2 - DIFFERENTIAL CASE TO RING GEAR SIDE
3 - DIFFERENTIAL HOUSING

(12) Add the dial indicator reading to the starting point shim thickness to determine total shim thickness to achieve zero differential end play.

(13) Add 0.008 in. (0.2 mm) to the zero end play total. This new total represents the thickness of shims to compress or preload the new bearings when the differential is installed.

(14) Rotate dial indicator out of the way.

(15) Remove differential case, dummy bearings and starting point shims from the housing.

(16) Install pinion gear in the housing. Install the yoke and establish the correct pinion rotating torque.

(17) Install differential case and dummy bearings in the housing (without shims) and tighten retaining cap bolts.