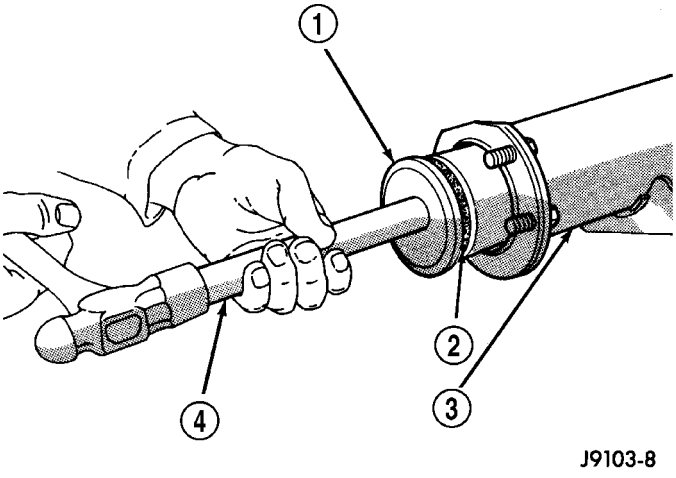

Fig. 26 AXLE SHAFT SEAL

1 - INSTALLER
2 - SEAL
3 - AXLE SHAFT TUBE
4 - HANDLE

(3) Install the axle shaft.

BEARING - AXLE

REMOVAL

(1) Remove axle shaft.

(2) Remove axle shaft seal from axle shaft tube with a small pry bar.

(3) Remove axle shaft bearing from the axle tube with Bearing Removal Tool Set 6310 and Adapter Foot 6310-5 (Fig. 27).

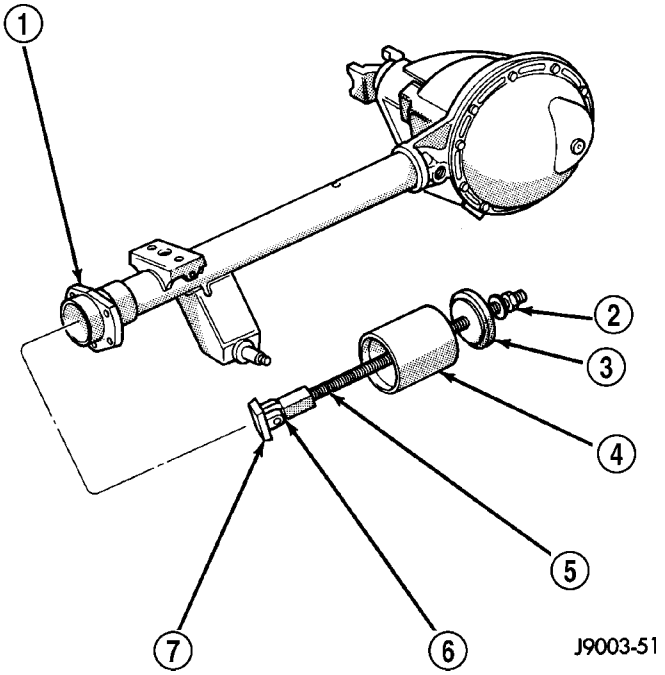

Fig. 27 AXLE SHAFT BEARING TOOLS

1 - AXLE SHAFT TUBE
2 - NUT
3 - GUIDE PLATE
4 - GUIDE
5 - THREADED ROD
6 - ADAPTER
7 - FOOT

INSTALLATION

(1) Wipe axle shaft tube bore clean.

(2) Install axle shaft bearing with Installer 6436 and Handle C-4171.

NOTE: Part number on the bearing must be against the installer.

(3) Install **new** axle shaft seal with Installer 6437 and Handle C-4171 (Fig. 28).