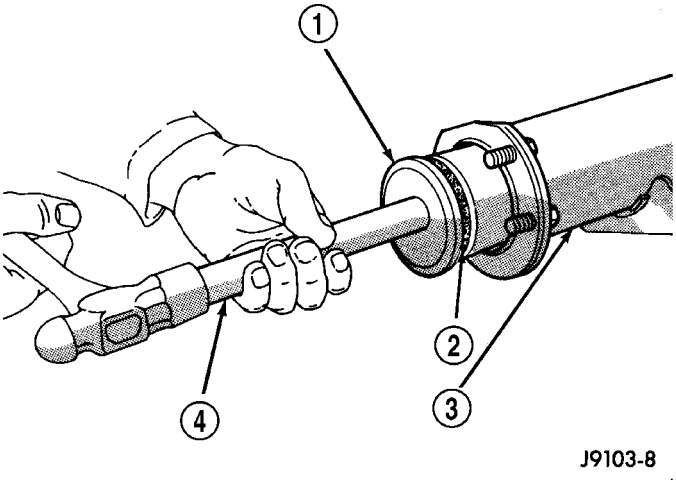

Fig. 28 AXLE SHAFT SEAL INSTALLER

1 - INSTALLER
2 - SEAL
3 - AXLE SHAFT TUBE
4 - HANDLE

(4) Install axle shaft.

SEAL - PINION

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove brake drums.
(3) Remove propeller shaft from the yoke.
(4) Rotate pinion gear three or four times.
(5) Record torque necessary to rotate the pinion gear with an inch pound dial-type torque wrench.
(6) Hold the yoke with Wrench 6958 and remove pinion nut and washer.
(7) Remove pinion yoke with Remover C-452 and Wrench C-3281 (Fig. 29).

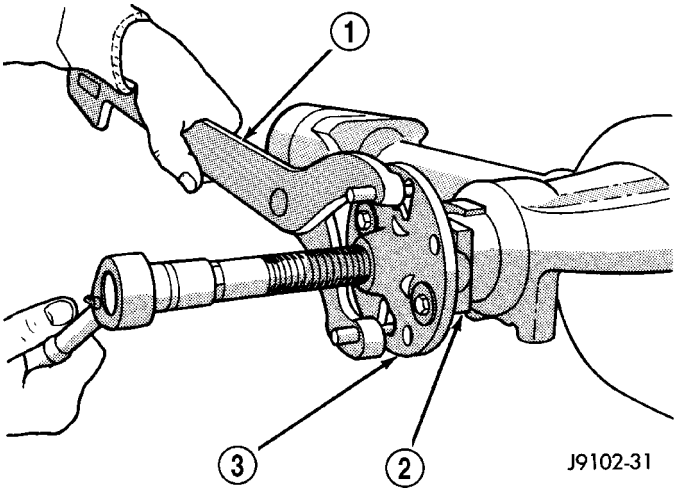

Fig. 29 PINION YOKE REMOVER

1 - WRENCH
2 - YOKE
3 - REMOVER

(8) Remove pinion seal with a pry tool or slide hammer mounted screw.

INSTALLATION

(1) Apply a light coating of gear lubricant on the lip of pinion seal and install seal with an appropriate installer (Fig. 30).

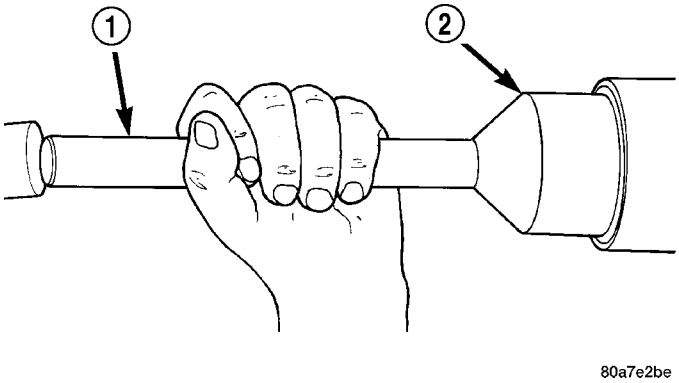

Fig. 30 PINION SEAL INSTALLER

1 - HANDLE
2 - INSTALLER

(2) Install pinion yoke Screw 8112, Cup 8109 and Spanner Wrench 6958 (Fig. 31).