CAUTION: Do not exceed the minimum tightening torque 271 N·m (200 ft. lbs.) when installing the pinion yoke at this point. Failure to heed caution may result in damage.

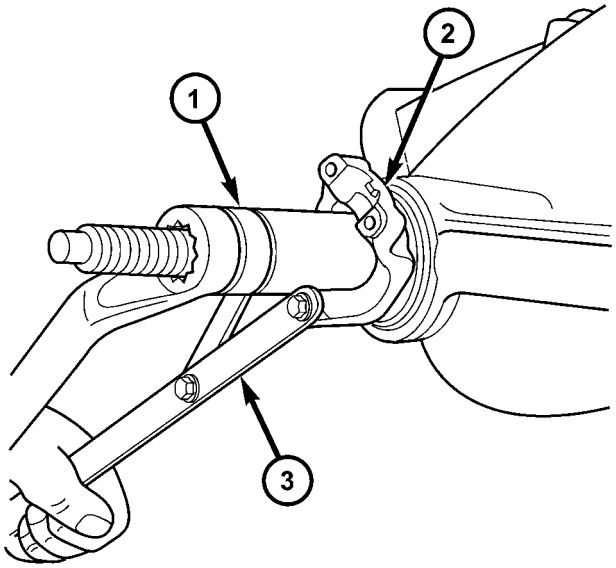

Fig. 31 PINION YOKE INSTALLER

1 - INSTALLER
2 - PINION YOKE
3 - SPANNER WRENCH

(3) Install yoke washer and **new** nut on pinion gear and tighten nut until there is zero bearing endplay.

(4) Tighten pinion nut to 271 N·m (200 ft. lbs.).

CAUTION: Never loosen pinion gear nut to decrease pinion gear bearing rotating torque and never exceed specified preload torque. Failure to heed caution may result in damage.

(5) Rotate pinion shaft using an inch pound torque wrench. Rotating torque should be equal to the reading recorded during removal plus an additional 0.56 N·m (5 in. lbs.) (Fig. 32).

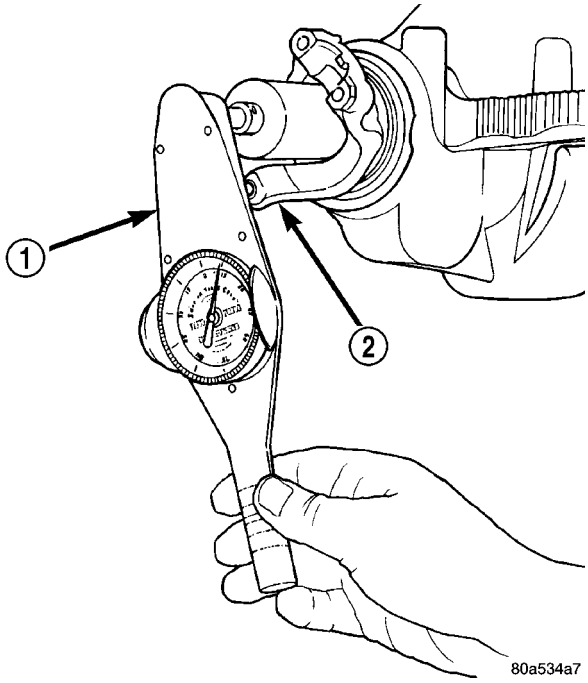

Fig. 32 PINION ROTATING TORQUE

1 - TORQUE WRENCH
2 - PINION YOKE

(6) If rotating torque is low, use Wrench 6958 to hold pinion yoke (Fig. 33), and tighten pinion nut in 6.8 N·m (5 ft. lbs.) increments until proper rotating torque is achieved.

CAUTION: If maximum tightening torque 475 N·m (350 ft. lbs.) is reached prior to reaching the required rotating torque, the collapsible spacer may have been damaged. Failure to heed caution may result in damage.