COVER - DIFFERENTIAL

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove drain plug.
(3) Remove cover bolts.
(4) Remove cover and drain lubricant.

INSTALLATION

(1) Apply a 6.35mm (1/4 in.) bead of Mopar Silicone Rubber Sealant or equivalent to the housing cover (Fig. 39).

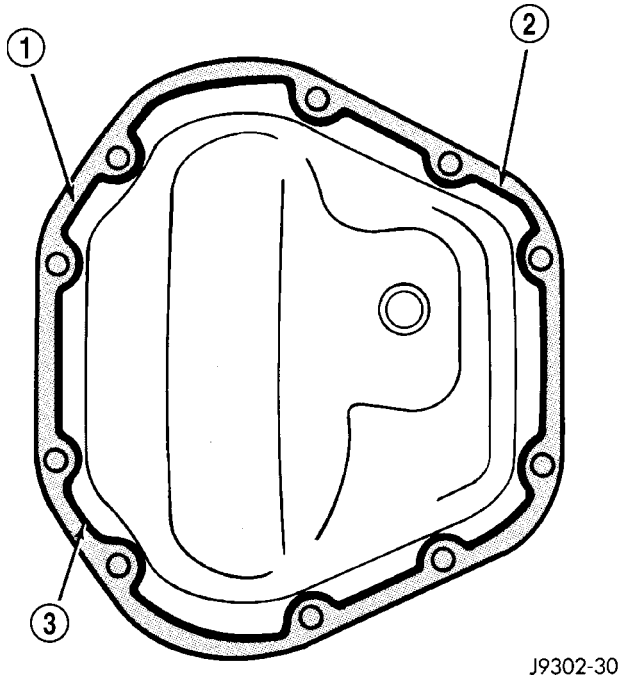


Fig. 39 HOUSING COVER - TYPICAL

1 - SEALANT SURFACE
2 - SEALANT
3 - SEALANT THICKESS

CAUTION: If housing cover is not installed within 3 to 5 minutes, the cover must be cleaned and new RTV applied. Failure to heed caution may result in damage.

(2) Install cover and identification tag. Tighten cover bolts in a criss-cross pattern to 41 N·m (30 ft. lbs.).
(3) Fill differential to specifications.
(4) Install fill plug and tighten to 34 N·m (25 ft. lbs.).

DIFFERENTIAL

REMOVAL

(1) Remove differential fill plug.
(2) Remove differential cover and drain fluid.
(3) Remove axle shafts.
(4) Note reference letters stamped on the bearing caps and housing machined sealing surface (Fig. 40).

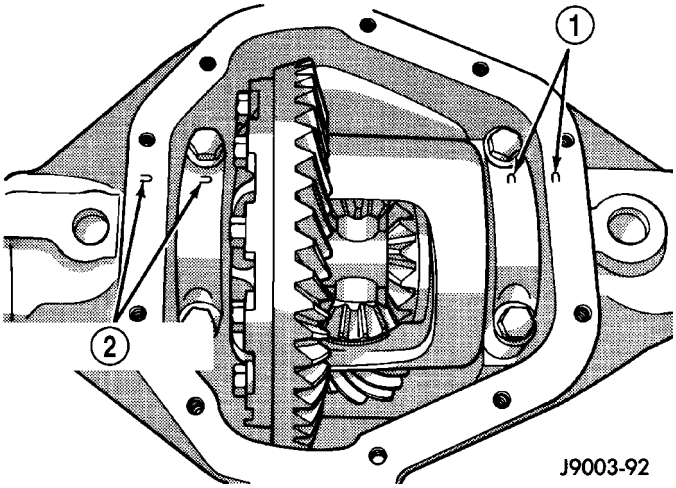


Fig. 40 BEARING CAP REFERENCE

1 - REFERENCE LETTERS
2 - REFERENCE LETTERS

(5) Loosen differential bearing cap bolts.
(6) Position Spreader W-129-B with Adapter Kit 6987B on differential locating holes (Fig. 41). Install hold-down clamps and tighten the turnbuckle finger-tight.

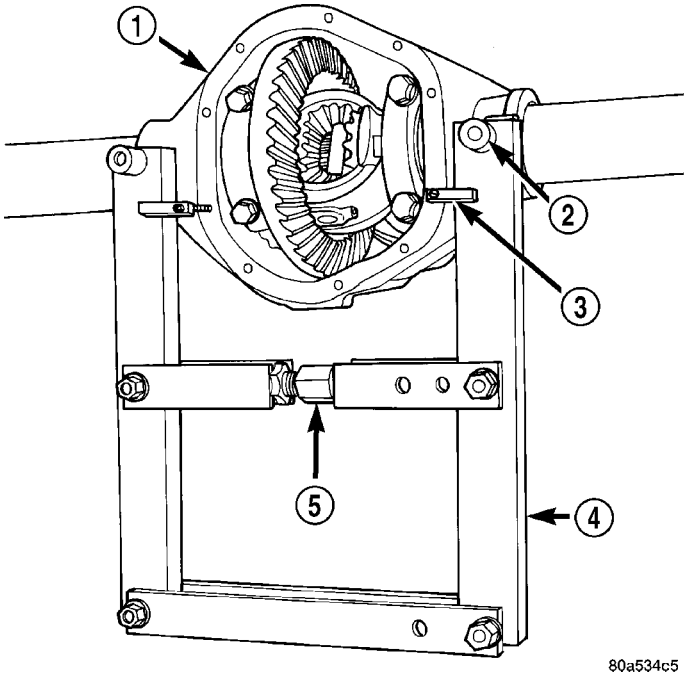


Fig. 41 SPREADER LOCATION

1 - DIFFERENTIAL HOUSING
2 - DOWEL
3 - SAFETY HOLD DOWN
4 - SPREADER
5 - TURNBUCKLE

(7) Install a Pilot Stud C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339