After changing the lubricant, drive the vehicle and make 10 to 12 slow, figure-eight turns. This maneuver will pump lubricant through the clutches. This will correct the condition in most instances. If chatter persists, clutch damage could have occurred.

DIFFERENTIAL TEST

The differential can be tested without removing the differential case by measuring rotating torque. Make sure brakes are not dragging during this measurement.

(1) Place blocks in front and rear of both front wheels.

(2) Raise one rear wheel until it is completely off the ground.

(3) Engine off, transmission in neutral, and parking brake off.

(4) Remove wheel and bolt Special Tool 6790 or equivalent tool to studs.

(5) Use torque wrench on special tool to rotate wheel and read rotating torque (Fig. 49).

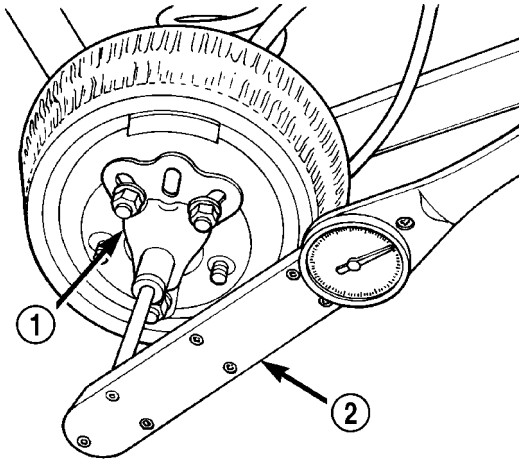

Fig. 49 ROTATING TORQUE TEST

1 - SPECIAL TOOL WITH BOLT IN CENTER HOLE
2 - TORQUE WRENCH

(6) If rotating torque is less than 41 N·m (30 ft. lbs.) or more than 271 N·m (200 ft. lbs.) on either wheel the unit should be serviced.

DISASSEMBLY

(1) Clamp Holding Fixture 6965 in vise and set differential case on fixture (Fig. 50).

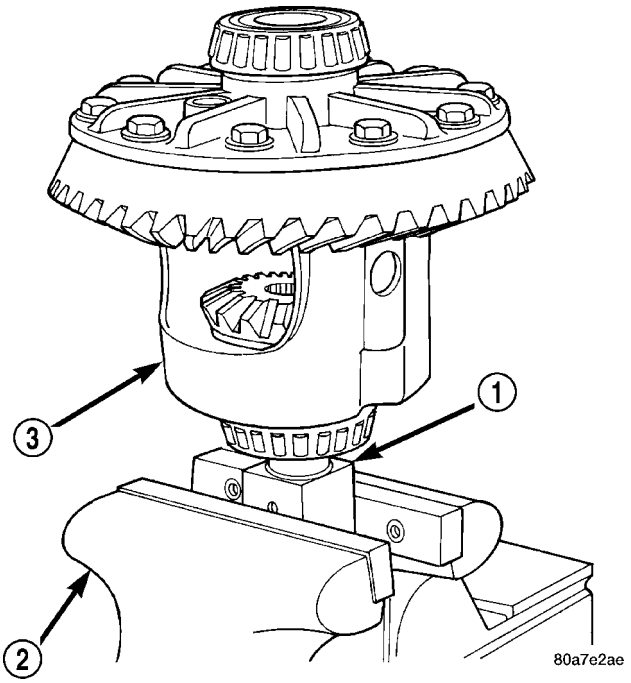

Fig. 50 DIFFERENTIAL CASE FIXTURE

1 - FIXTURE
2 - VISE
3 - DIFFERENTIAL

(2) Remove pinion gear mate shaft lock screw.

(3) Remove pinion gear mate shaft.

(4) Lubricate and install disc without threaded hole from Trac-Lok® Tool Kit 6960 into lower side gear (Fig. 51).