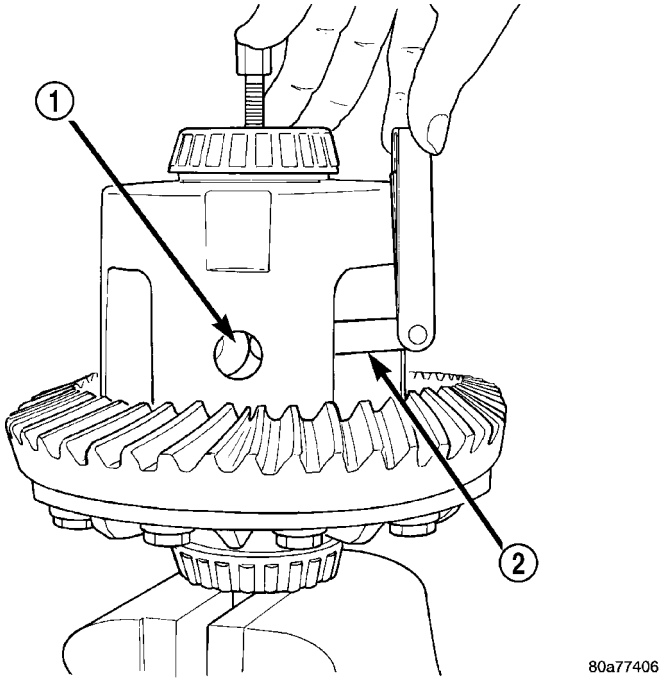

Fig. 54 PINION GEAR THRUST WASHER

1 - THRUST WASHER
2 - FEELER GAUGE

(9) Insert turning bar from tool kit into the pinion mate shaft hole in the case (Fig. 55).

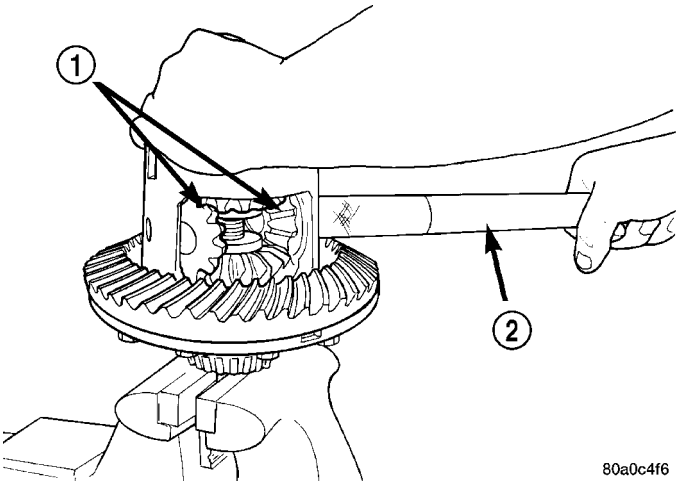

Fig. 55 TURNING BAR

1 - PINION GEARS
2 - TURNING BAR

(10) Loosen forcing screw in small increments until clutch pack tension is relieved and the differential case can be rotated with turning bar.

(11) Rotate differential case until pinion gears can be removed.

(12) Remove pinion gears from differential case.

(13) Remove forcing screw and discs.

(14) Remove top side gear, clutch pack retainers and clutch pack (Fig. 56).

NOTE: Keep plates in order during removal.

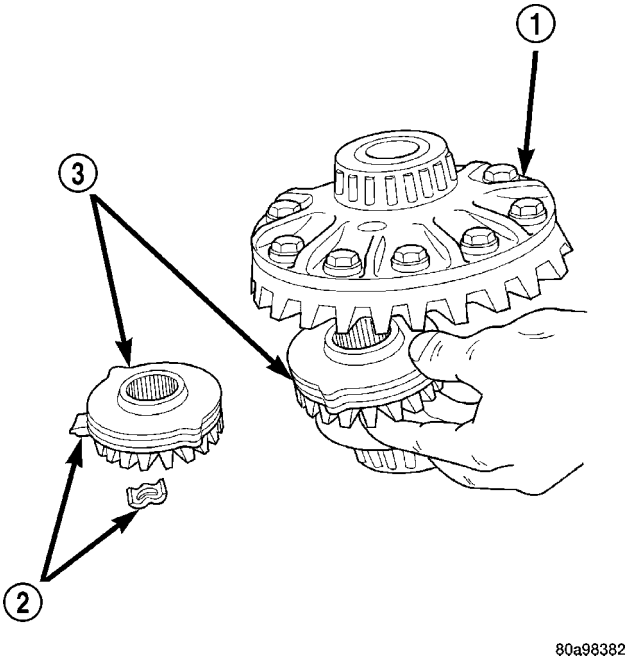

Fig. 56 SIDE GEAR & CLUTCH DISC

1 - DIFFERENTIAL CASE
2 - RETAINER
3 - SIDE GEAR AND CLUTCH DISC PACK

(15) Remove differential case from the fixture.

(16) Remove side gear, clutch pack retainer and clutch pack.

NOTE: Keep plates in order during removal.

ASSEMBLY

NOTE: New Plates and discs with fiber coating (no grooves or lines) must be presoaked in Friction Modifier before assembly. Soak plates and discs for a minimum of 20 minutes.

(1) Assemble clutch discs into packs and secure disc packs with retaining clips (Fig. 57).