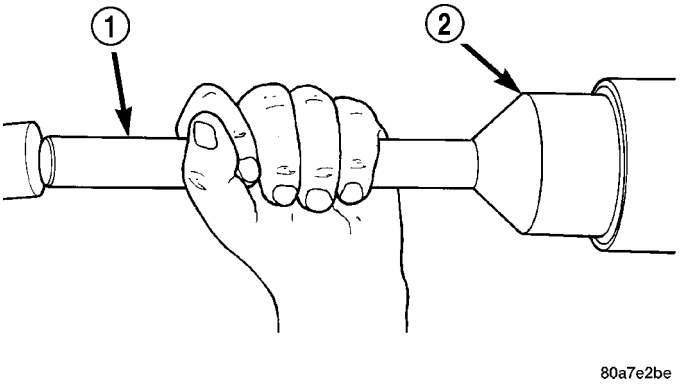

Fig. 71 PINION SEAL INSTALLER

1 - HANDLE
2 - INSTALLER

(6) Install depth shim on the pinion gear.

(7) Install rear bearing and shim on the pinion gear with Installer W-262 and a press (Fig. 72).

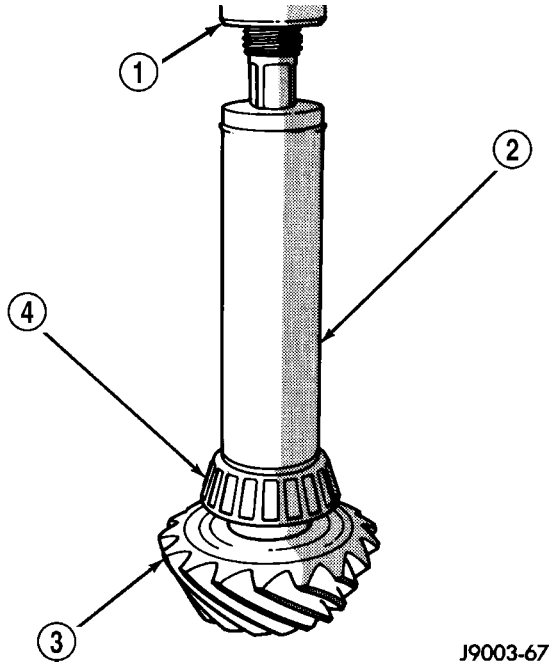

Fig. 72 REAR PINION BEARING

1 - PRESS
2 - INSTALLER
3 - DRIVE PINION GEAR
4 - REAR PINION BEARING

(8) Install a **new** collapsible preload spacer on pinion shaft and install pinion gear in the housing (Fig. 73).

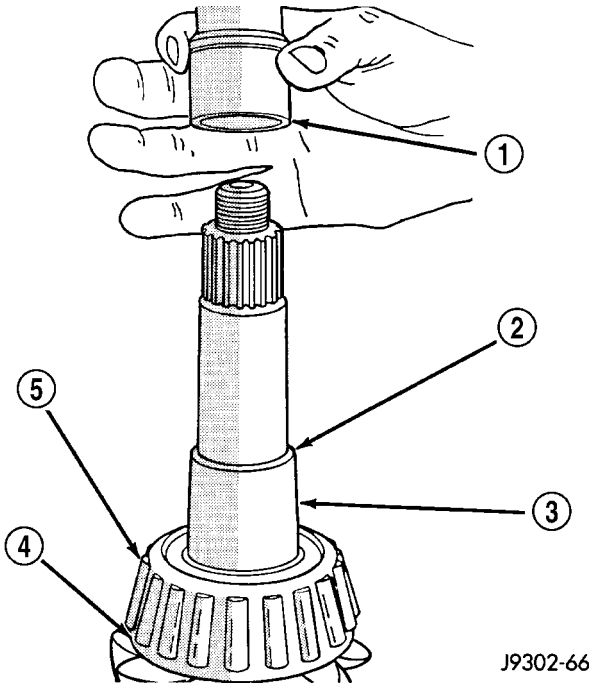

Fig. 73 COLLAPSIBLE SPACER

1 - COLLAPSIBLE SPACER
2 - SHOULDER
3 - PINION GEAR
4 - SHIM
5 - REAR BEARING

(9) Install yoke with Installer Screw 8112, Cup 8109 and Wrench 6958 (Fig. 74).

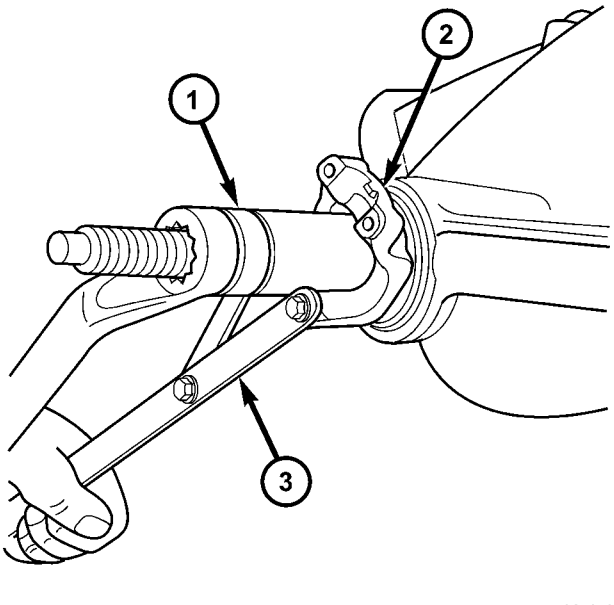

Fig. 74 PINION YOKE INSTALLER

1 - INSTALLER
2 - PINION YOKE
3 - SPANNER WRENCH