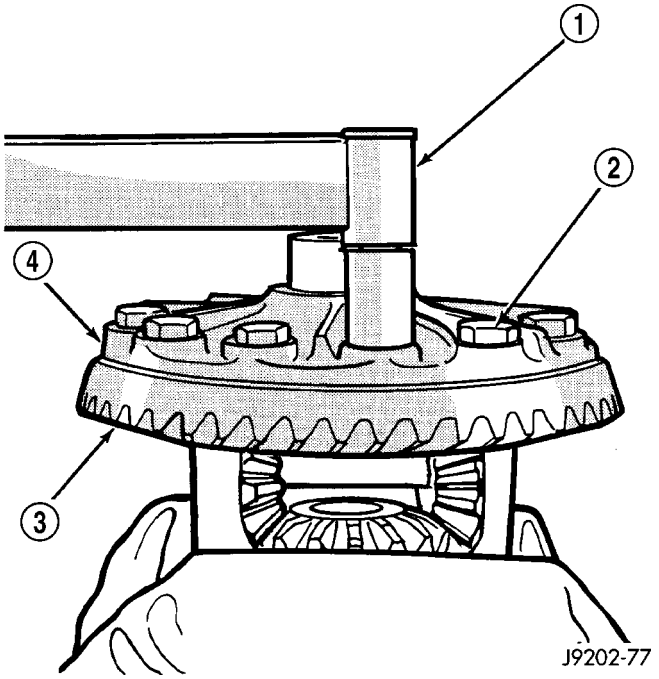

Fig. 77 RING GEAR BOLTS

1 - TORQUE WRENCH
2 - RING GEAR BOLT
3 - RING GEAR
4 - CASE

(17) Install differential in axle housing and verify gear mesh and contact pattern. Refer to Adjustments (Gear Contact Pattern) for procedure.