(4) Install dummy side bearings D-345 on differential case.

(5) Install differential case in axle housing (Fig. 11).

(6) Install the marked bearing caps in their correct positions. Install and snug the bolts (Fig. 12).

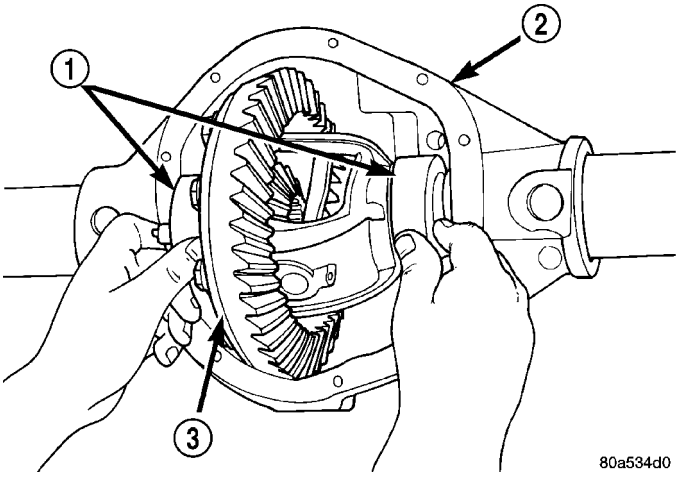

Fig. 11 DIFFERENTIAL DUMMY BEARINGS

1 - DUMMY BEARINGS
2 - DIFFERENTIAL HOUSING
3 - DIFFERENTIAL CASE

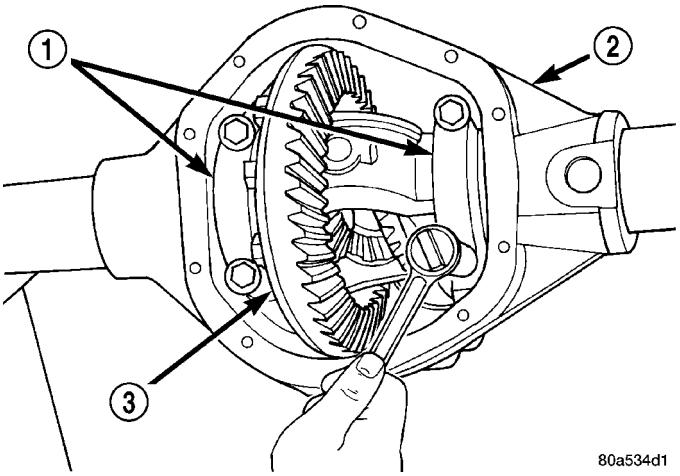

Fig. 12 BEARING CAP BOLTS

1 - BEARING CAP
2 - DIFFERENTIAL HOUSING
3 - DIFFERENTIAL CASE

(7) Using a dead-blow hammer seat the differential dummy bearings to each side of the housing (Fig. 13) and (Fig. 14).

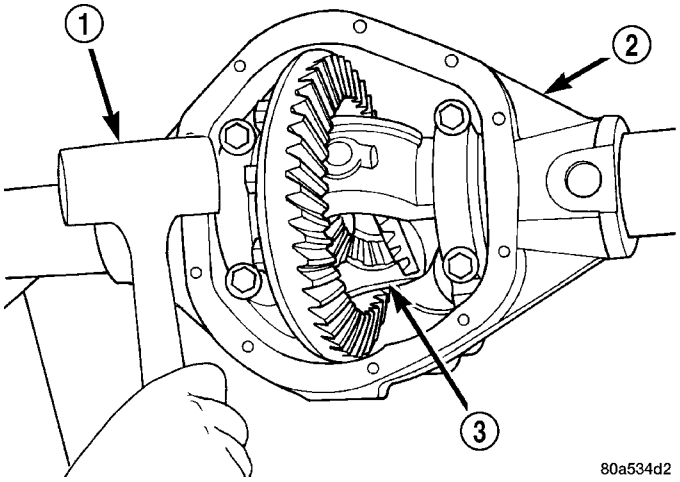

Fig. 13 SEAT DUMMY BEARING PINION SIDE

1 - MALLET
2 - DIFFERENTIAL HOUSING
3 - DIFFERENTIAL CASE

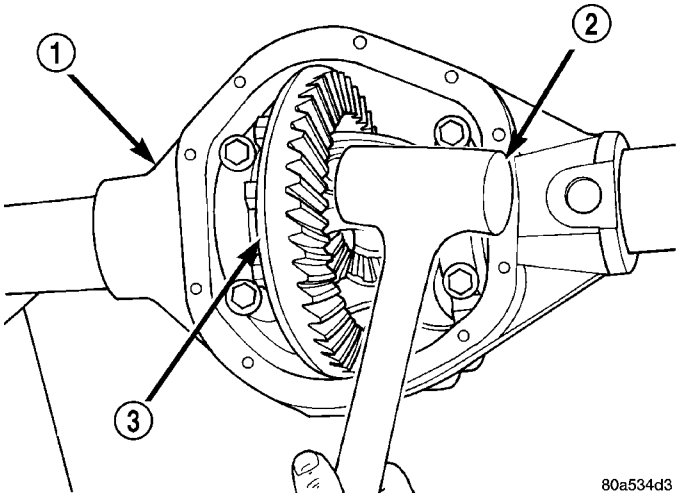

Fig. 14 SEAT DUMMY BEARING RING GEAR SIDE

1 - DIFFERENTIAL HOUSING
2 - MALLET
3 - DIFFERENTIAL CASE

(8) Thread Pilot Stud C-3288-B into rear cover bolt hole below ring gear (Fig. 15).

(9) Attach a dial indicator C-3339 to Pilot Stud C-3288-B. Position the dial indicator plunger on a flat surface between the ring gear bolt heads (Fig. 15).