SHAFTS - AXLE

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove brake caliper and rotor.
(3) Remove axle retainer plate nuts through access hole in axle flange (Fig. 25).

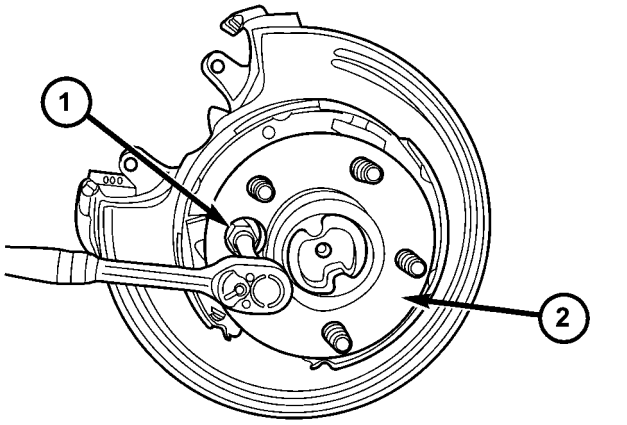

Fig. 25 AXLE SHAFT BOLTS

1 - ACCESS HOLE
2 - AXLE FLANGE

(4) Pull axle shaft from the axle. If axle will not come out use Slide Hammer 7420 and Adapter 6790.

INSTALLATION

WARNING: NEVER REUSE AXLE RETAINING BOLTS AND NUTS. USED TORQUE NUT CAN LOOSEN. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY.

(1) Install axle into axle tube with the flat area of the retainer plate upward (Fig. 26).

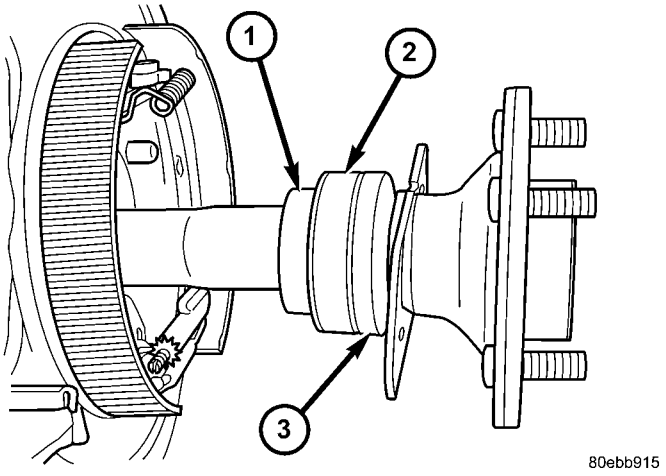

Fig. 26 AXLE SHAFT

1 - RETAINER RING
2 - AXLE BEARING
3 - AXLE SEAL

(2) Install **new** axle retaining bolts.
(3) Install **new** retaining nuts and tighten to 61 N·m (45 ft. lbs.).
(4) Install brake rotor and caliper.

BEARINGS - AXLE

REMOVAL

(1) Remove axle shaft from vehicle.

NOTE: It is normal that the axle bearing race is loose in the axle tube.

(2) Drill a shallow hole into soft steel axle bearing retaining ring with a 3/8 in. drill bit (Fig. 27). Use a drill depth stop to avoid marking the axle.