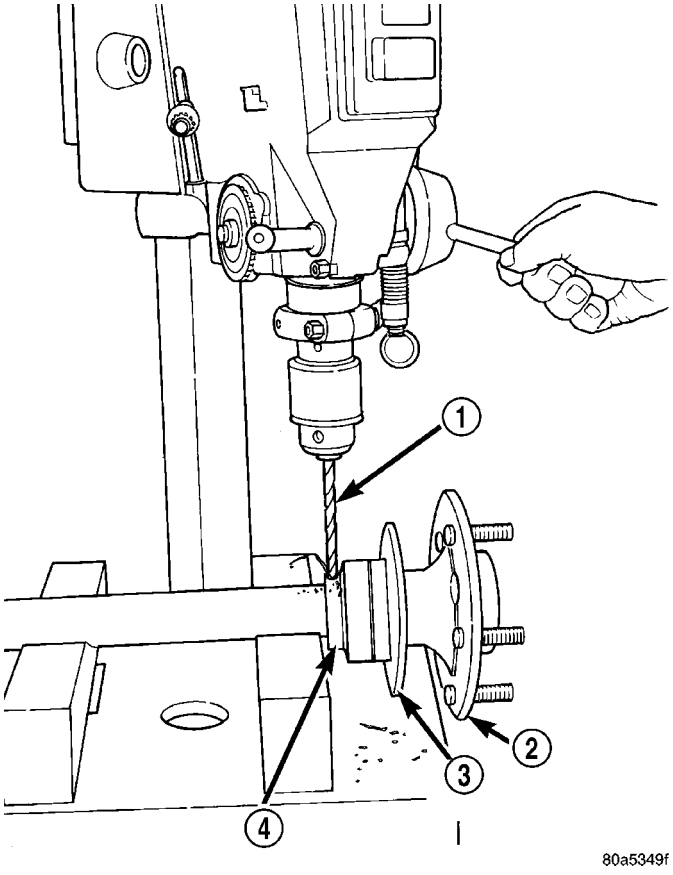

Fig. 27 DRILL RETAINING RING

1 - 3/8 in. DIA. DRILL BIT
2 - AXLE
3 - RETAINING PLATE
4 - SOFT METAL RETAINING RING

(3) With a cold chisel cut the retaining ring across drilled hole. (Fig. 28)

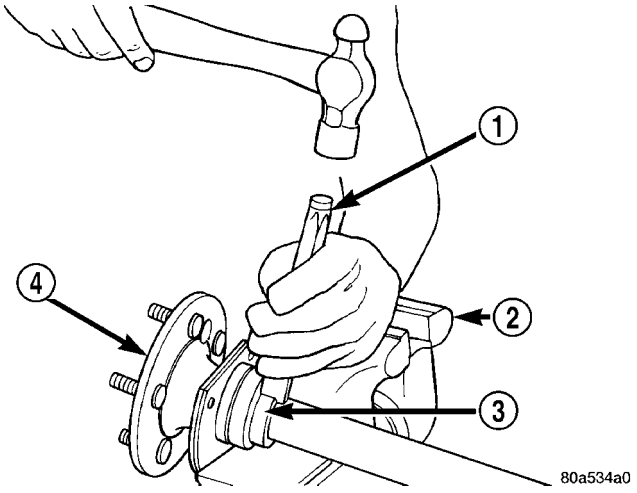

Fig. 28 CUT RETAINING RING

1 - COLD CHISEL
2 - VISE
3 - RETAINING RING
4 - AXLE

(4) Slide retaining ring from axle shaft.

(5) Remove axle bearing from the shaft with, a press and Splitter 1130 placed between the seal and bearing (Fig. 29).

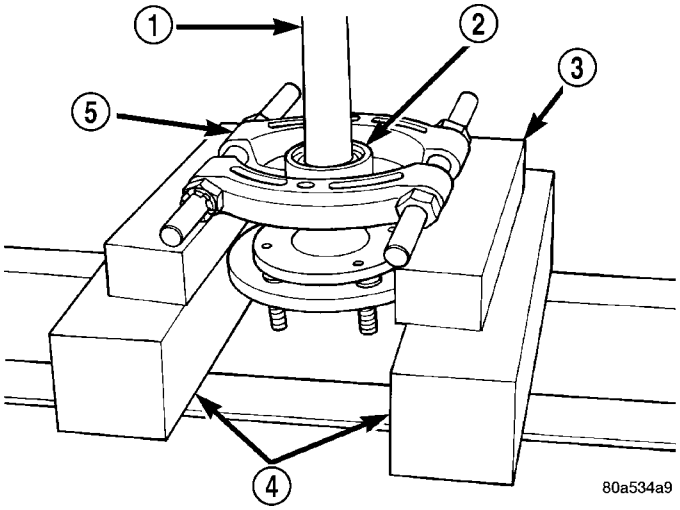

Fig. 29 AXLE BEARING AND SEAL

1 - AXLE
2 - UNIT BEARING
3 - PRESS PLATES
4 - BLOCKS
5 - SPLITTER

(6) Remove seal from axle.
(7) Remove retaining plate from axle shaft.

INSTALLATION

(1) Verify axle shaft retaining plate is flat with a straight edge.

NOTE: Replace the retaining plate if warped.

(2) Install retaining plate on axle (Fig. 30).
(3) Apply a coat of multi-purpose grease on sealing surface of axle seal.
(4) Install seal on axle with cavity away from retaining plate (Fig. 30).