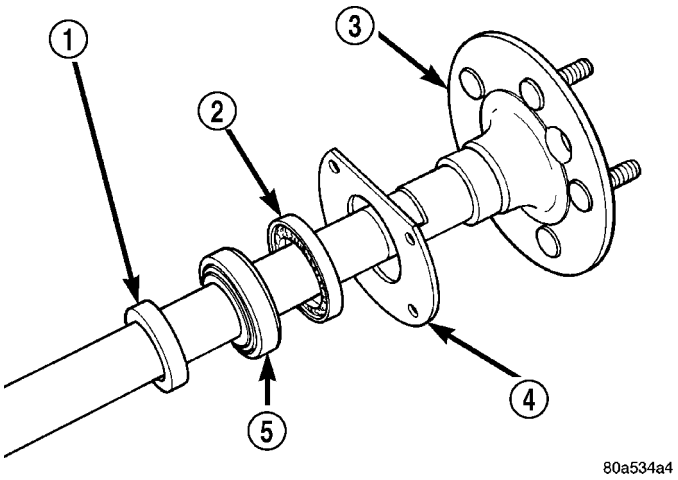

Fig. 30 AXLE BEARING AND SEAL COMPONENTS

1 - RETAINING RING
2 - SEAL
3 - AXLE
4 - RETAINING PLATE
5 - BEARING

(5) Lubricate bearing with Mopar Wheel Bearing Grease, or equivalent. Wipe excess grease from outside of bearing.

(6) Install bearing on the axle shaft with Installer 7913 and a press (Fig. 31).

NOTE: Install bearing with groove on the outer surface toward the seal.

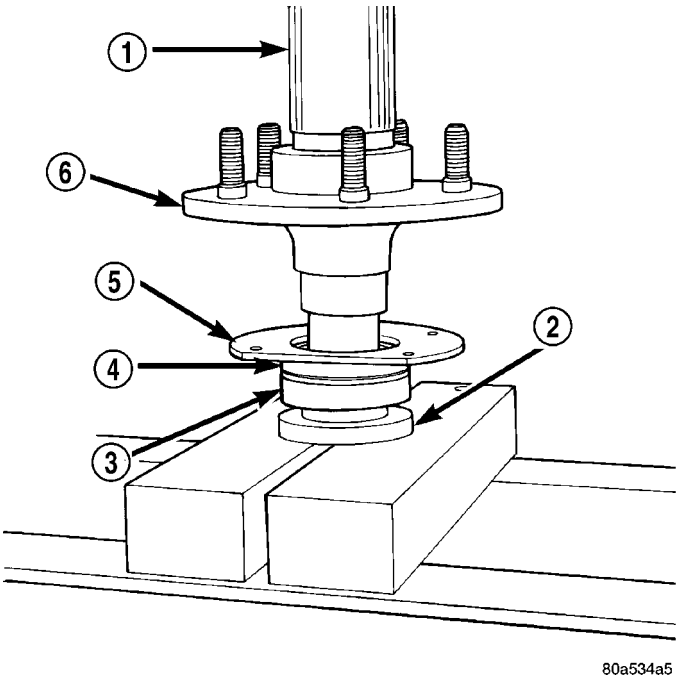

Fig. 31 PRESS BEARING ON AXLE

1 - PRESS RAM
2 - INSTALLER
3 - UNIT BEARING
4 - SEAL
5 - RETAINING PLATE
6 - AXLE

(7) Press soft metal retaining ring onto axle shaft with Installer 7913 and a press (Fig. 32).

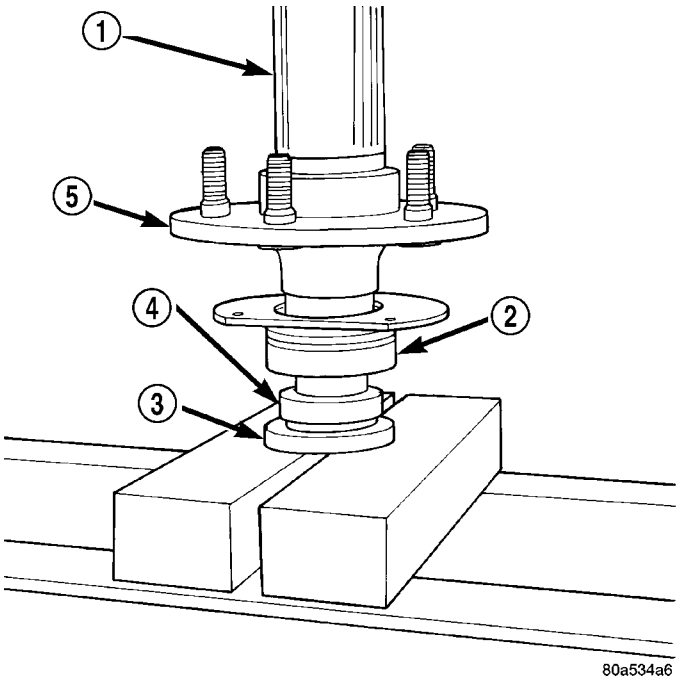

Fig. 32 PRESS RETAINING RING ON AXLE

1 - PRESS RAM
2 - UNIT BEARING
3 - INSTALLER
4 - METAL RETAINING RING
5 - AXLE

(8) Install axle in vehicle.

SEAL - PINION

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.

(2) Remove brake drums/calipers.

(3) Remove propeller shaft.

(4) Rotate pinion gear three or four times and verify that pinion rotates smoothly.

(5) Using Spanner Wrench 6958 to hold the pinion yoke, remove the pinion nut and washer.

(6) Remove pinion yoke with Remover C-452 and Flange Wrench C-3281 (Fig. 33).