(5) Install propeller shaft.
(6) Install brake drums/calipers.

COVER - DIFFERENTIAL

REMOVAL

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove drain plug.
(3) If equipped with Tru-Lok, disconnect indicator switch harness and remove connector from differential cover (Fig. 37).

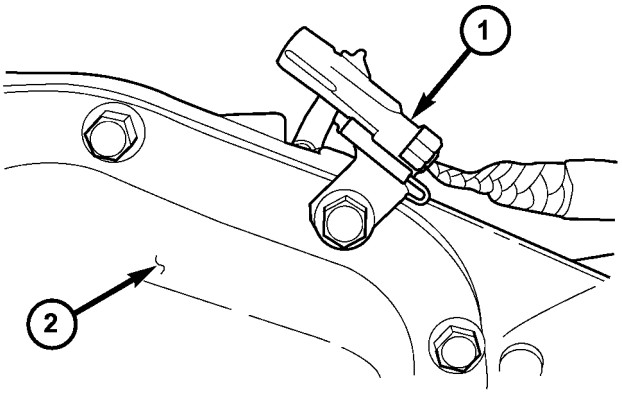

80ebbe24

Fig. 37 INDICATOR SWITCH CONNECTOR

1 - CONNECTOR
2 - DIFFERENTIAL COVER

(4) Remove cover bolts.
(5) Remove cover and drain lubricant.

INSTALLATION

(1) Apply a 6.35mm (1/4 in.) bead of Mopar Silicone Rubber Sealant or equivalent to the housing cover (Fig. 38).

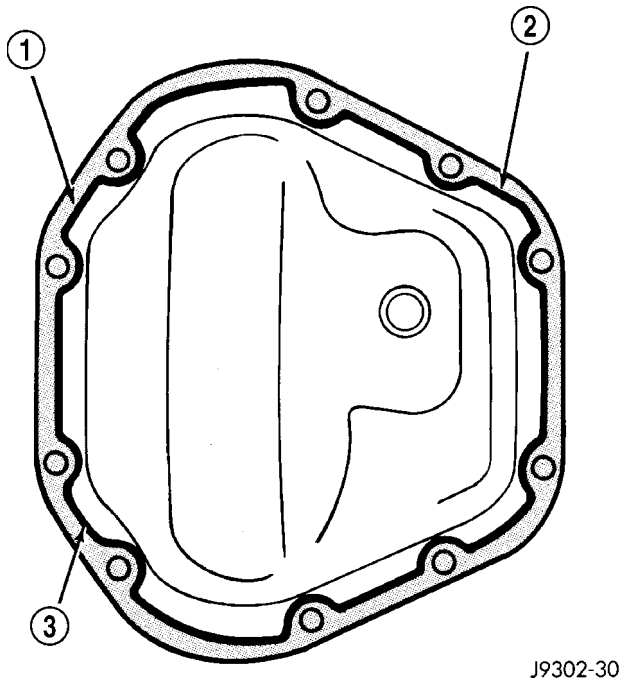

J9302-30

Fig. 38 HOUSING COVER - TYPICAL

1 - SEALANT SURFACE
2 - SEALANT
3 - SEALANT THICKESS

CAUTION: If housing cover is not installed within 3 to 5 minutes, the cover must be cleaned and new RTV applied. Failure to heed caution may result in damage.

(2) Install cover, identification tag and indicator switch connector if equipped with Tru-Lok (Fig. 39). Tighten cover bolts in a criss-cross pattern to 41 N·m (30 ft. lbs.).

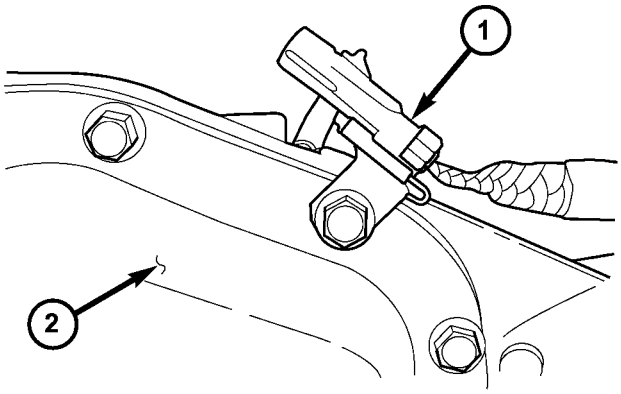

80ebbe24

Fig. 39 INDICATOR SWITCH CONNECTOR

1 - CONNECTOR
2 - DIFFERENTIAL COVER

(3) Connect indicator switch harness if equipped with Tru-Lok.
(4) Fill differential to specifications.