(5) Install fill plug and tighten to 34 N·m (25 ft. lbs.).

DIFFERENTIAL

REMOVAL

(1) Remove differential housing cover and drain fluid.

(2) Remove axle shafts.

(3) Note the reference letters stamped on the bearing caps and housing machined sealing surface (Fig. 40).

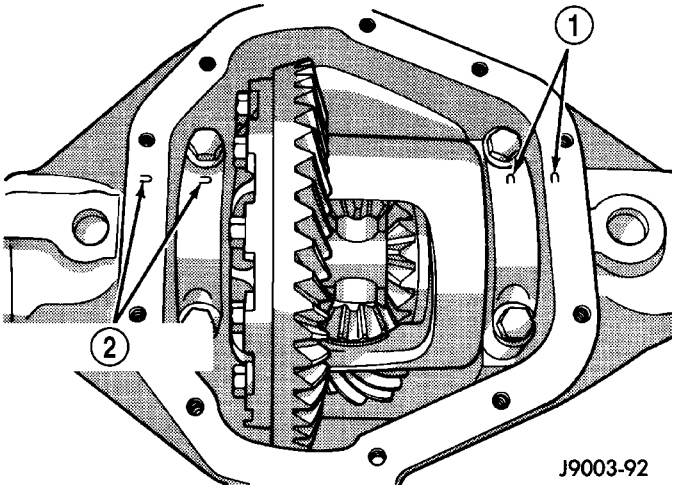


Fig. 40 BEARING CAP REFERENCE

1 - REFERENCE LETTERS
2 - REFERENCE LETTERS

(4) Loosen the differential bearing cap bolts.

(5) Position Spreader W-129-B with Adapter Kit 6987B on differential locating holes (Fig. 41). Install hold-down clamps and tighten the turnbuckle finger-tight.

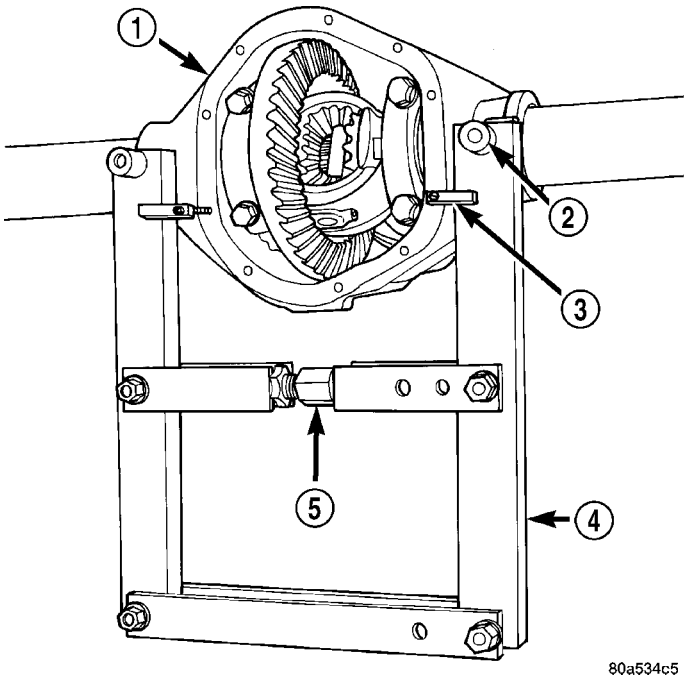


Fig. 41 SPREADER LOCATION

1 - DIFFERENTIAL HOUSING
2 - DOWEL
3 - SAFETY HOLD DOWN
4 - SPREADER
5 - TURNBUCKLE

(6) Install a Pilot Stud C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339 to pilot stud. Load indicator plunger against the opposite side of the housing (Fig. 42) and zero the indicator.

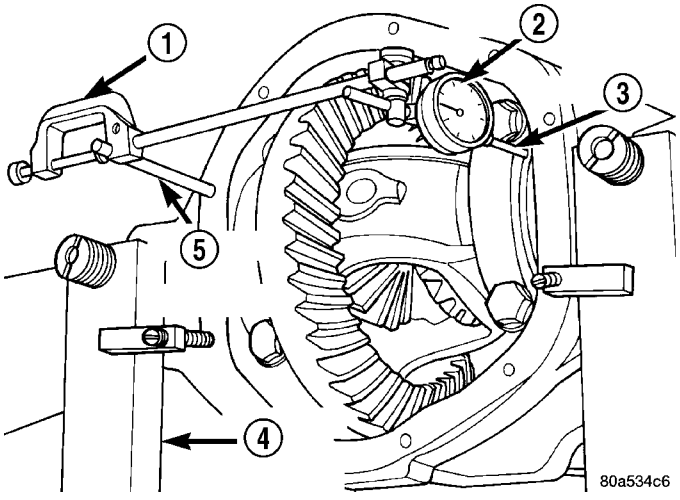


Fig. 42 DIAL INDICATOR LOCATION

1 - CLAMP
2 - DIAL INDICATOR
3 - LEVER ADAPTER
4 - SPREADER
5 - PILOT STUD

(7) Spread housing while measuring the distance with the dial indicator (Fig. 43).