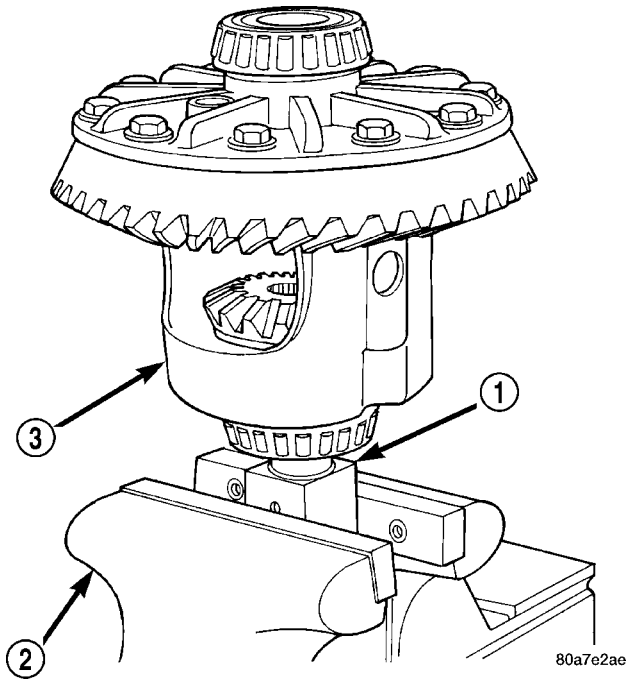

Fig. 50 DIFFERENTIAL CASE FIXTURE

1 - HOLDING FIXTURE
2 - VISE
3 - DIFFERENTIAL

NOTE: The Trac-lok® differential can be serviced with the ring gear installed unless the gear hangs over the pinion shaft, then it must be removed.

(2) Remove pinion gear mate shaft roll pin with a hammer and punch.

(3) Remove pinion gear mate shaft with a drift and hammer.

(4) Lubricate and install disc without threaded hole from Trac-lok® Tool C-4487 into lower side gear (Fig. 51).

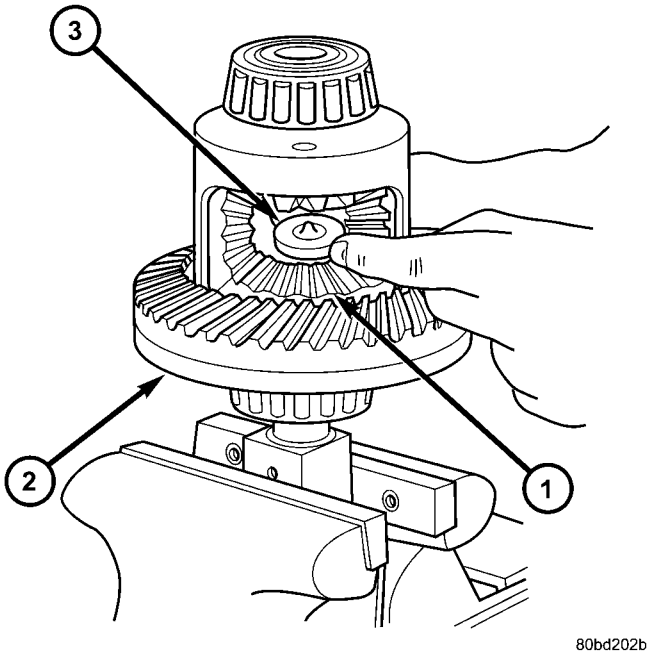

Fig. 51 TRAC-LOK DISC

1 - LOWER SIDE GEAR
2 - DIFFERENTIAL CASE
3 - DISC

(5) Lubricate and install disc with threaded hole from Trac-lok® Tool C-4487 into upper side gear. Thread forcing screw from tool into threaded disc until it becomes centered in lower disc.

(6) Position a small screw driver in slot of the threaded disc (Fig. 52) to prevent adapter from turning.