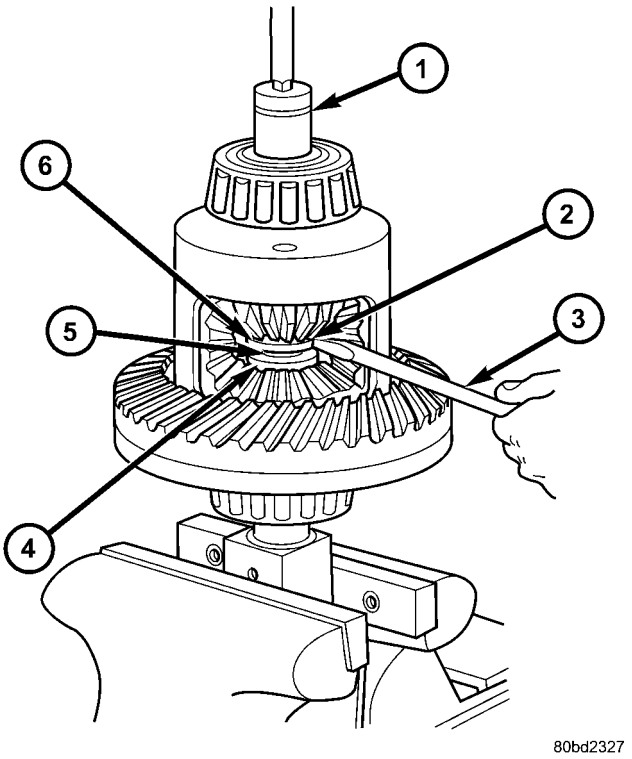

Fig. 52 TRAC-LOK TOOLS ASSEMBLY

1 - SOCKET
2 - SLOT IN DISC
3 - SCREWDRIVER
4 - STEP PLATE
5 - THREADED ROD
6 - DISC

(7) Tighten forcing screw to 122 N·m (90 ft. lbs.) maximum to compress Belleville springs in clutch packs (Fig. 53).

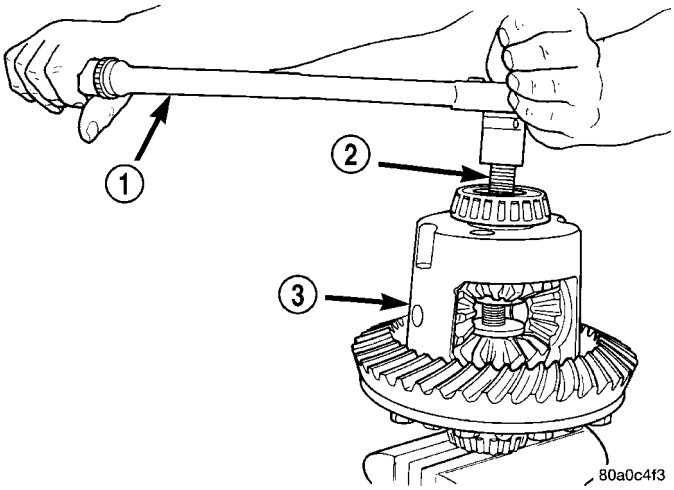

Fig. 53 COMPRESS BELLEVILLE SPRING

1 - TORQUE WRENCH
2 - FORCING SCREW
3 - DIFFERENTIAL CASE

(8) With a feeler gauge remove thrust washers from behind the pinion gears (Fig. 54).

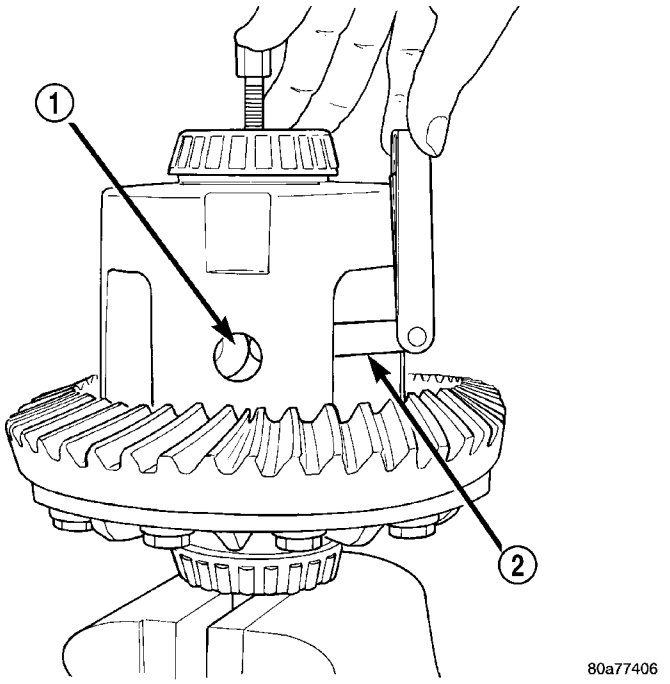

Fig. 54 PINION GEAR THRUST WASHER

1 - THRUST WASHER
2 - FEELER GAUGE

(9) Insert turning bar from tool into the pinion mate shaft hole in the case (Fig. 55).

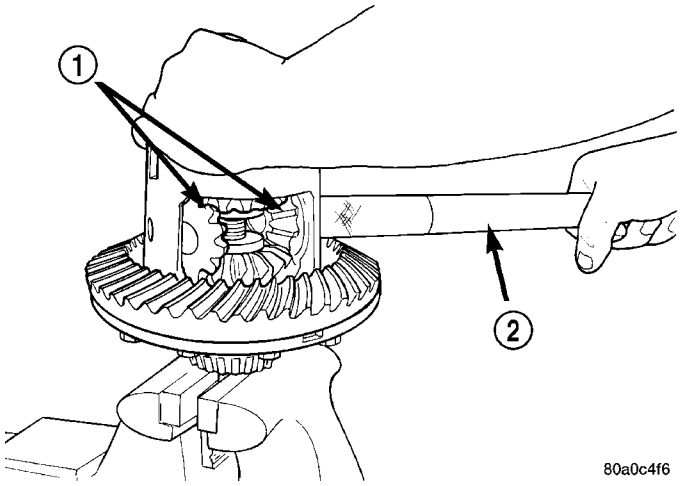

Fig. 55 PINION GEARS

1 - PINION GEARS
2 - TURNING BAR

(10) Loosen forcing screw in small increments until clutch pack tension is relieved and the differential case can be turned using turning bar.

(11) Rotate differential case until the pinion gears can be removed.

(12) Remove pinion gears from differential case.

(13) Remove Forcing Screw, Step Plate and Threaded Adapter.

(14) Remove top side gear, clutch pack retainer and clutch pack. Keep plates in order during removal (Fig. 56).