(2) Place transfer case in 4WD Low and automantic transmission in Park (1st gear if manual transmission).

(3) Raise both wheels of the axle to be tested off the ground.

(4) Turn ignition to the ON position and dash switch to the ON position.

(5) Try to rotate one tire by hand. You should not be able to rotate the tire.

NOTE: If wheel does rotated verify locker pump operation. If the pump is fuctional the differential must be repaired/replaced.

TRU - LOK INDICATOR SWITCH

(1) Turn ignition switch off.

(2) Disconnect indicator switch harness (Fig. 60) from the differential housing.

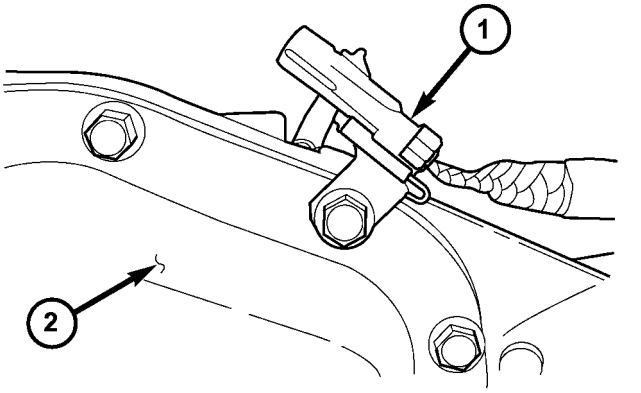

80ebbe24

Fig. 60 INDICATOR SWITCH CONNECTOR

1 - CONNECTOR
2 - DIFFERENTIAL COVER

(3) Measure electrical continuity across the switch terminals. Circuit should be closed (zero resistance).

NOTE: If circuit is not closed replace indicator switch.

TRU - LOK PUMPS

(1) Connect a pressure gauge to the rear pump.

(2) Place transfer case in 4WD Low and automatic transmission in Park (1st gear if manual transmission).

(3) Turn ignition to the ON position and push the dash switch to activate the rear pump.

NOTE: If pump is not running, verify pump has (Fig. 61) 12 volts and ground.

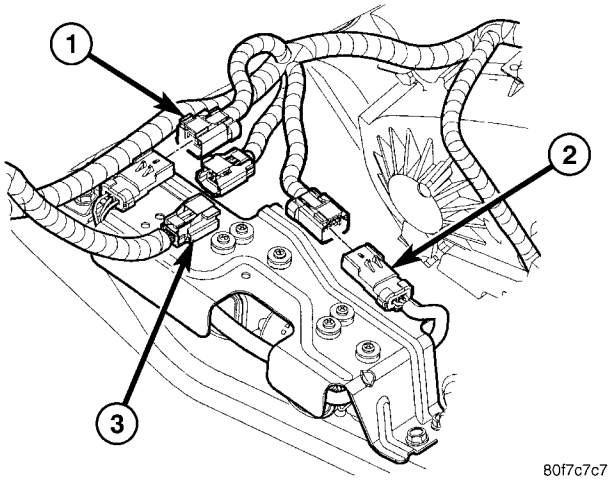

80f7c7c7

Fig. 61 PUMP CONNECTORS

1 - REAR PUMP CONNECTOR
2 - FRONT PUMP CONNECTOR
3 - AXLE HARNESS

(4) With the pump running the pressure gauge should show 5 psi..

NOTE: If pump does not produce 5 psi. replace the pump.

REMOVAL

(1) Remove drain plug from the differential housing.

(2) Disconnect indicator switch harness and remove connector from differential cover (Fig. 62).

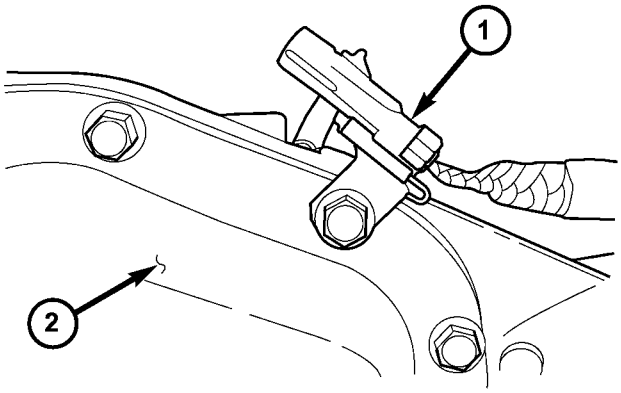

80ebbe24

Fig. 62 INDICATOR SWITCH CONNECTOR

1 - CONNECTOR
2 - DIFFERENTIAL COVER

(3) Remove differential housing cover.

(4) Remove axle shafts.

(5) Remove pressure hose from actuator assembly (Fig. 63).