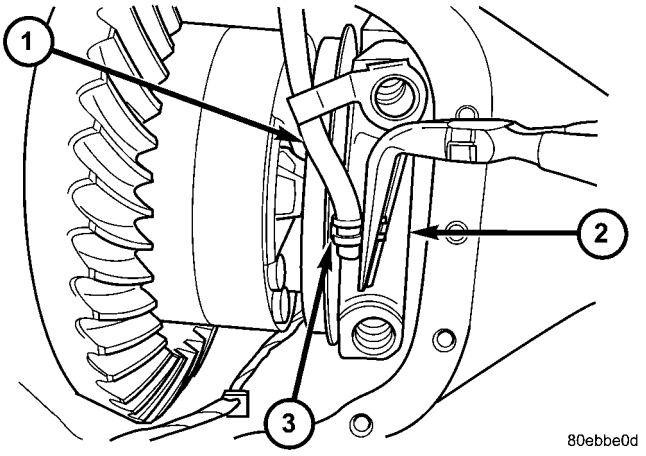

Fig. 63 PRESSURE HOSE

1 - PRESSURE HOSE
2 - BEARING CAP
3 - PRESSURE HOSE CLAMP

(6) Note the reference letters stamped on the bearing caps and housing machined sealing surface (Fig. 64).

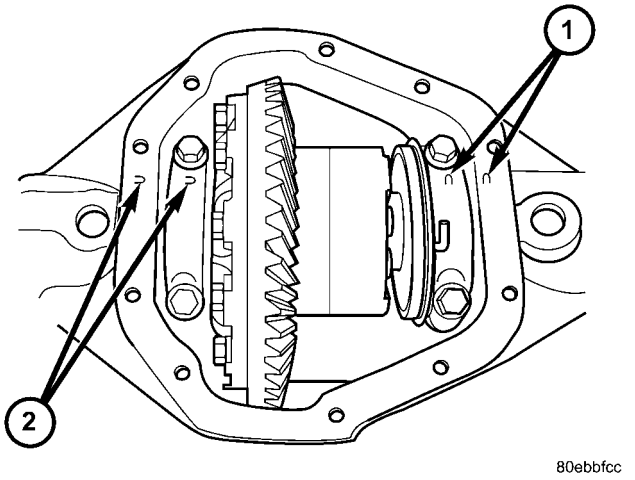

Fig. 64 LOCATION MARKS

1 - REFERENCE MARKS
2 - REFERENCE MARKS

(7) Loosen differential bearing cap bolts.

(8) Position Spreader W-129-B with Adapter Kit 6987B on differential locating holes (Fig. 65). Install hold-down clamps and tighten the turnbuckle finger-tight.

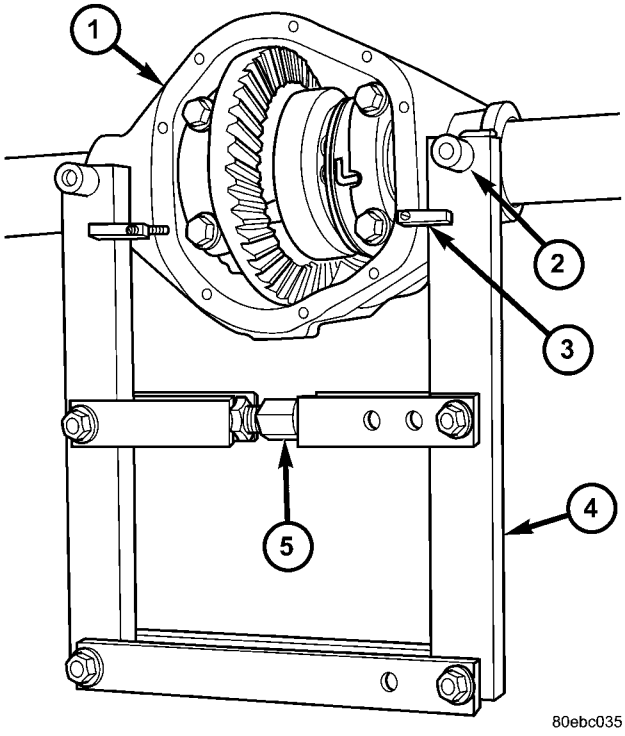

Fig. 65 SPREADER LOCATION

1 - DIFFERENTIAL CASE
2 - ADAPTER
3 - HOLD DOWN
4 - SPREADER
5 - TURNBUCKLE

(9) Install a Pilot Stud C-3288-B at the left side of the differential housing. Attach Dial Indicator C-3339 to pilot stud (Fig. 66). Load indicator plunger against the opposite side of the housing and zero the indicator.

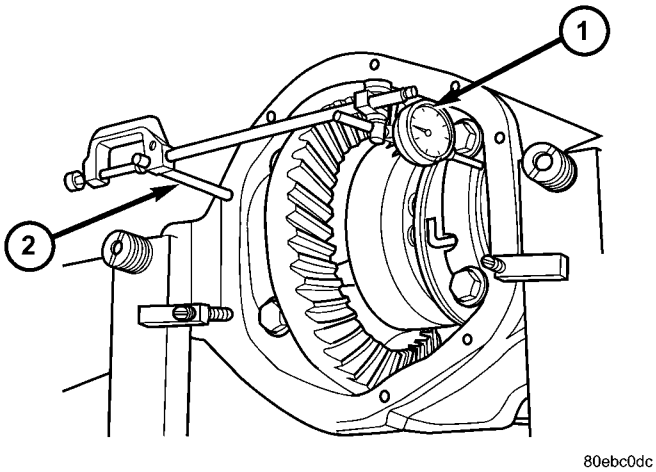

Fig. 66 DIAL INDICATOR LOCATION

1 - DIAL INDICATOR
2 - PILOT STUD

CAUTION: Never spread the housing over 0.38 mm (0.015 in). Failure to heed caution may result in damage.