(10) Spread housing while measuring the distance with the dial indicator (Fig. 67).

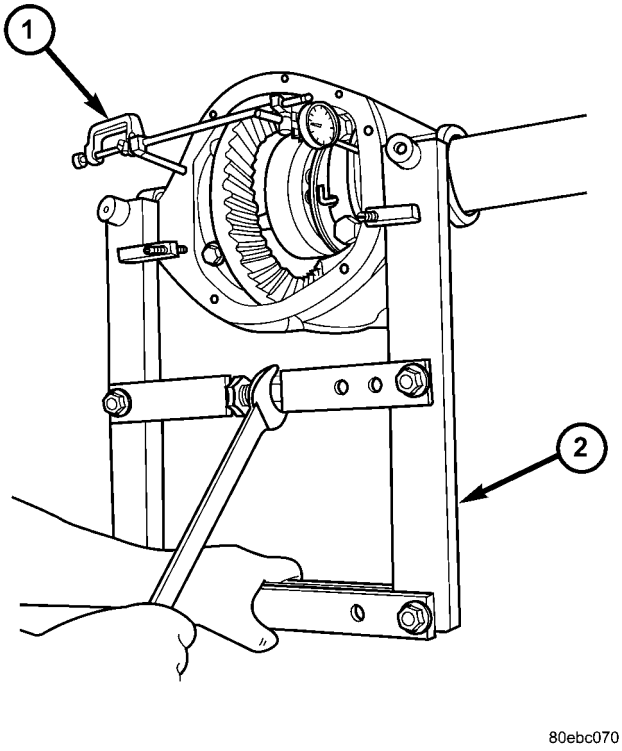

Fig. 67 SPREAD DIFFERENTIAL CASE

1 - DIAL INDICATOR
2 - SPREADER

(11) Remove dial indicator.

(12) Remove differential bearing cap bolts and ring gear side bearing cap.

(13) Remove differential from housing with pinion gear side bearing cap (Fig. 68) and tag differential bearing cups and preload shims to indicate location.

CAUTION: Do not bend actuator mounting tabs, during differential removal. Failure to heed caution may result in damage.

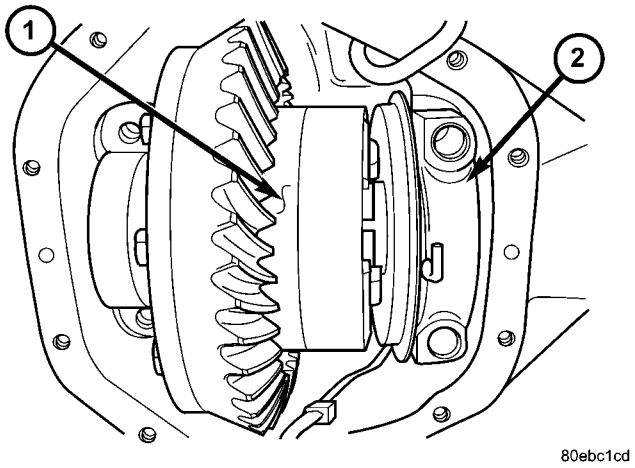

Fig. 68 DIFFERENTIAL

1 - DIFFERENTIAL
2 - BEARING CAP

(14) Remove spreader from housing.

(15) Remove indicator switch (Fig. 69) from differential housing.

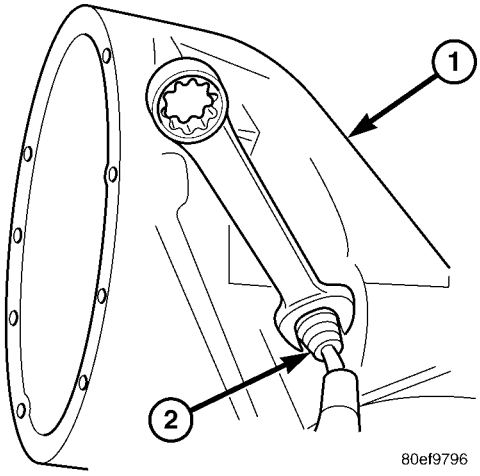

Fig. 69 INDICATOR SWITCH

1 - DIFFERENTIAL CASE
2 - SWITCH

(16) Clean the housing cavity with flushing oil, light engine oil or lint free cloth.

NOTE: Do not use water, steam, kerosene or gasoline for cleaning.

DISASSEMBLY

(1) Install Plug C-293-3 into the differential axle shaft hole.

(2) Remove differential case bearings with Puller 6444, Puller Rods 6444-4 and Puller Flange 6444-1. Position puller (Fig. 70) on the differential.