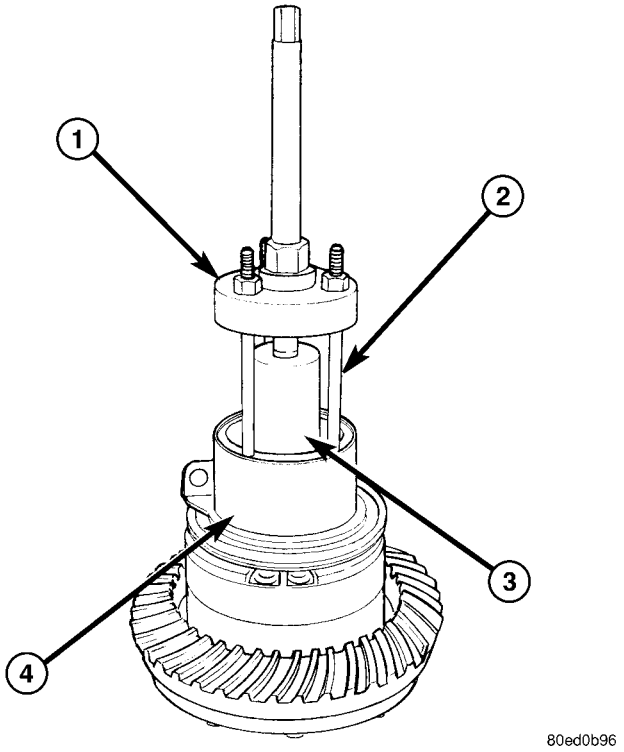


Fig. 72 PULLER AND COLLAR

1 - PULLER
2 - ROD
3 - PLUG
4 - COLLAR

(5) Tighten the puller nut and remove differential case bearing.

(6) Remove locking actuator (Fig. 73).

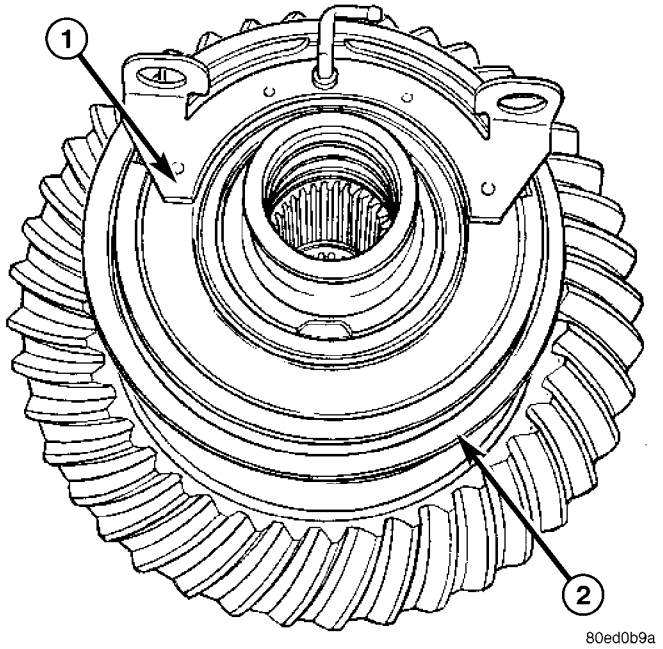


Fig. 73 ACTUATOR

1 - ACTUATOR
2 - PRESSURE PLATE

ASSEMBLY

(1) Verify pressure plate tabs are seated (Fig. 74) in the dog clutch slots.

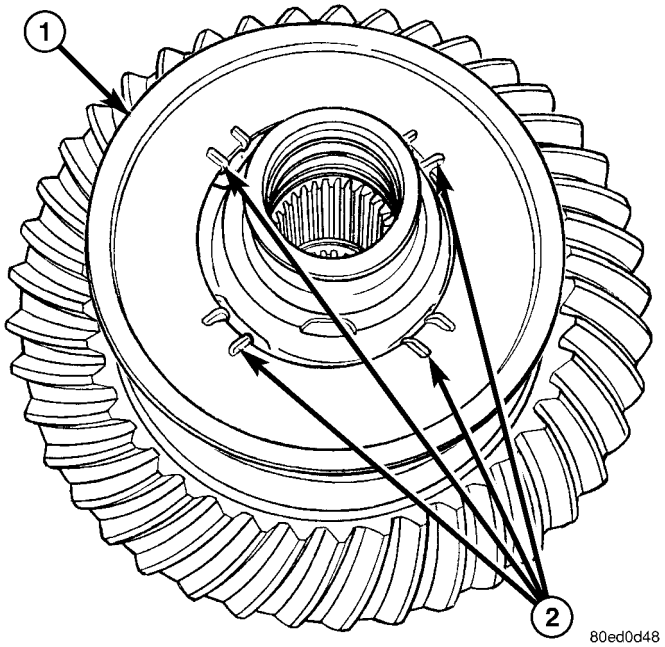


Fig. 74 PRESSURE PLATE

1 - PLATE
2 - PLATE TABS

(2) Place actuator on the pressure plate and case bearing on the case (Fig. 75).

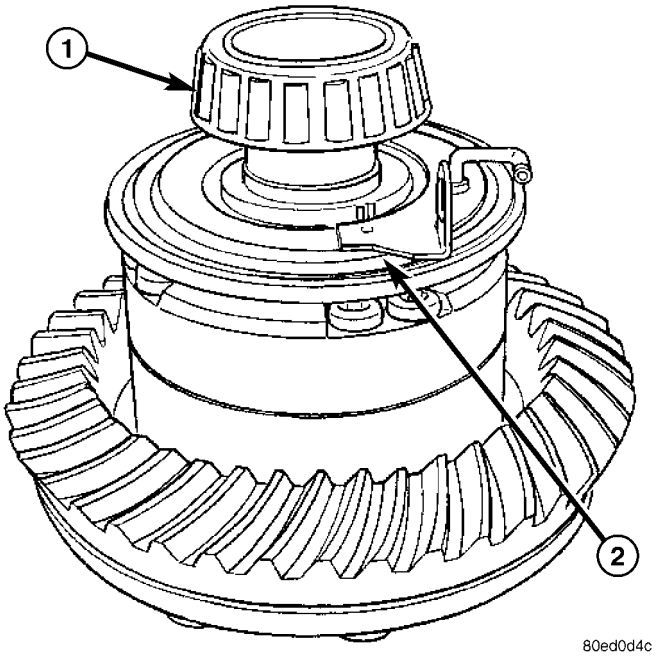


Fig. 75 ACTUATOR AND CASE BEARING

1 - CASE BEARING
2 - ACTUATOR