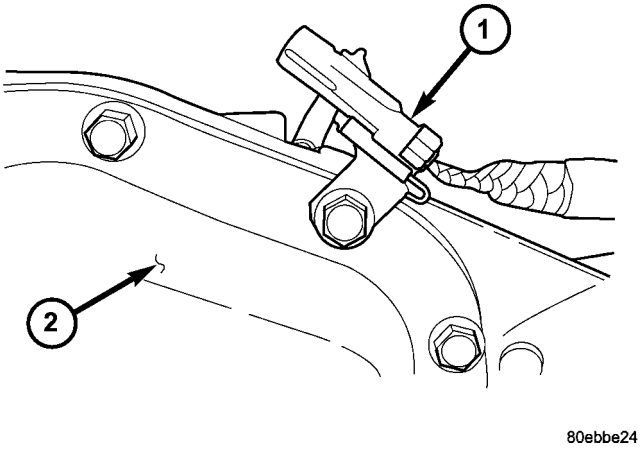

Fig. 78 INDICATOR SWITCH CONNECTOR

1 - CONNECTOR
2 - DIFFERENTIAL COVER

DIFFERENTIAL PUMP - TRU - LOK

REMOVAL

(1) Disconnect pumps and axle harness connectors (Fig. 79).

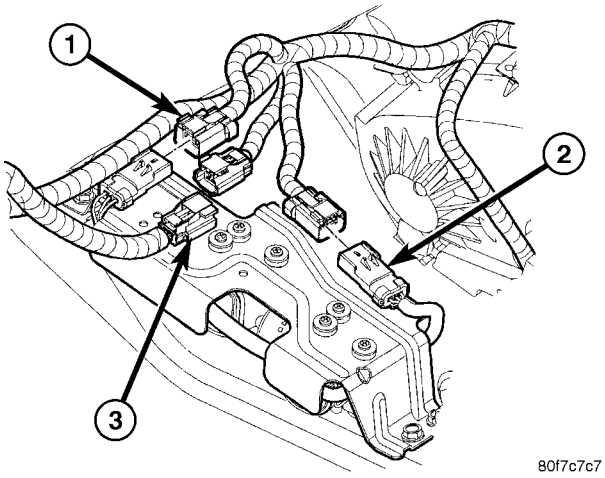

Fig. 79 PUMP CONNECTORS

1 - REAR PUMP CONNECTOR
2 - FRONT PUMP CONNECTOR
3 - AXLE HARNESS

(2) Remove pressure hoses from the front and rear pumps.

(3) Remove pump mounting bracket bolts (Fig. 80).

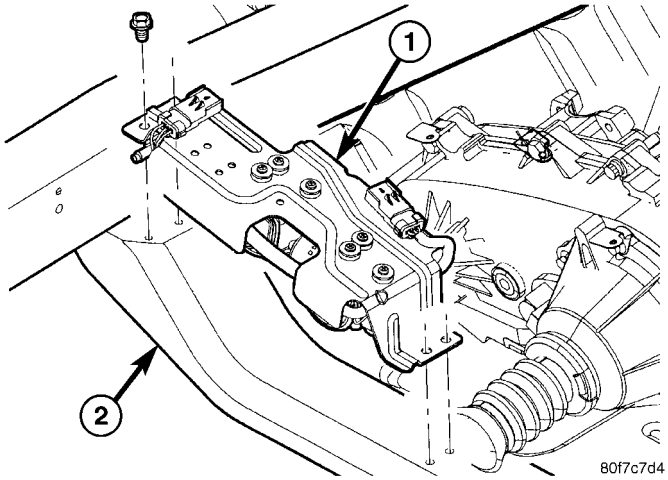

Fig. 80 PUMP BRACKET

1 - PUMP BRACKET
2 - CROSSMEMBER/SKID PLATE

(4) Remove pumps and bracket assembly from the vehicle.

(5) Remove pump connectors from the mounting bracket.

(6) Remove pump mounting screws (Fig. 81) from the bracket and remove pump/pumps.

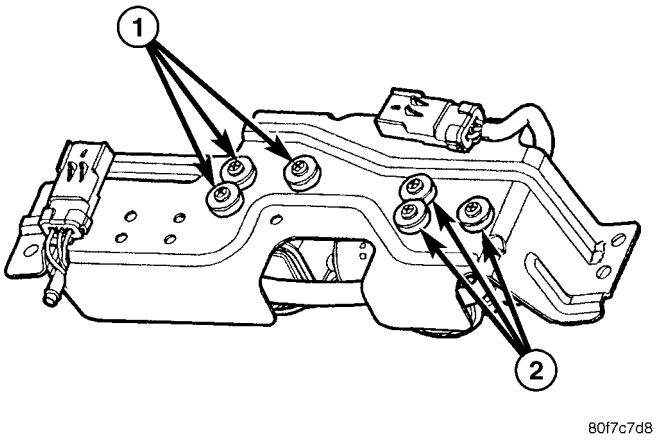

Fig. 81 PUMP SCREWS

1 - REAR PUMP SCREWS
2 - FRONT PUMP SCREWS

INSTALLATION

(1) Align pump with screw holes in pump bracket.

(2) Install and tighten pump mounting screws (Fig. 82).