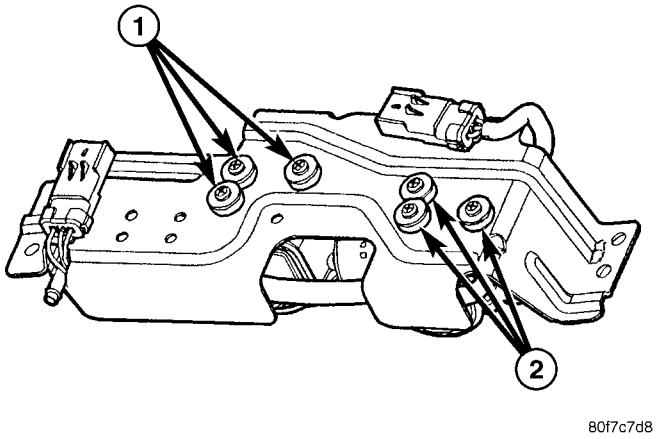

Fig. 82 PUMP SCREWS

1 - REAR PUMP SCREWS
2 - FRONT PUMP SCREWS

(3) Install pump bracket assembly on the crossmember/skid plate and install pump bracket mounting bolts (Fig. 83).

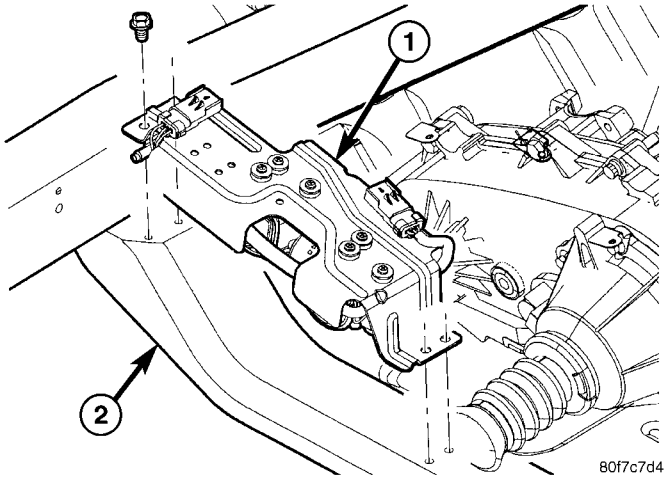

Fig. 83 PUMP BRACKET

1 - PUMP BRACKET
2 - CROSSMEMBER/SKID PLATE

(4) Tighten pump bracket bolts to 14 N·m (125 in. lbs.).

(5) Connector pump and axle harness connectors (Fig. 84).

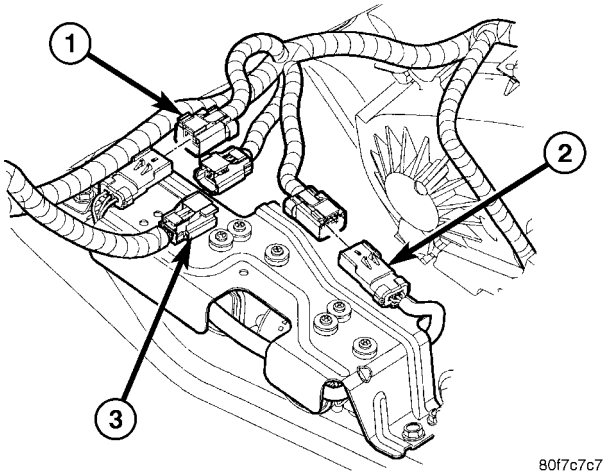

Fig. 84 PUMP CONNECTORS

1 - REAR PUMP CONNECTOR
2 - FRONT PUMP CONNECTOR
3 - AXLE HARNESS

(6) Install pressure hoses on the pumps.

(7) Verify pump operation.

BEARINGS - DIFFERENTIAL CASE

REMOVAL

(1) Remove differential case from axle housing.

(2) Remove bearings from the differential case with Puller/Press C-293-PA, Adapters C-293-18 and Plug SP-3289 (Fig. 85).