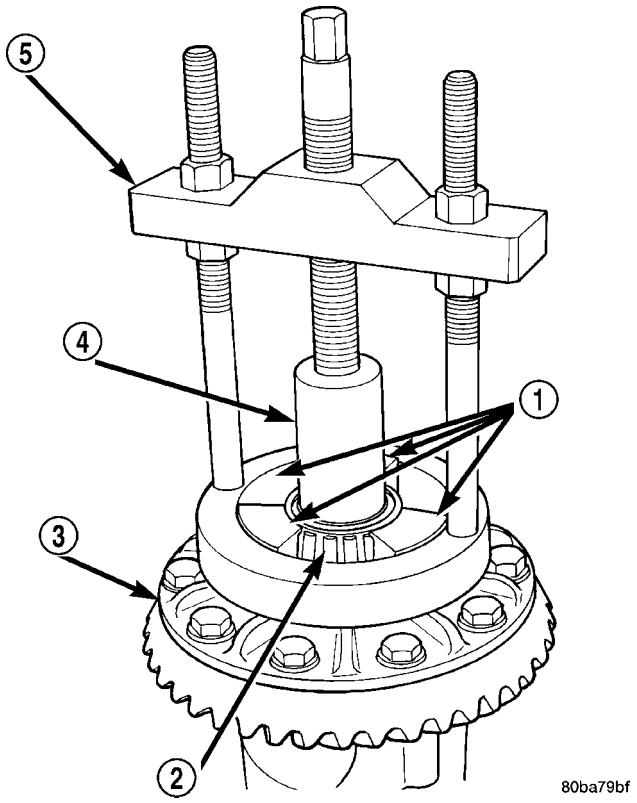

Fig. 85 DIFFERENTIAL CASE BEARING

1 - ADAPTERS
2 - BEARING
3 - DIFFERENTIAL
4 - PLUG
5 - PULLER

INSTALLATION

NOTE: If replacement differential side bearings or differential case are being installed, differential side bearing shim requirements may change. Refer to Adjustments for (Differential Bearing Preload and Gear Backlash) procedures.

(1) Install differential side bearings with Installer D-156 and Handle C-4171 (Fig. 86).

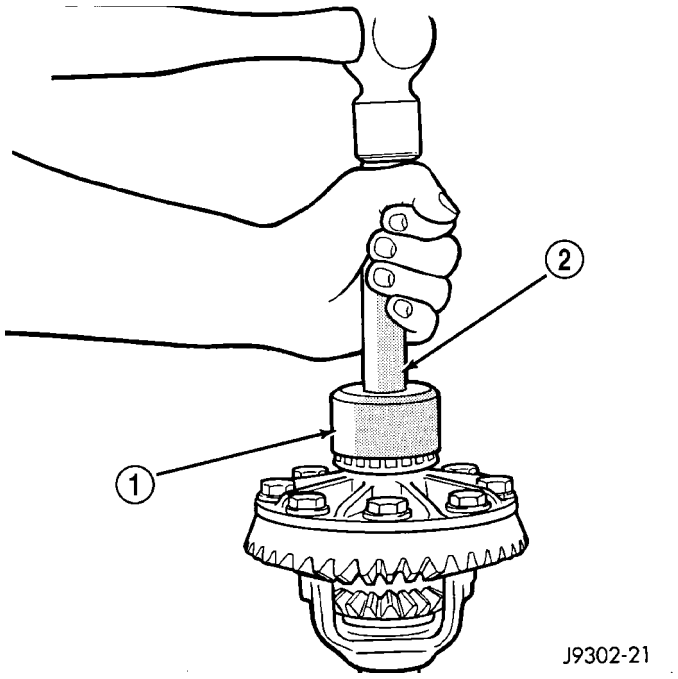

Fig. 86 DIFFERENTIAL SIDE BEARING

1 - INSTALLER
2 - HANDLE

(2) Install differential into the housing.

GEAR - PINION / RING

REMOVAL

NOTE: The ring gear and pinion are serviced as a matched set. Never replace one gear without replacing the other matched gear.

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove differential assembly from axle housing.
(3) Place differential case in a vise with soft metal jaw.
(4) Remove bolts holding ring gear to differential case.
(5) Driver ring gear off the differential case with a dead-blow hammer (Fig. 87).