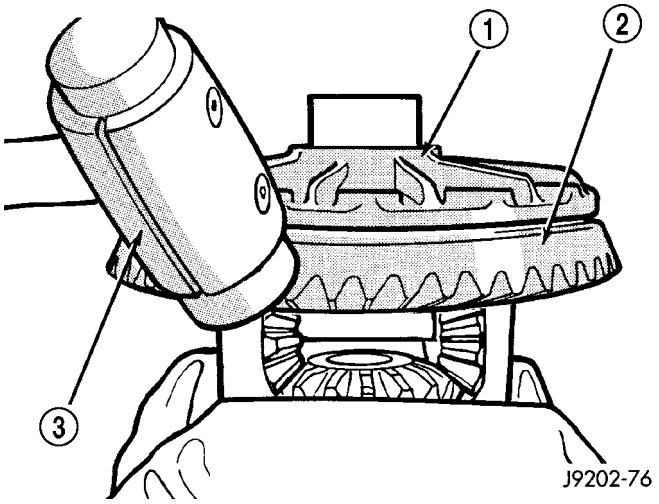


Fig. 87 RING GEAR

1 - CASE
2 - RING GEAR
3 - DEAD-BLOW HAMMER

(6) Using Spanner Wrench 6958 to hold yoke, remove the pinion nut and washer (Fig. 88).

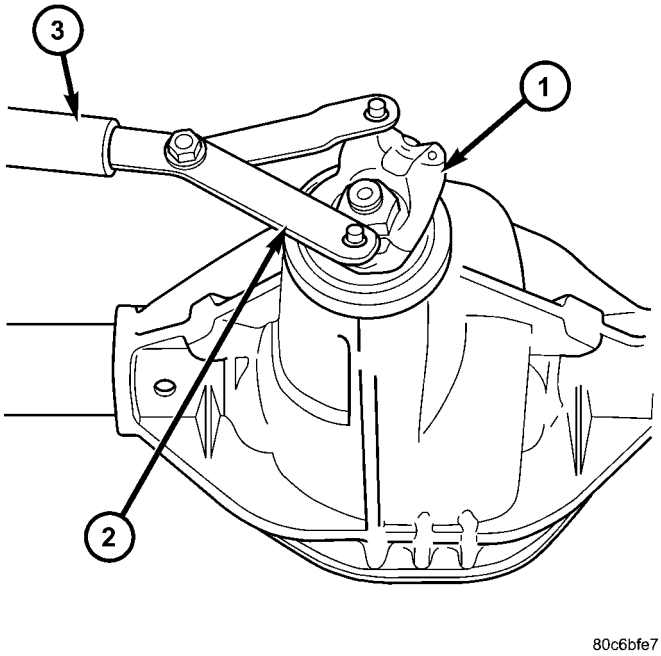


Fig. 88 YOKE SPANNER WRENCH

1 - PINION YOKE
2 - SPANNER WRENCH
3 - PIPE

(7) Remove pinion yoke from pinion shaft with Remover C-452 and Flange Wrench C-3281 (Fig. 89).

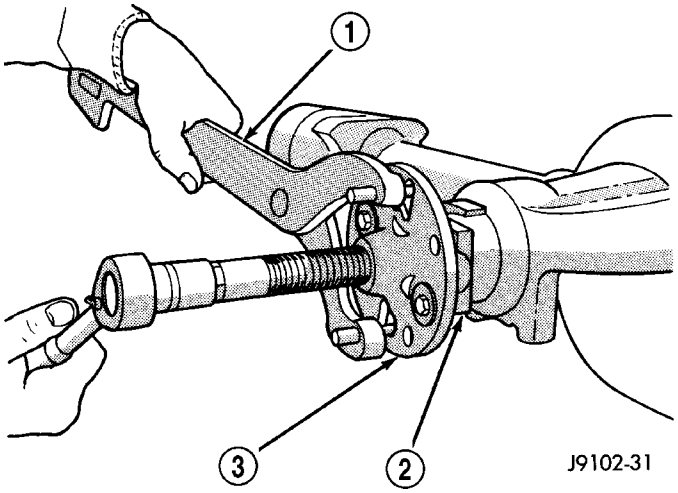


Fig. 89 PINION YOKE REMOVER

1 - REMOVER
2 - PINION YOKE
3 - FLANGE WRENCH

(8) Remove pinion gear from the housing (Fig. 90).

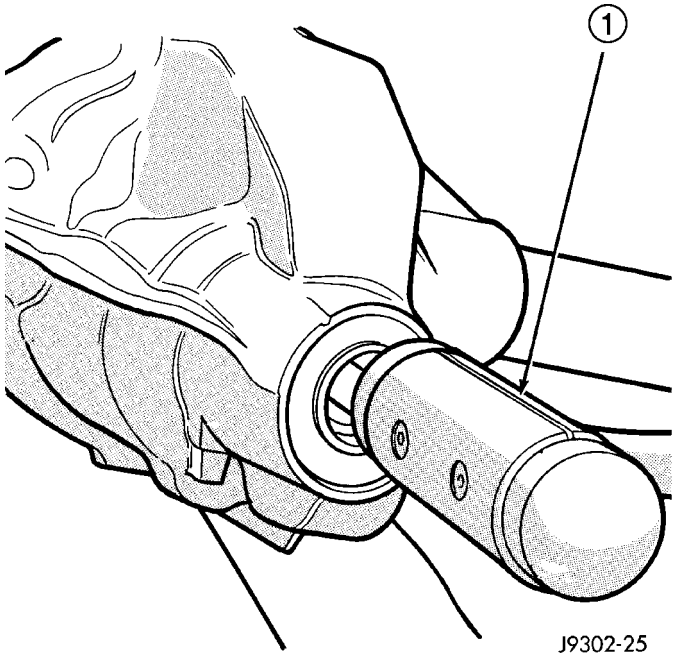


Fig. 90 PINION GEAR

1 - DEAD-BLOW HAMMER

(9) Remove front pinion bearing cup, bearing and pinion seal with Remover D-147 and Handle C-4171 (Fig. 91).