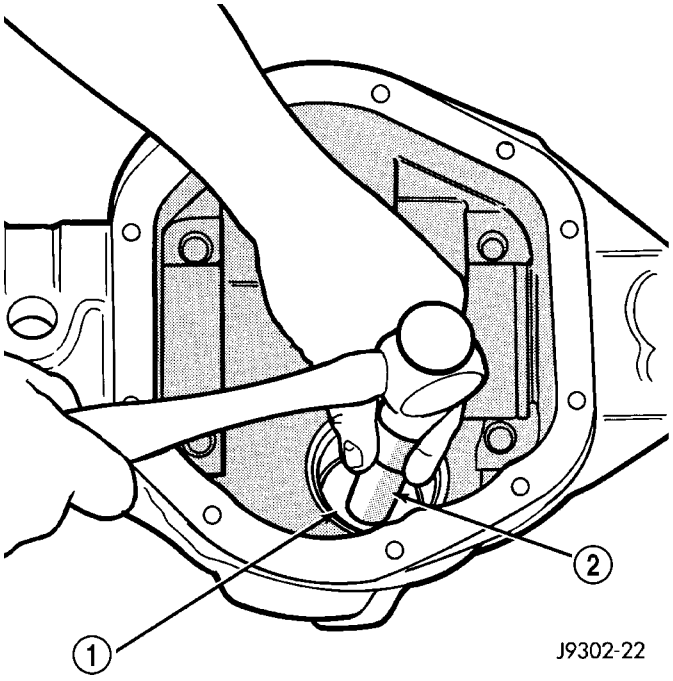


Fig. 91 FRONT BEARING CUP

1 - REMOVER
2 - HANDLE

(10) Remove rear pinion bearing cup from axle housing with remover D-148 and Handle C-4171 (Fig. 92).

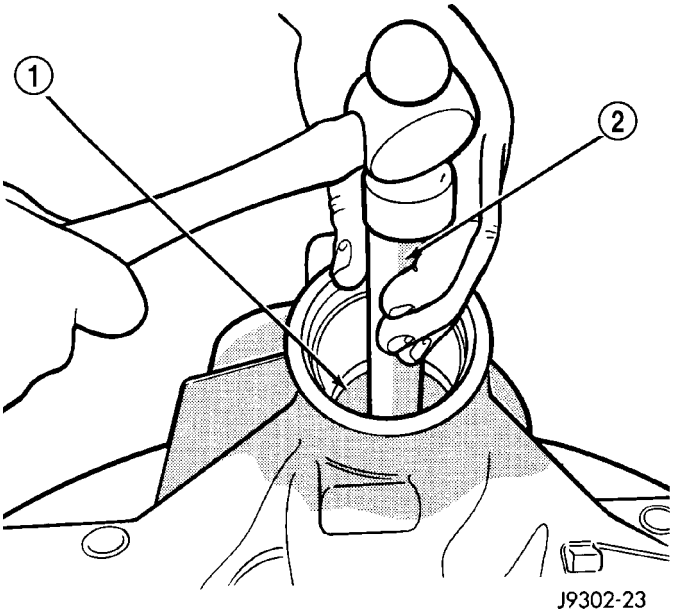


Fig. 92 REAR BEARING CUP

1 - DRIVER
2 - HANDLE

(11) Remove pinion preload shims from rear pinion cup bore.

(12) Remove rear pinion bearing from the pinion with Puller/Press C-293-PA and Adapters C-293-39 (Fig. 93).

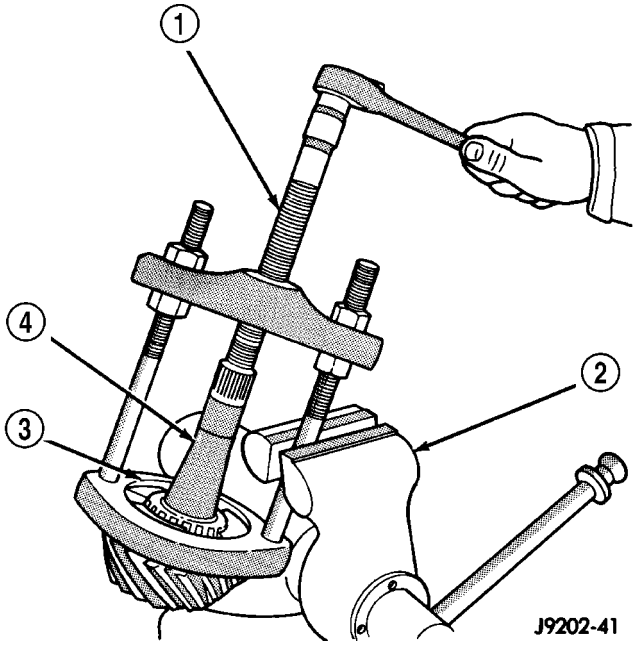


Fig. 93 REAR PINION BEARING

1 - PULLER
2 - VISE
3 - ADAPTERS
4 - PINION GEAR SHAFT

(13) Remove and record pinion depth shims from the pinion gear shaft.

INSTALLATION

NOTE: Pinion depth shims are placed between the rear pinion bearing and pinion gear head to achieve proper ring and pinion gear mesh. If the ring and pinion gears are reused, the original pinion depth shim can be used. Refer to Adjustments (Pinion Gear Depth) to select the proper shim thickness.

(1) Install pinion preload shims in rear pinion bearing cup bore.

(2) Apply Mopar Door Ease or equivalent lubricant to the outside surface of pinion bearing cups. Install rear bearing cup with Installer D-146 and Handle C-4171 (Fig. 94) and verify cup is seated.