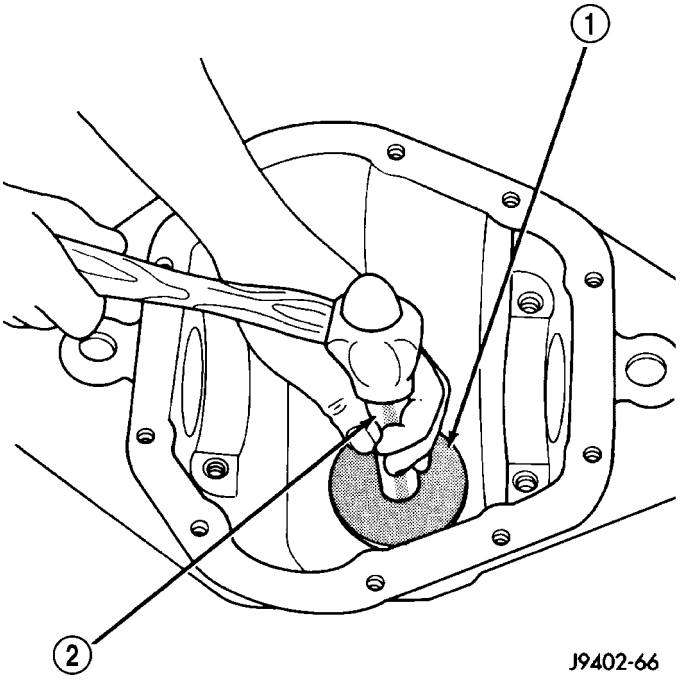

Fig. 94 REAR BEARING CUP

1 - INSTALLER
2 - HANDLE

(3) Install front bearing cup with Installer D-145 and Handle C-4171 (Fig. 95) and verify cup is seated.

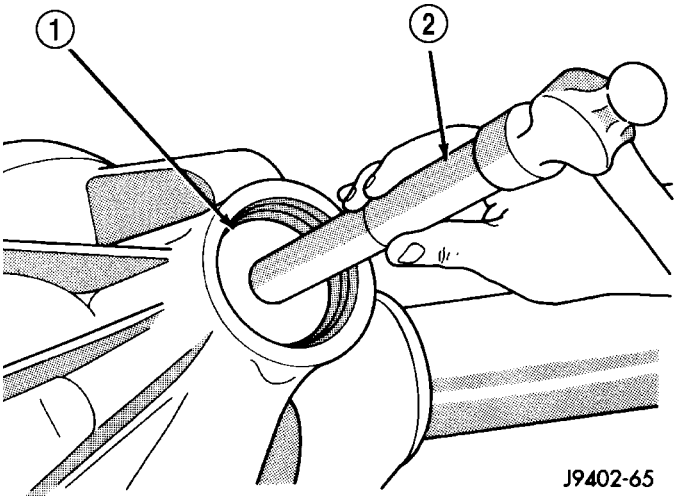

Fig. 95 FRONT BEARING CUP

1 - INSTALLER
2 - HANDLE

(4) Install front pinion bearing and oil slinger, if equipped.

(5) Apply a light coating of gear lubricant on the lip of pinion seal. Install seal with Installer 8681 (Fig. 96).

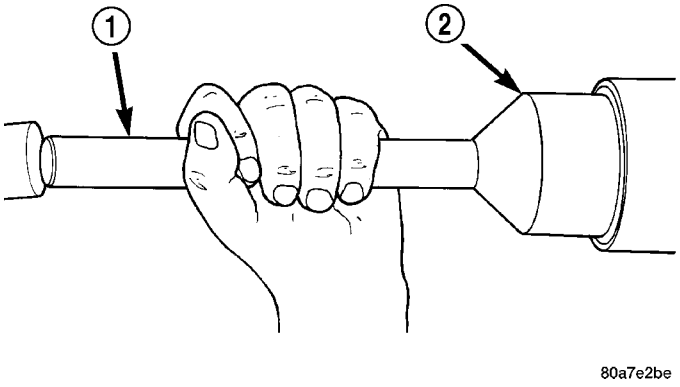

Fig. 96 PINION SEAL INSTALLER

1 - HANDLE
2 - INSTALLER

(6) Install pinion depth shim on the pinion shaft. Install rear pinion bearing on the pinion gear with Installer W-262 and a press (Fig. 97).

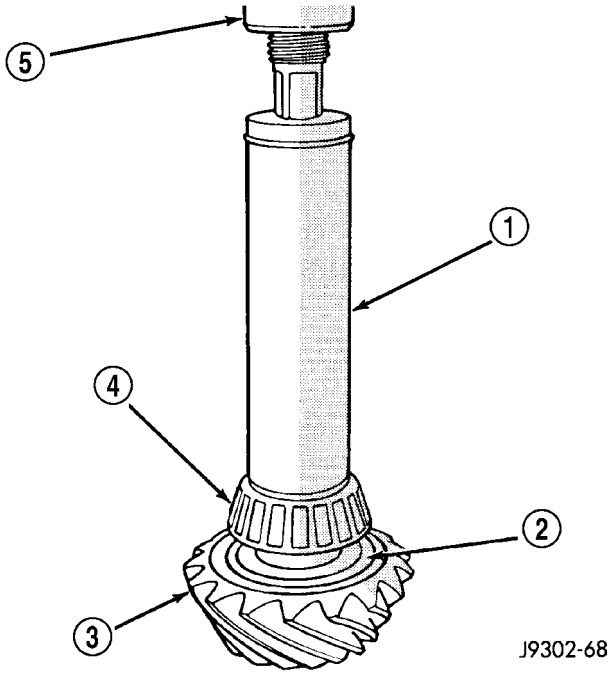

Fig. 97 REAR PINION BEARING

1 - INSTALLER
2 - SHIM
3 - DRIVE PINION GEAR
4 - REAR PINION BEARING
5 - PRESS

(7) Install pinion gear into the housing.

(8) Install yoke with Installer W-162-B, Cup 8109 and Spanner Wrench 6958 (Fig. 98).