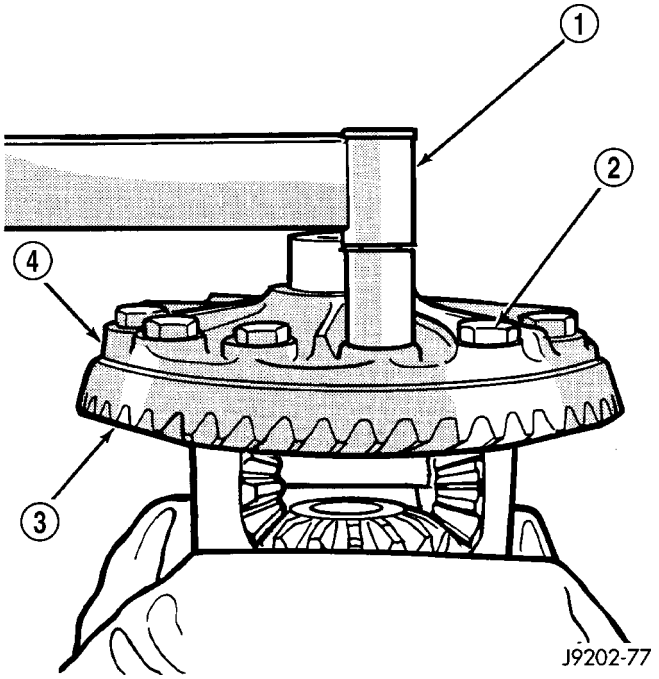

Fig. 101 RING GEAR

1 - TORQUE WRENCH
2 - RING GEAR BOLT
3 - RING GEAR
4 - CASE

(16) Install differential in axle housing and verify gear mesh and contact pattern. Refer to Adjustment (Gear Contact Pattern).