The amount of piston retraction is determined by the amount of seal deflection. Generally the amount is just enough to maintain contact between the piston and inboard brake shoe.

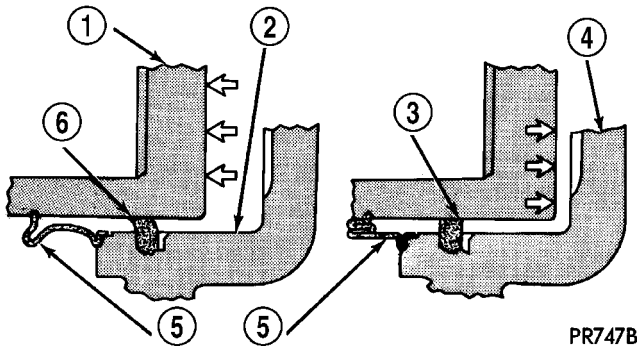


Fig. 6 Lining Wear Compensation By Piston Seal

1 - PISTON
2 - CYLINDER BORE
3 - PISTON SEAL BRAKE PRESSURE OFF
4 - CALIPER HOUSING
5 - DUST BOOT
6 - PISTON SEAL BRAKE PRESSURE ON

REMOVAL

REMOVAL - FRONT

(1) Raise and support vehicle.
(2) Remove front wheel and tire assembly.
(3) Drain small amount of fluid from master cylinder brake reservoir with suction gun.
(4) Bottom caliper piston in bore with C-clamp. Position clamp screw on outboard brake shoe and clamp frame on rear of caliper (Fig. 7). **Do not allow clamp screw to bear directly on outboard shoe retainer spring. Use wood or metal spacer between shoe and clamp screw.**

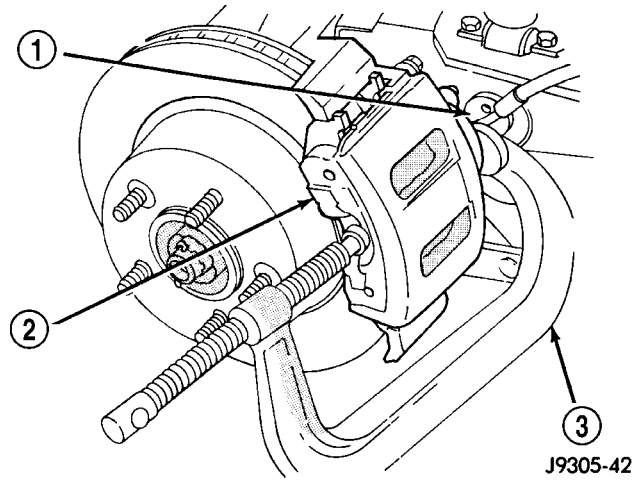


Fig. 7 Bottoming Caliper Piston With C-Clamp

1 - CALIPER BOSS
2 - OUTBOARD BRAKESHOE
3 - C-CLAMP

(5) Remove brake hose mounting bolt and discard washers (Fig. 8).

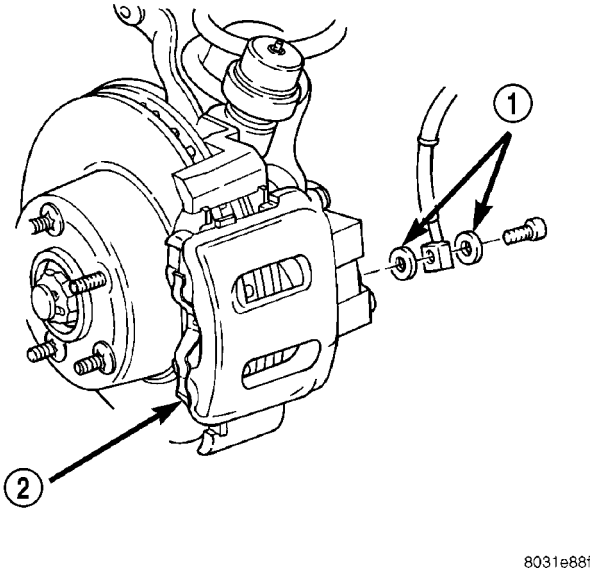


Fig. 8 Brake Hose And Bolt

1 - FITTING WASHERS
2 - CALIPERS

(6) Remove caliper mounting bolts (Fig. 9).

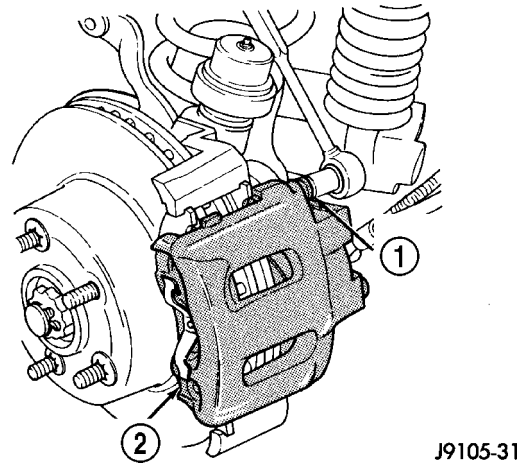


Fig. 9 Caliper Mounting Bolts

1 - CALIPER MOUNTING BOLT (2)
2 - CALIPER

(7) Tilt top of caliper outward with pry tool if necessary (Fig. 10) and remove caliper.