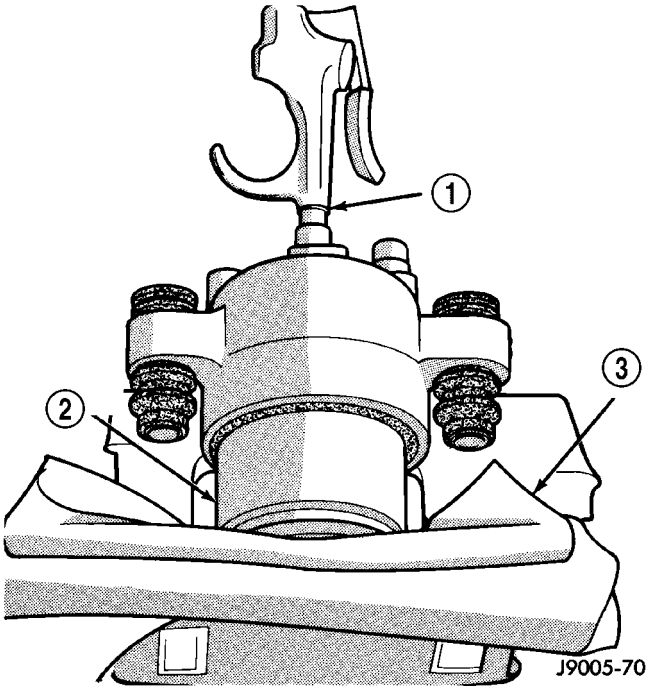


Fig. 13 Caliper Piston Removal

1 - AIR GUN
2 - CALIPER PISTON
3 - PADDING MATERIAL

(5) Remove caliper piston dust boot with suitable pry tool (Fig. 14).

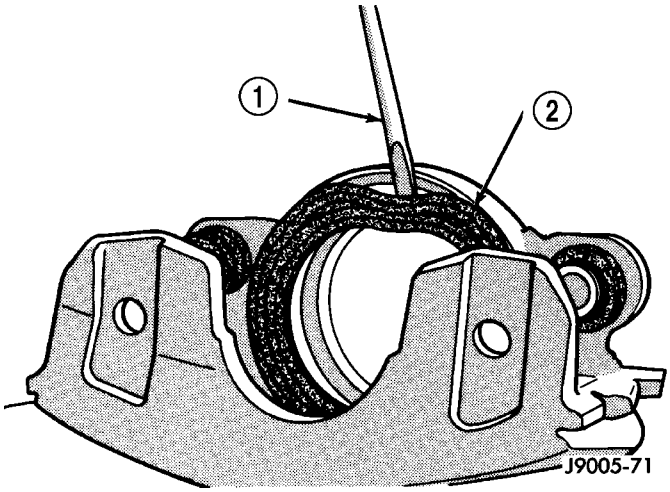


Fig. 14 Caliper

1 - COLLAPSE BOOT WITH PUNCH OR SCREWDRIVER
2 - PISTON DUST BOOT

(6) Remove caliper piston seal with wood or plastic tool (Fig. 15). Do not use metal tools as they will scratch piston bore.

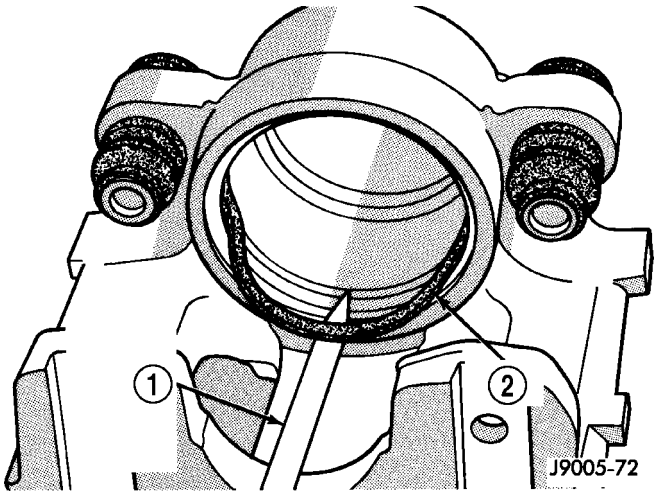


Fig. 15 Piston Seal Removal

1 - REMOVE SEAL WITH WOOD PENCIL OR SIMILAR TOOL
2 - PISTON SEAL

(7) Remove caliper mounting bolt bushings and boots (Fig. 16).

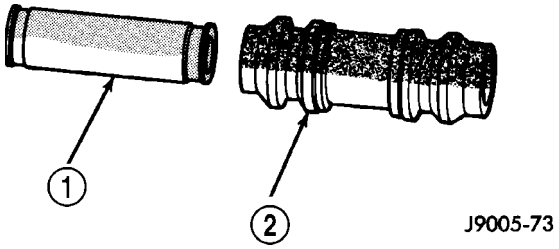


Fig. 16 Mounting Bolt Bushing And Boot

1 - CALIPER SLIDE BUSHING
2 - BOOT

CLEANING

Clean the caliper components with clean brake fluid or brake clean only. Wipe the caliper and piston dry with lint free towels or use low pressure compressed air.

CAUTION: Do not use gasoline, kerosene, paint thinner, or similar solvents. These products may leave a residue that could damage the piston and seal.

INSPECTION

The piston is made from a phenolic resin (plastic material) and should be smooth and clean.

The piston must be replaced if cracked or scored. Do not attempt to restore a scored piston surface by sanding or polishing.

CAUTION: If the caliper piston is replaced, install the same type of piston in the caliper. Never interchange phenolic resin and steel caliper pistons. The pistons, seals, seal grooves, caliper bore and piston tolerances are different.