The bore can be **lightly** polished with a brake hone to remove very minor surface imperfections (Fig. 17). The caliper should be replaced if the bore is severely corroded, rusted, scored, or if polishing would increase bore diameter more than 0.025 mm (0.001 inch).

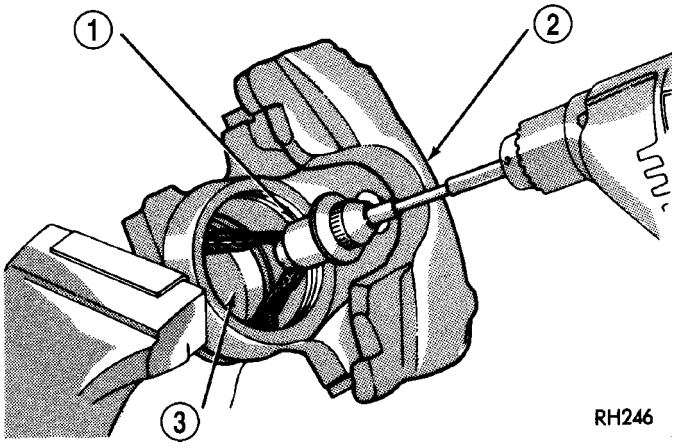


Fig. 17 Polishing Piston Bore

1 - SPECIAL HONE
2 - CALIPER
3 - PISTON BORE

ASSEMBLY

CAUTION: Dirt, oil, and solvents can damage caliper seals. Insure assembly area is clean and dry.

(1) Lubricate caliper piston bore, new piston seal and piston with clean brake fluid.

(2) Lubricate caliper bushings and interior of bushing boots with silicone grease.

(3) Install bushing boots in caliper, then insert bushing into boot and push bushing into place (Fig. 18).

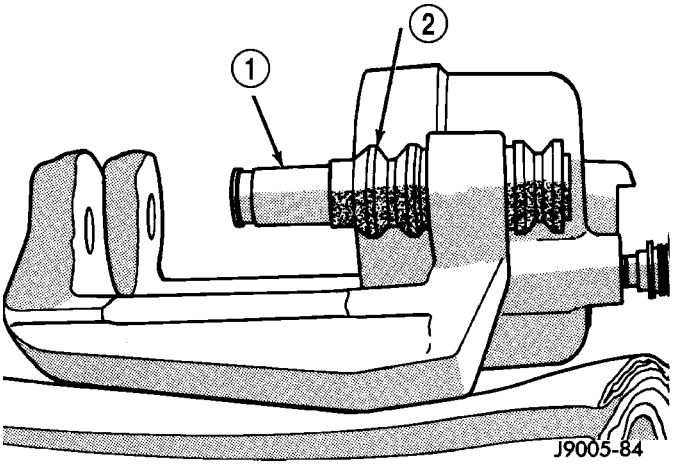


Fig. 18 Bushings And Boots Installation

1 - BUSHING
2 - BOOT

(4) Install new piston seal into seal groove with finger (Fig. 19).

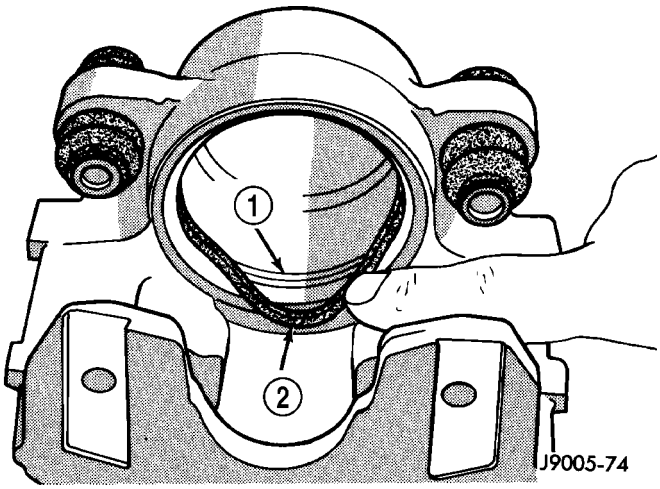


Fig. 19 Piston Seal Installation

1 - SEAL GROOVE
2 - PISTON SEAL

(5) Install new dust boot on caliper piston and seat boot in piston groove (Fig. 20).

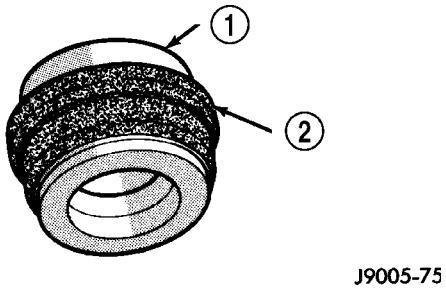


Fig. 20 Dust Boot On Piston

1 - PISTON
2 - DUST BOOT

(6) Press piston into caliper bore by hand, use a turn and push motion to work piston into seal (Fig. 21).

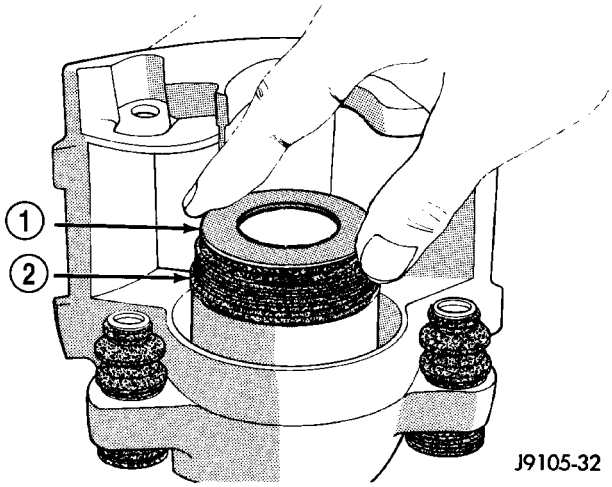


Fig. 21 Caliper Piston Installation

1 - PISTON
2 - BOOT

(7) Press caliper piston to bottom of bore.