(10) Remove the supports and lower the vehicle.
(11) Verify a firm pedal before moving the vehicle.

BRAKE PADS / SHOES

REMOVAL

REMOVAL - FRONT PADS

(1) Raise and support vehicle.
(2) Remove wheel and tire assembly.
(3) Remove caliper. (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/DISC BRAKE CALIPERS - REMOVAL).
(4) Pressing one end of outboard shoe inward to disengage shoe lug. Then rotate shoe upward until retainer spring clears caliper. Press opposite end of shoe inward to disengage shoe lug and rotate shoe up and out of caliper (Fig. 28).

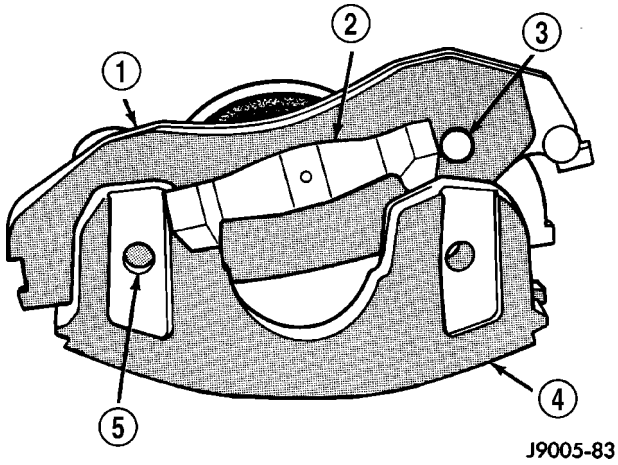


Fig. 28 Outboard Brake Shoe Removal

1 - OUTBOARD BRAKESHOE
2 - SHOE SPRING
3 - LOCATING LUG
4 - CALIPER
5 - LOCATING LUG

(5) Grasp ends of inboard shoe and tilt shoe outward to release springs from caliper piston (Fig. 29) and remove shoe from caliper.

NOTE: If original brake shoes will be used, keep them in sets left and right. They are not interchangeable.

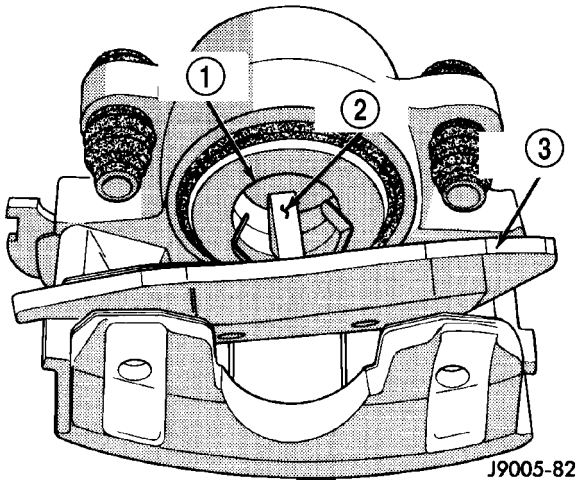


Fig. 29 Inboard Brake

1 - CALIPER PISTON
2 - SHOE SPRINGS
3 - INBOARD BRAKESHOE

(6) Secure caliper to nearby suspension part with wire. **Do not allow brake hose to support caliper weight.**
(7) Wipe caliper off with shop rags or towels.

CAUTION: Do not use compressed air, this can unseat dust boot and force dirt into piston bore.

REMOVAL - DRUM BRAKE SHOES

(1) Raise vehicle and remove rear wheels.
(2) Remove and discard spring nuts securing drums to wheel studs.
(3) Remove brake drums.

NOTE: If drums are difficult to remove, back off adjuster through support plate access hole with brake tool and screwdriver.

(4) Remove U-clip and washer securing adjuster cable to parking brake lever (Fig. 30).
(5) Remove primary and secondary return springs from anchor pin with brake spring pliers.
(6) Remove hold-down springs, retainers and pins with standard retaining spring tool.
(7) Install spring clamps on wheel cylinders to hold pistons in place.
(8) Remove adjuster lever, adjuster screw and spring.
(9) Remove adjuster cable and cable guide.
(10) Remove brake shoes and parking brake strut.
(11) Disconnect cable from parking brake lever and remove lever.