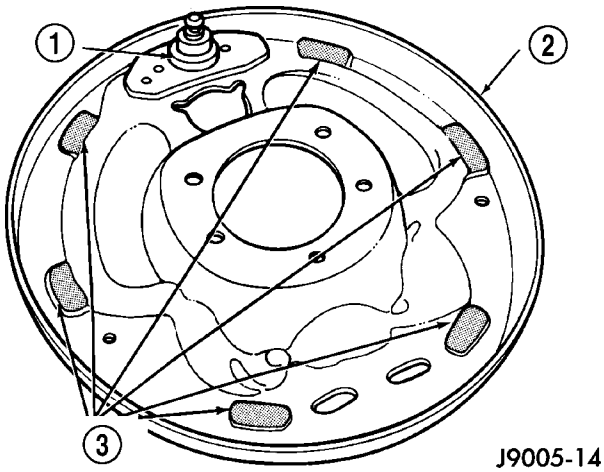

Fig. 31 Shoe Contact Surfaces

1 - ANCHOR PIN
2 - SUPPORT PLATE
3 - SHOE CONTACT SURFACES

(4) Lubricate adjuster screw threads and pivot with spray lube.

(5) Attach parking brake lever to secondary brake shoe. Use new washer and U-clip to secure lever.

(6) Remove wheel cylinder clamps.

(7) Attach parking brake cable to lever.

(8) Install brake shoes on support plate. Secure shoes with new hold-down springs, pins and retainers.

(9) Install parking brake strut and spring.

(10) Install guide plate and adjuster cable on anchor pin.

(11) Install primary and secondary return springs.

(12) Install adjuster cable guide on secondary shoe.

(13) Lubricate and assemble adjuster screw.

(14) Install adjuster screw, spring and lever and connect to adjuster cable.

(15) Adjust shoes to drum. (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/DRUM - ADJUSTMENTS).

(16) Install wheel/tire assemblies and lower vehicle. (Refer to 22 - TIRES/WHEELS/WHEELS - STANDARD PROCEDURE).

(17) Verify firm brake pedal before moving vehicle.

INSTALLATION - REAR DISC BRAKE PADS

(1) Bottom pistons in caliper bore with C-clamp. Place an old brake shoe between a C-clamp and caliper piston.

(2) Clean caliper mounting adapter and anti-rattle springs.

(3) Lubricate anti-rattle springs with Mopar brake grease.

(4) Install anti-rattle springs.

NOTE: Anti-rattle springs are not interchangeable.

(5) Install inboard brake pad in adapter.

(6) Install outboard brake pad in adapter.

(7) Tilt the top of the caliper over rotor and under adapter. Then push the bottom of the caliper down onto the adapter.

(8) Install caliper, (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/DISC BRAKE CALIPERS - INSTALLATION).

(9) Install wheel and tire assemblies and lower vehicle, (Refer to 22 - TIRES/WHEELS/WHEELS - STANDARD PROCEDURE).

(10) Apply brakes several times to seat caliper pistons and brake shoes and obtain firm pedal.

(11) Top off master cylinder fluid level.

DRUM

DESCRIPTION

The brake systems use a leading shoe (primary) and trailing shoe (secondary). The mounting hardware is similar but not interchangeable (Fig. 30).

OPERATION

When the brake pedal is depressed hydraulic pressure pushes the rear brake wheel cylinder pistons outward. The wheel cylinder push rods then push the brake shoes outward against the brake drum. When the brake pedal is released return springs attached to the brake shoes pull the shoes back to there original position. (Fig. 30)

DIAGNOSIS AND TESTING - BRAKE DRUM RUNOUT

The maximum allowable diameter of the drum braking surface is indicated on the drum outer edge. Generally, a drum can be machined to a maximum of 1.52 mm (0.060 in.) oversize. Always replace the drum if machining would cause drum diameter to exceed the size limit indicated on the drum.

BRAKE DRUM RUNOUT

Measure drum diameter and runout with an accurate gauge. The most accurate method of measurement involves mounting the drum in a brake lathe and checking variation and runout with a dial indicator.

Variations in drum diameter should not exceed 0.069 mm (0.0028 in.). Drum runout should not exceed 0.18 mm (0.007 in.) out of round. Machine the drum if runout or variation exceed these values. Replace the drum if machining causes the drum to exceed the maximum allowable diameter.