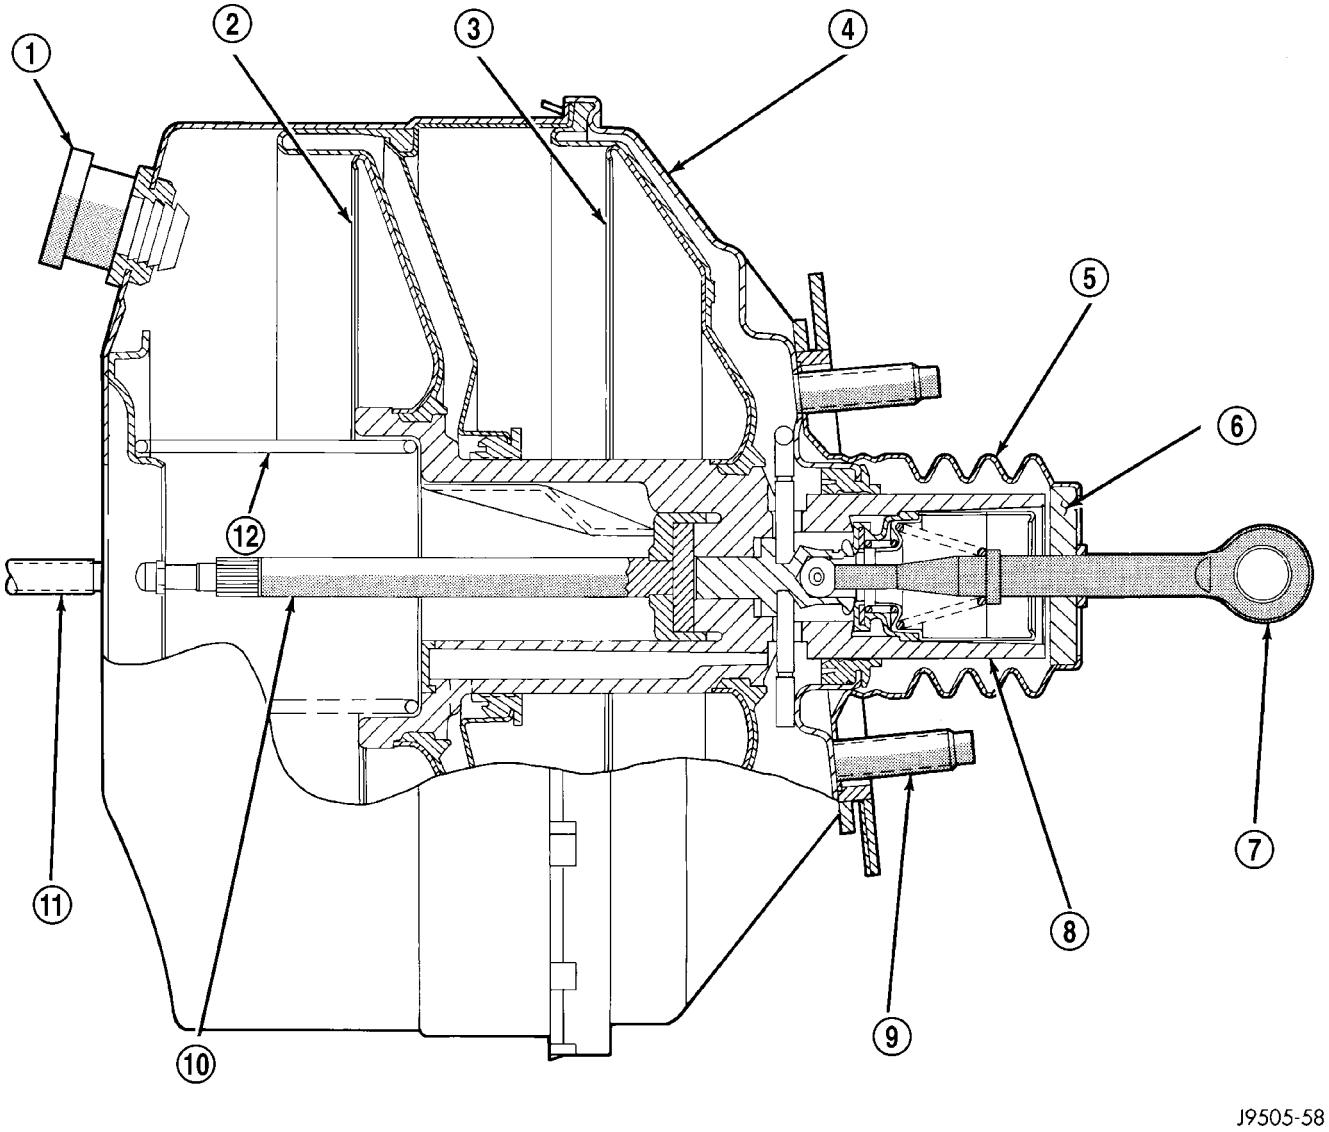


*Fig. 47 Power Brake Booster–Typical*

1 - VACUUM CHECK VALVE
2 - FRONT DIAPHRAGM
3 - REAR DIAPHRAGM
4 - HOUSING
5 - SEAL
6 - AIR FILTER
7 - PRIMARY PUSH ROD (TO BRAKE PEDAL)
8 - ATMOSPHERIC INLET VALVE ASSEMBLY
9 - BOOSTER MOUNTING STUDS (4)
10 - SECONDARY PUSH ROD (TO MASTER CYLINDER)
11 - MASTER CYLINDER MOUNTING STUD (2)
12 - SPRING

## REMOVAL

(1) Remove combination valve and master cylinder.

(2) Disconnect vacuum hose from booster check valve.

(3) Remove retaining clip that secures booster push rod to brake pedal (Fig. 48) and slide the rod off the pin.

(4) Remove four nuts attaching booster to front cowl panel (Fig. 49).

(5) In engine compartment, slide booster studs out of cowl panel, and remove the booster from engine compartment.

(6) Remove dash seal from booster.