REMOVAL

REMOVAL - FRONT

(1) Remove wheel and tire assemble.
(2) Remove caliper. (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/DISC BRAKE CALIPERS - REMOVAL).
(3) Remove retainers securing rotor to hub studs (Fig. 54).
(4) Remove rotor from hub.
(5) If rotor shield requires service, remove front hub and bearing assembly.

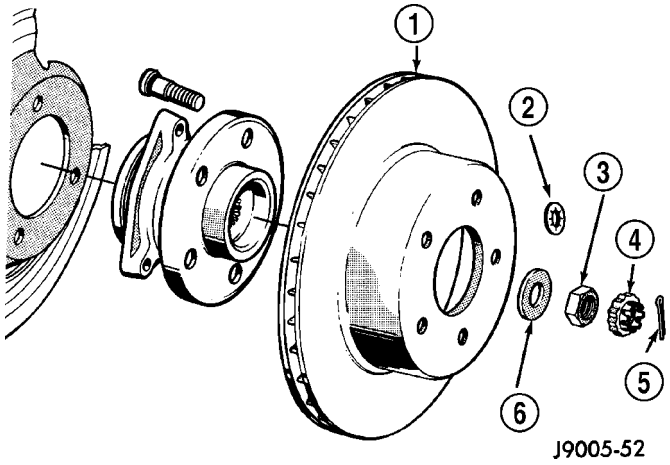

Fig. 54 Rotor & Hub

1 - ROTOR
2 - RETAINER
3 - BEARING NUT
4 - NUT LOCK
5 - COTTER PIN
6 - WASHER

REMOVAL - REAR

(1) Raise and support the vehicle
(2) Remove the tire and wheel assembly (Fig. 55).

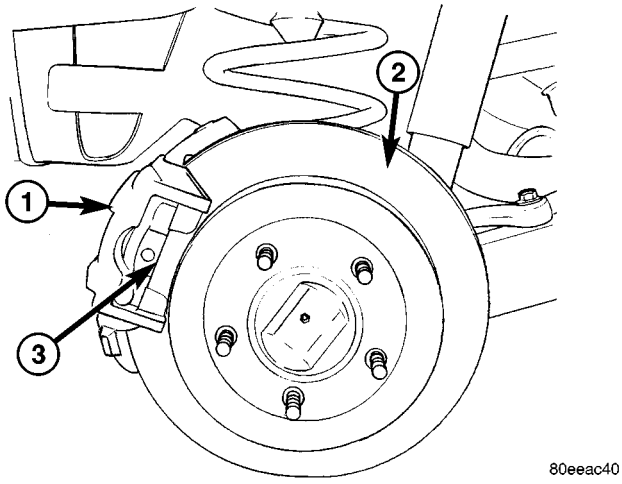

Fig. 55 ROTOR/CALIPER

1 - CALIPER
2 - ROTOR
3 - OUTBOARD DISC BRAKE PAD

(3) Remove the disc brake caliper and pads, (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/DISC BRAKE CALIPERS - REMOVAL) (Fig. 56).

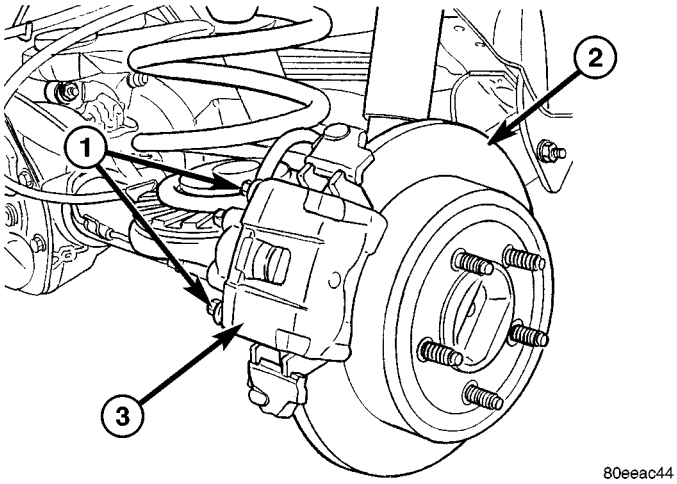

Fig. 56 ROTOR

1 - CALIPER MOUNTING BOLTS
2 - ROTOR
3 - CALIPER

(4) Remove the retianing clips and rotor assembly.

INSTALLATION

INSTALLATION - FRONT

(1) If new rotor is being installed, remove protective coating from rotor surfaces with carburetor cleaner.
(2) Install rotor on hub.
(3) Install caliper. (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/DISC BRAKE CALIPERS - INSTALLATION).