Parking brake adjustment and parts replacement procedures are described in the Parking Brake section.

SHOES

DESCRIPTION

Drum in hat park brakes are dual shoe, internal expanding units with an automatic self adjusting mechanism (Fig. 61).

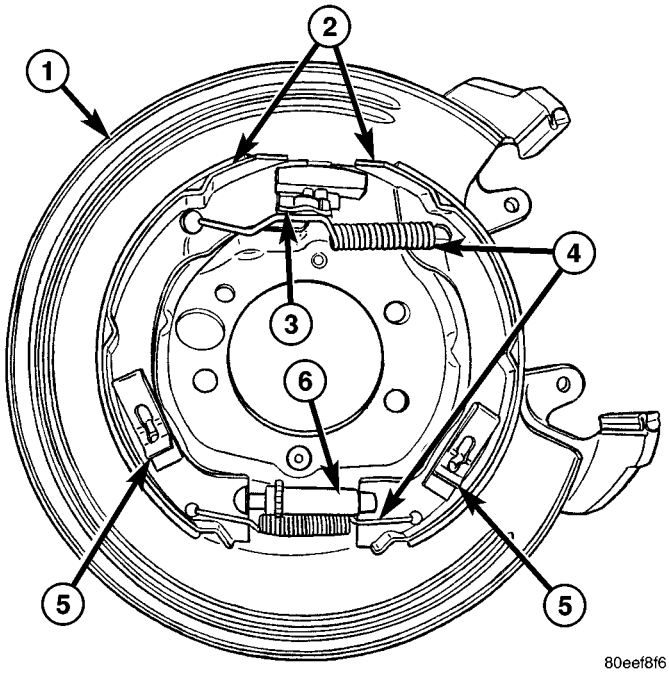


Fig. 61 BRAKE SHOES

1 - SUPPORT PLATE
2 - PARK BRAKE SHOES
3 - EQUALIZER
4 - SPRINGS
5 - HOLD DOWN CLIPS
6 - ADJUSTER

OPERATION

When the parking brake pedal is depressed the brake cable pulls the brake shoes outward against the brake drum. When the brake pedal is released the return springs attached to the brake shoes pull the shoes back to there original position.

REMOVAL

(1) Raise and support the vehicle.

(2) Remove the tire and wheel assembly.

(3) Remove the disc brake caliper, (Fig. 62), (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/DISC BRAKE CALIPERS - REMOVAL).

(4) Remove the disc brake rotor, (Fig. 62), (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/ROTORS - REMOVAL).

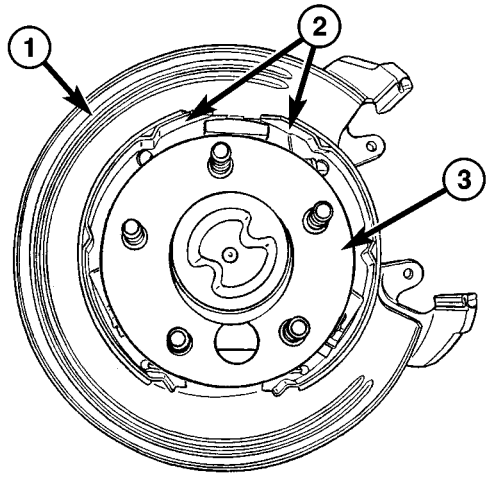


Fig. 62 PARK BRAKE SHOES INSTALLED

1 - SUPPORT PLATE
2 - PARK BRAKE SHOES
3 - AXLE

(5) Disassemble the rear park brake shoes (Fig. 63).

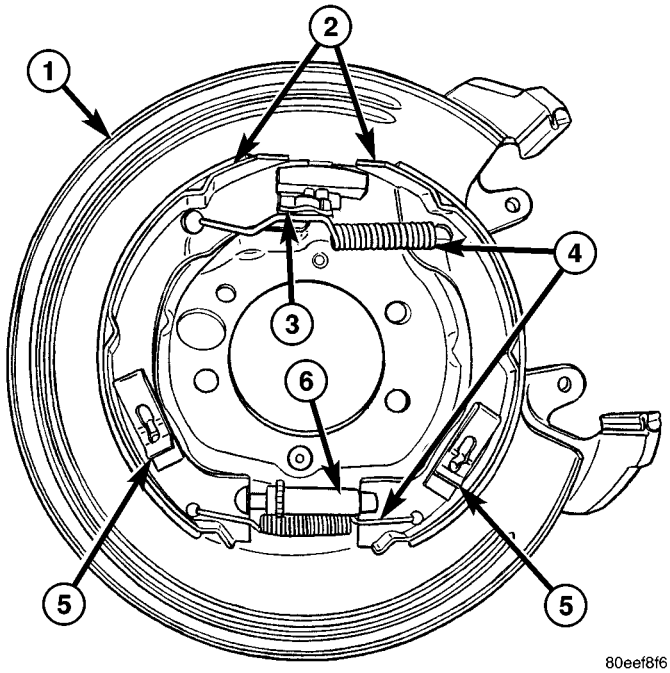


Fig. 63 BRAKE SHOES

1 - SUPPORT PLATE
2 - PARK BRAKE SHOES
3 - EQUALIZER
4 - SPRINGS
5 - HOLD DOWN CLIPS
6 - ADJUSTER

CLEANING - REAR DRUM IN HAT BRAKE

Clean the individual brake components, including the support plate exterior, with a water dampened cloth or with brake cleaner. Do not use any other cleaning agents. Remove light rust and scale from the brake shoe contact pads on the support plate with fine sandpaper.