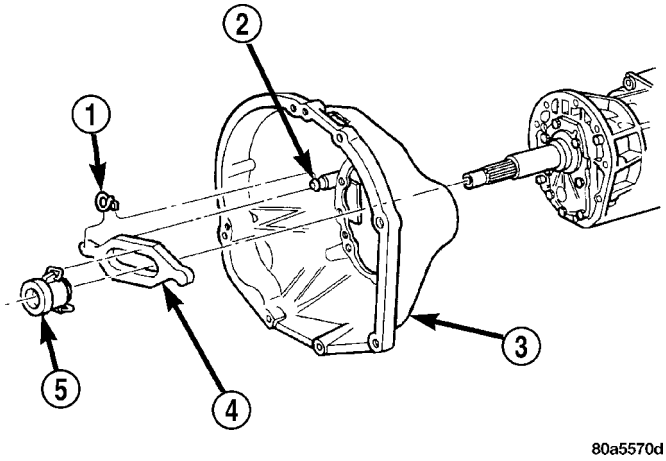

Fig. 3 RELEASE BEARING

1 - RETAINER SPRING
2 - PIVOT BALL STUD
3 - CLUTCH HOUSING
4 - RELEASE FORK
5 - RELEASE BEARING

INSTALLATION

(1) Lubricate crankshaft pilot bearing, input shaft splines, bearing retainer slide surface, fork pivot and release fork pivot surface. Lubricate with Mopar high temperature bearing grease or equivalent.

(2) Install new release bearing. Verify bearing is properly secured to release fork.

(3) Install transmission.

FLYWHEEL

DESCRIPTION

STANDARD FLYWHEEL

The standard flywheel is used on the 4.0L engine. The flywheel (Fig. 4) is a heavy plate bolted to the rear of the crankshaft. The flywheel incorporates the ring gear to mesh with the starter. The rear face of the flywheel serves as the driving member to the clutch disc.

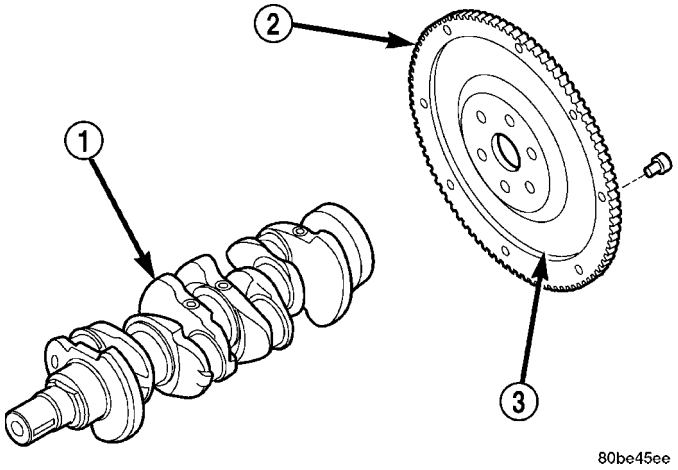

Fig. 4 FLYWHEEL

1 - CRANKSHAFT
2 - RING GEAR
3 - FLYWHEEL

DUAL MASS FLYWHEEL

The Dual Mass Flywheel is used on the 2.4L engine (Fig. 5). The flywheel incorporates the ring gear to mesh with the starter. The primary flywheel side is bolted to the crankshaft. The secondary flywheel face serves as the driving member to the clutch disc. Internal springs between the flywheels are use to dampen energy.

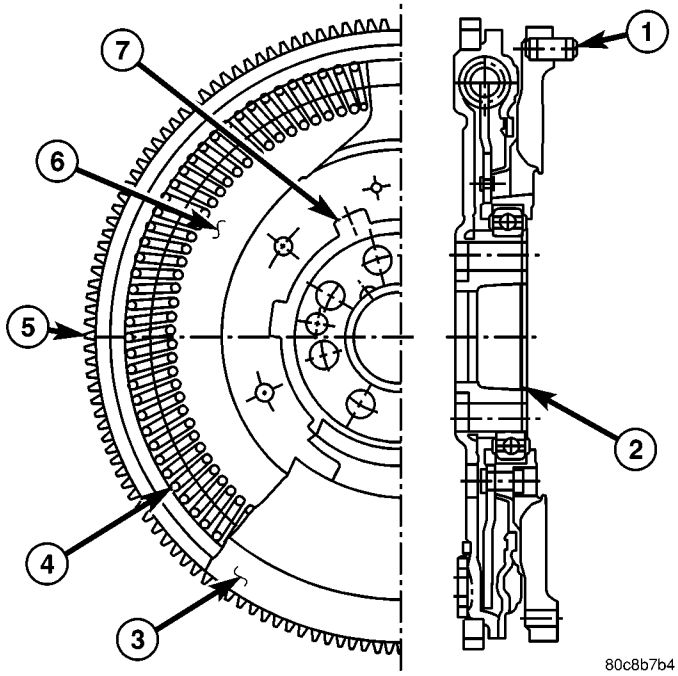

Fig. 5 DUAL MASS FLYWHEEL

1 - LOCATING STUD
2 - BEARING
3 - SECONDARY FLYWHEEL
4 - DAMPER SPRING
5 - RING GEAR
6 - PRIMARY FLYWHEEL
7 - FRICTION DISC