(3) Remove slave cylinder from clutch housing (Fig. 7).
(4) Disengage clutch fluid line from body clips.
(5) Lower vehicle.
(6) Verify clutch master cylinder reservoir cap is tight.
(7) Remove clutch master cylinder attaching nuts (Fig. 7) or (Fig. 8).
(8) Disengage captured bushing on clutch master cylinder actuator from pivot pin on pedal arm.
(9) Slide actuator off pivot pin.
(10) Disconnect clutch interlock safety switch wires.
(11) Remove clutch hydraulic linkage through engine compartment.

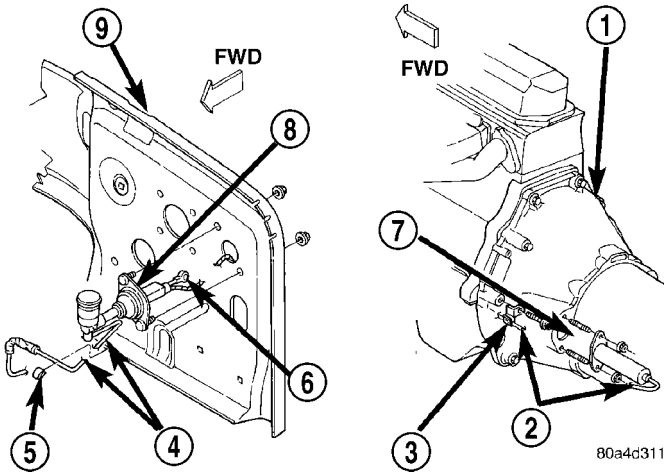

Fig. 7 CLUTCH LINKAGE - LHD

1 - CLUTCH HOUSING
2 - FLUID LINE
3 - BRACKET
4 - FLUID LINE
5 - CLIP
6 - CAPTURED BUSHING
7 - CLUTCH SLAVE CYLINDER
8 - CLUTCH MASTER CYLINDER
9 - DASH PANEL

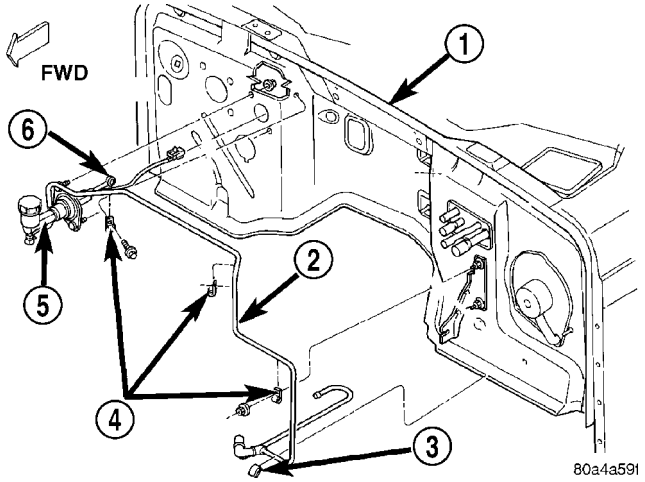

Fig. 8 CLUTCH LINKAGE - RHD

1 - DASH PANEL
2 - FLUID LINE
3 - CLIP
4 - HOLD DOWN STRAP
5 - CLUTCH MASTER CYLINDER
6 - CAPTURED BUSHING

INSTALLATION

NOTE: Clutch master cylinder, slave cylinder and connecting line are serviced as an assembly only. Components cannot be overhauled or serviced separately. Cylinders and connecting line are sealed units.

Removal/installation procedures for right and left hand drive models are basically the same.
(1) Tighten clutch master cylinder cap.
(2) Position connecting line and slave cylinder downward past engine and next to clutch housing.
(3) Position clutch master cylinder on dash panel.
(4) Install clutch master cylinder actuator on clutch pedal pivot pin.
(5) Install clutch master cylinder and tighten nuts to 38 N·m (28 ft. lbs.).
(6) Insert slave cylinder push rod through clutch housing opening and into release lever. Be sure cap on end of rod is securely engaged in lever. Check this before installing cylinder attaching nuts.
(7) Install slave cylinder and tighten nuts to 23 N·m (17 ft. lbs.).
(8) Secure clutch fluid line in body and transmission clips.
(9) Connect clutch interlock safety switch wires.

MASTER CYLINDER

INSPECTION

The clutch fluid reservoir, master cylinder, slave cylinder and fluid lines are pre-filled at the factory. The hydraulic system should not require additional