fluid under normal circumstances. The reservoir fluid level increases as clutch wear occurs.

CAUTION: Do not overfill or removing fluid from the reservoir. Failure to heed caution may result in damage.

Wipe reservoir and cover clean. Remove cap and diaphragm, fluid level should not be above indicator ring located on the outside of the reservoir.

CLUTCH PEDAL

REMOVAL

(1) Remove steering column lower cover and knee blocker for access.

(2) Disconnect clutch pedal position switch wires.

(3) Disengage captured bushing lock tabs attaching clutch master cylinder actuator to pedal pivot (Fig. 9) or (Fig. 10).

(4) Remove nuts attaching pedal and bracket to dash panel and upper cowl support (Fig. 9) or (Fig. 10).

(5) Separate pedal assemble from vehicle.

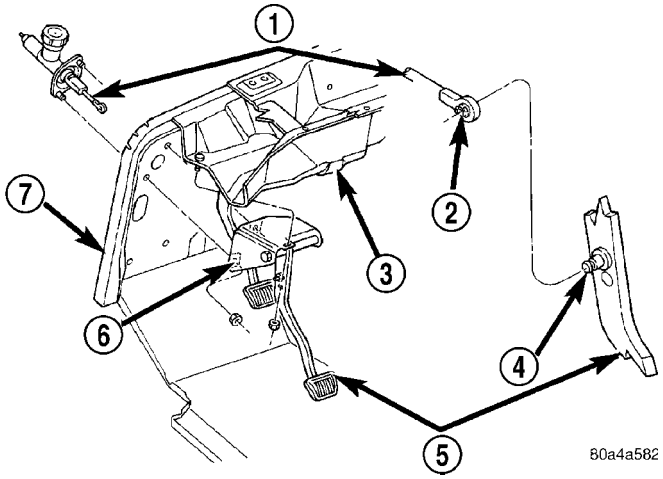

Fig. 9 CLUTCH PEDAL MOUNTING - LHD

1 - CLUTCH CYLINDER ACTUATOR
2 - CAPTURED BUSHING
3 - UPPER COWL SUPPORT
4 - PIVOT
5 - CLUTCH PEDAL
6 - BRACKET
7 - DASH PANEL

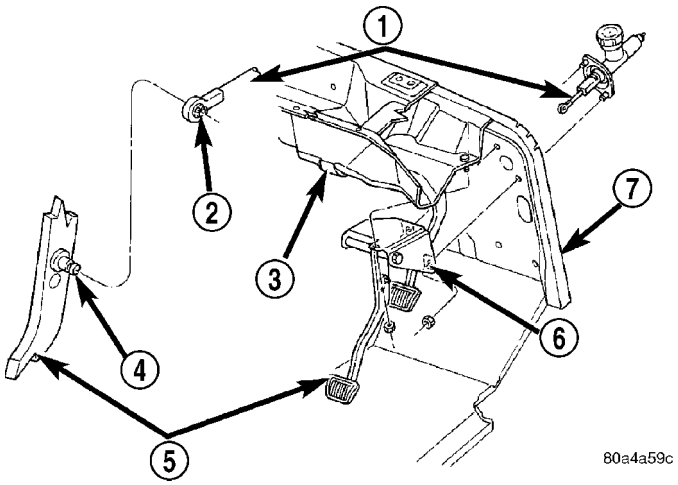

Fig. 10 CLUTCH PEDAL MOUNTING - RHD

1 - CLUTCH CYLINDER ACTUATOR
2 - CAPTURED BUSHING
3 - UPPER COWL SUPPORT
4 - PIVOT
5 - CLUTCH PEDAL
6 - BRACKET
7 - DASH PANEL

INSTALLATION

(1) Place clutch pedal and bracket over studs on dash panel and cowl support. Install nuts and tighten to 39 N·m (29 ft. lbs.).

(2) Engage captured bushing and actuator on brake pedal pivot.

(3) Connect clutch pedal position switch wires.

CLUTCH PEDAL POSITION SWITCH

DESCRIPTION

The Clutch Pedal Position Switch (CPPS) is located under the instrument panel, attached to the clutch master cylinder push rod (Fig. 11). The wiring harness connector is inside of the vehicle under the left side of the instrument panel (Fig. 12).

NOTE: Switch is serviced with clutch master cylinder only.