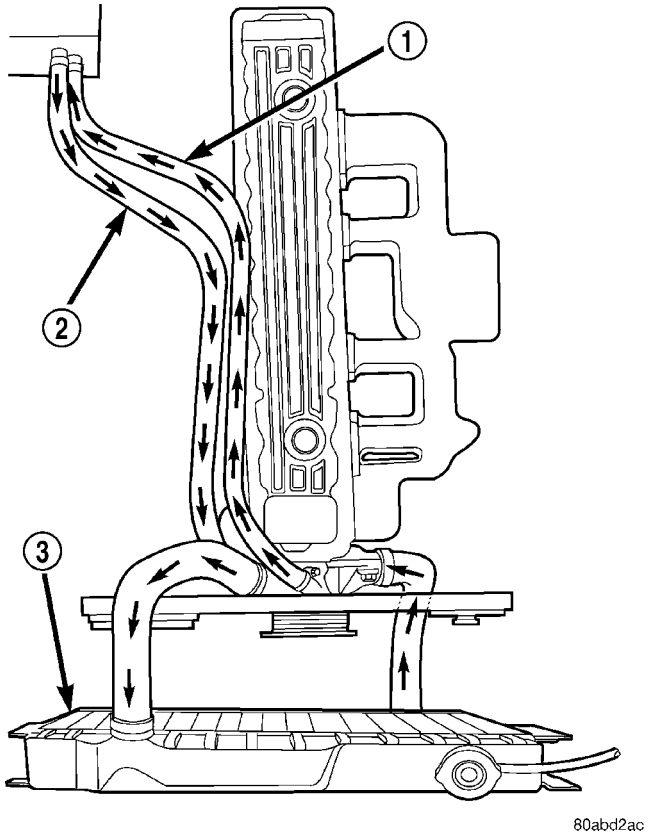

Fig. 1 Coolant Circulation - 4.0L Engine

1 - FROM THERMOSTAT
2 - TO WATER PUMP
3 - RADIATOR

DESCRIPTION - HOSE CLAMPS

The cooling system utilizes both worm drive and spring type hose clamps. If a spring type clamp replacement is necessary, replace with the original Mopar® equipment spring type clamp.

CAUTION: A number or letter is stamped into the tongue of constant tension clamps. If replacement is necessary, use only a original equipment clamp with matching number or letter (Fig. 2).

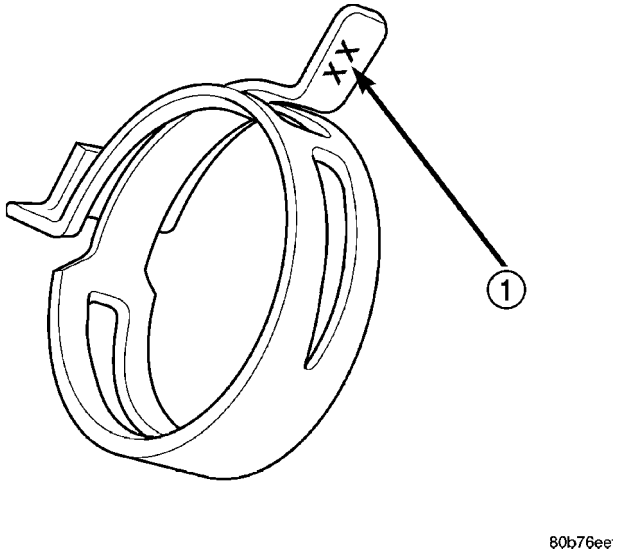

Fig. 2 Spring Clamp Size Location

1 - SPRING CLAMP SIZE LOCATION

OPERATION - HOSE CLAMPS

The worm type hose clamp uses a specified torque value to maintain proper tension on a hose connection.

The spring type hose clamp applies constant tension on a hose connection. To remove a spring type hose clamp, use Special Tool 6094 or equivalent, constant tension clamp pliers (Fig. 3) to compress the hose clamp.

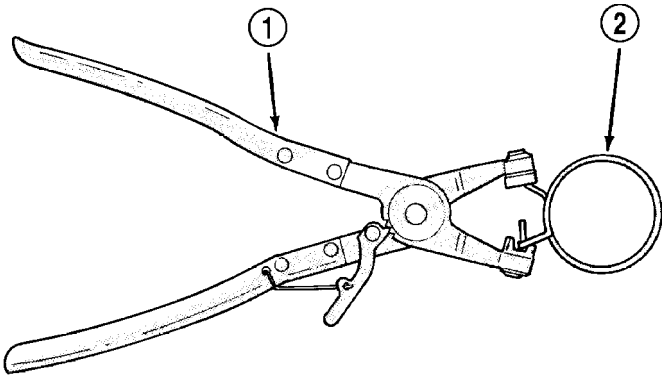

Fig. 3 Hose Clamp Tool

1 - HOSE CLAMP TOOL 6094
2 - HOSE CLAMP

DIAGNOSIS AND TESTING

ON - BOARD DIAGNOSTICS - OBD

COOLING SYSTEM RELATED DIAGNOSTICS

The Powertrain Control Module (PCM) has been programmed to monitor the certain following cooling system components: