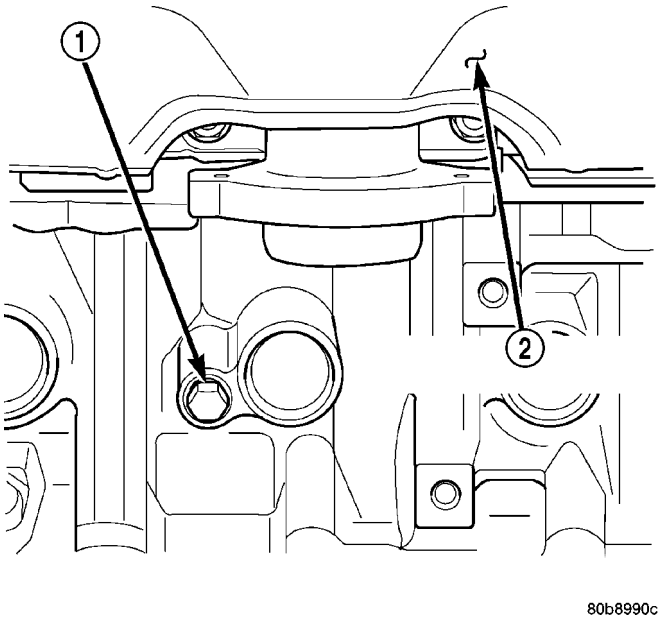

Fig. 6 Drain Plug - 3.7L Engine

1 - CYLINDER BLOCK DRAIN PLUG
2 - EXHAUST MANIFOLD AND HEAT SHIELD

STANDARD PROCEDURE - COOLING SYSTEM - REFILLING

(1) Tighten the radiator draincock and the cylinder block drain plug(s).

(2) Fill system using a 50/50 mixture of water and antifreeze. Fill the radiator to the top and install the radiator cap. Add sufficient coolant to the reserve/overflow tank to raise the level to the FULL mark.

(3) Operate the engine with both the radiator cap and reserve/overflow tank cap in place. After the engine has reached the normal operating temperature, shut the engine off and allow it to cool.

(4) Add coolant to the reserve/overflow tank as necessary. **Only add coolant when the engine is cold. Coolant level in a warm engine will be higher due to thermal expansion.**

STANDARD PROCEDURE - REFILLING COOLING SYSTEM - 2.4L

(1) Tighten the radiator draincock and the cylinder block drain plug(s) (if removed).

CAUTION: Failure to purge air from the cooling system can result in an overheating condition and severe engine damage.

(2) Fill system using a 50/50 mixture of ethyleneglycol antifreeze and low mineral content water. Fill pressure bottle to service line and install cap.

NOTE: The engine cooling system will push any remaining air into the coolant bottle within about an hour of normal driving. As a result, a drop in coolant level in the pressure bottle may occur. If the engine cooling system overheats and pushes coolant into the overflow side of the coolant bottle, this coolant will be sucked back into the cooling system ONLY IF THE PRESSURE CAP IS LEFT ON THE BOTTLE. Removing the pressure cap breaks the vacuum path between the two bottle sections and the coolant will not return to cooling system.

(3) With heater control unit in the HEAT position, operate engine with pressure bottle cap in place.

(4) Add coolant to pressure bottle as necessary. **Only add coolant to the pressure bottle when the engine is cold. Coolant level in a warm engine will be higher due to thermal expansion.**

NOTE: The coolant bottle has two chambers. Coolant will normally only be in the outboard (larger) of the two. The inboard chamber is only to recover coolant in the event of an overheat or after a recent service fill. The inboard chamber should normally be empty. If there is coolant in the overflow side of the coolant bottle (after several warm/cold cycles of the engine) and coolant level is above cold full when cold, disconnect the end of the overflow hose at the fill neck and lower it into a clean container. Allow coolant to drain into the container until emptied. Reconnect overflow hose to fill neck.

STANDARD PROCEDURE - COOLANT LEVEL CHECK

NOTE: Do not remove radiator cap for routine coolant level inspections. The coolant level can be checked at coolant reserve/overflow tank.

The coolant reserve/overflow system provides a quick visual method for determining coolant level without removing radiator pressure cap. With engine idling and at normal operating temperature, observe coolant level in reserve/overflow tank. The coolant level should be between ADD and FULL marks.

STANDARD PROCEDURE - COOLING SYSTEM - DRAINING

WARNING: DO NOT REMOVE THE CYLINDER BLOCK DRAIN PLUGS OR LOOSEN THE RADIATOR DRAINCOCK WITH SYSTEM HOT AND UNDER PRESSURE. SERIOUS BURNS FROM COOLANT CAN OCCUR.

DO NOT WASTE reusable coolant. If the solution is clean, drain the coolant into a clean container for reuse.

DO NOT remove the radiator cap when draining the coolant from the reserve/overflow tank. Open the radiator draincock and when the tank is empty, remove the radiator cap. The coolant does not have