ACCESSORY DRIVE

TABLE OF CONTENTS

page

ACCESSORY DRIVE
SPECIFICATIONS
BELT TENSION 14
BELT TENSIONERS
DESCRIPTION 14
REMOVAL
REMOVAL - 2.4L ENGINE 14
REMOVAL 15
INSTALLATION
INSTALLATION - 2.4L ENGINE 15
INSTALLATION 16
DRIVE BELTS - 2.4L
DIAGNOSIS AND TESTING - ACCESSORY DRIVE BELT 16
REMOVAL
REMOVAL 19
REMOVAL 19
INSTALLATION
INSTALLATION 20
INSTALLATION 20

ACCESSORY DRIVE

SPECIFICATIONS

BELT TENSION

Belt tension can not be adjusted. Refer to the following Belt Tension chart for specifications.

DESCRIPTION	N·m	Lbs. ft.
New Serpentine Belt*	800-900	180-200
Used Serpentine Belt	623-712	140-160
* Belt is considered new if it has been used 15 minutes or less.		

BELT TENSIONERS

DESCRIPTION

The automatic belt tensioner (Fig. 1) is a spring loaded arm and pulley assembly. The tensioner assembly is designed to apply constant pressure on the accessory drive belt to maintain proper belt tension. There are three marks on the tensioner body, these marks are there to indicate belt wear and belt tension.

NOTE: On 4.0L engines, the tensioner arm has three marks. Upon installation of a new belt, the double line marks close to each other should be very close to the mark on the base. The belt should be replaced if the single line mark lines up with the mark on the base.

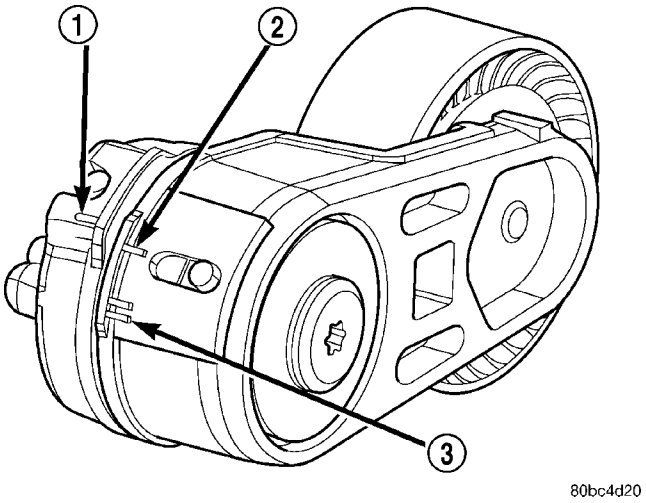

Fig. 1 Accessory Drive Belt Wear Indicator - 4.0L Engine

1 - INDICATOR MARK
2 - MINIMUM TENSION MARK
3 - MAXIMUM TENSION MARK

REMOVAL

REMOVAL - 2.4L ENGINE

NOTE: The belt routing schematics are published from the latest information available at the time of publication. If anything differs between these schematics and the Belt Routing Label, use the schematics on Belt Routing Label. This label is located in the engine compartment.

CAUTION: DO NOT LET TENSIONER ARM SNAP BACK TO THE FREEARM POSITION, SEVERE DAMAGE MAY OCCUR TO THE TENSIONER.