contraction of the coolant to keep the coolant free of trapped air. It provides:

- A volume for coolant expansion and contraction.
- A convenient and safe method for checking/adjusting coolant level at atmospheric pressure. This is done without removing the radiator pressure cap.
- Some reserve coolant to the radiator to cover minor leaks and evaporation or boiling losses.

As the engine cools, a vacuum is formed in the cooling system of both the radiator and engine. Coolant will then be drawn from the coolant tank and returned to a proper level in the radiator.

REMOVAL

(1) Disconnect the hose from radiator filler neck.
(2) Remove coolant recovery bottle (Fig. 2).

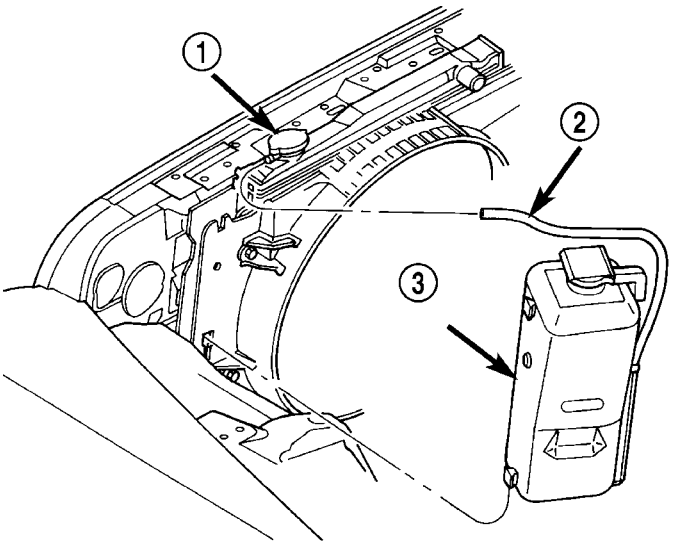

80abd2b8

Fig. 2 Coolant Reserve/Overflow Bottle

1 - RADIATOR PRESSURE CAP
2 - HOSE
3 - COOLANT RECOVERY BOTTLE

INSTALLATION

(1) Position the tabs on the overflow bottle into the slots on the fan shroud.
(2) Reconnect the overflow hose onto the radiator filler neck.
(3) Fill resrevoir/overflow bottle.

ENGINE BLOCK HEATER

DESCRIPTION

WARNING: DO NOT OPERATE ENGINE UNLESS BLOCK HEATER CORD HAS BEEN DISCONNECTED FROM POWER SOURCE AND SECURED IN PLACE.

An optional engine block heater (Fig. 3) is available for all models. The heater is equipped with a power cord. The cord is attached to an engine compartment component with tie-straps. The heater warms the engine providing easier engine starting and faster warm-up in low temperatures. The heater is mounted in a core hole of the engine cylinder block (in place of a freeze plug) with the heating element immersed in engine coolant.

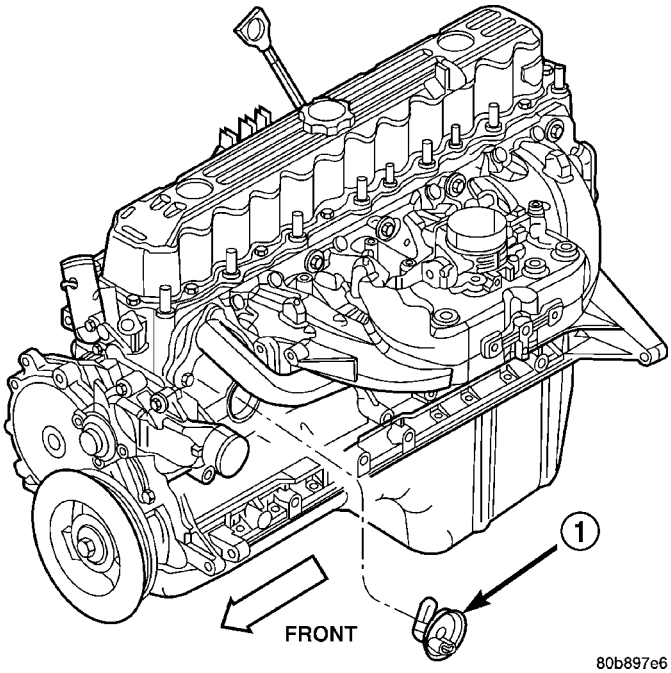

80b897e6

Fig. 3 Block Heater - Typical

1 - ENGINE BLOCK HEATER

OPERATION

Connecting the power cord to a grounded 110-120 volt AC electrical outlet with a grounded, three-wire extension cord, supplies the electricity required to heat the element thus heating the engine coolant.

REMOVAL

REMOVAL - 2.4L

(1) Drain cooling system (Refer to 7 - COOLING/ ENGINE - STANDARD PROCEDURE).
(2) Raise vehicle on hoist.
(3) Detach power cord plug from heater.
(4) Loosen screw in center of heater. Remove heater assembly.

REMOVAL - 4.0L

WARNING: DO NOT REMOVE THE CYLINDER BLOCK DRAIN PLUGS OR LOOSEN THE RADIATOR DRAINCOCK WITH THE SYSTEM HOT AND PRESSURIZED. SERIOUS BURNS FROM THE COOLANT CAN OCCUR.

DO NOT WASTE reusable coolant. If solution is clean, drain coolant into a clean container for reuse.