WARNING: Constant tension hose clamps are used on most cooling system hoses. When removing or installing, use only tools designed for servicing this type of clamp, such as special clamp tool number 6094. Always wear safety glasses when servicing constant tension clamps.

CAUTION: A number or letter is stamped into the tongue of constant tension clamps (Fig. 32). If replacement is necessary, use only an original equipment clamp with matching number or letter.

(2) Remove radiator upper hose and heater hose at thermostat housing.
(3) Disconnect wiring connector at engine coolant temperature sensor.
(4) Remove thermostat housing mounting bolts, thermostat housing, gasket and thermostat (Fig. 10). Discard old gasket.
(5) Clean the gasket mating surfaces.

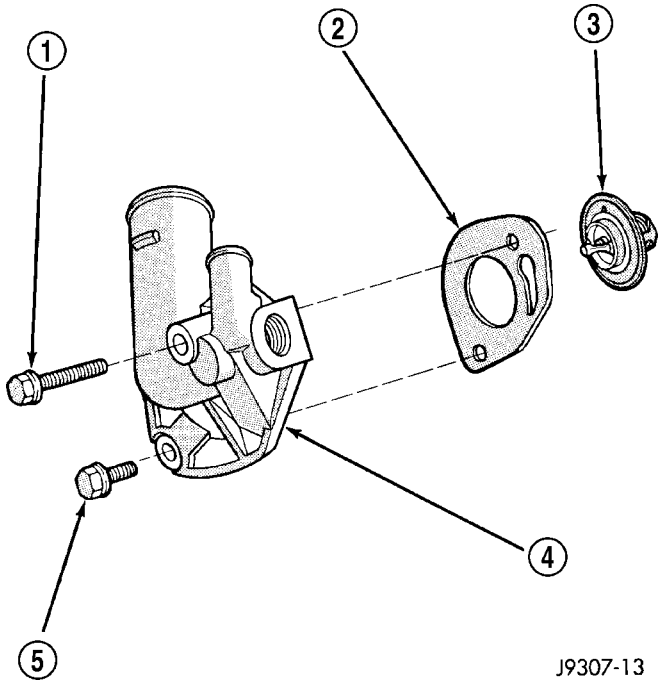

Fig. 10 Thermostat Removal/Installation

1 - LONG BOLT
2 - GASKET
3 - THERMOSTAT
4 - THERMOSTAT HOUSING
5 - SHORT BOLT

INSTALLATION

2.4L

(1) Clean all gasket sealing surfaces.
(2) Place a new gasket (dipped in clean water) on the coolant outlet connector surface. Position thermostat with air bleed at 12 o'clock position in thermostat housing (Fig. 11).
(3) Position the coolant outlet connector and gasket over the thermostat, making sure thermostat is seated in the thermostat housing.
(4) Position outlet connector to thermostat housing and install bolts. Tighten bolts to 28 N·m (20 ft. lbs.).
(5) Install radiator hose to coolant outlet housing.

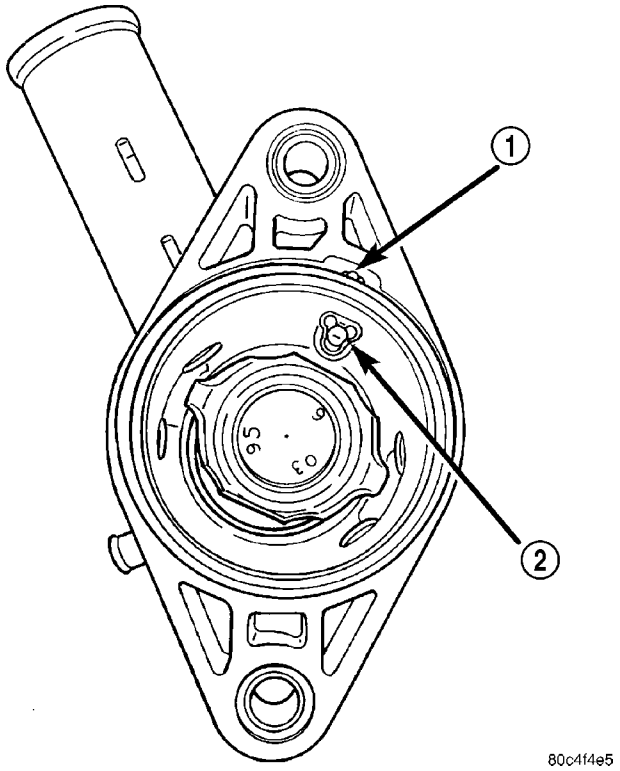

Fig. 11 Thermostat Position

1 - LOCATOR NOTCH
2 - AIR BLEED

(6) Connect engine coolant temperature sensor.
(7) Fill cooling system (Refer to 7 - COOLING - STANDARD PROCEDURE).

4.0L

(1) Install the replacement thermostat so that the pellet, which is encircled by a coil spring, faces the engine. All thermostats are marked on the outer flange to indicate the proper installed position.
(2) Observe the recess groove in the engine cylinder head (Fig. 12).
(3) Position thermostat into this groove with arrow and air bleed hole on outer flange pointing up.