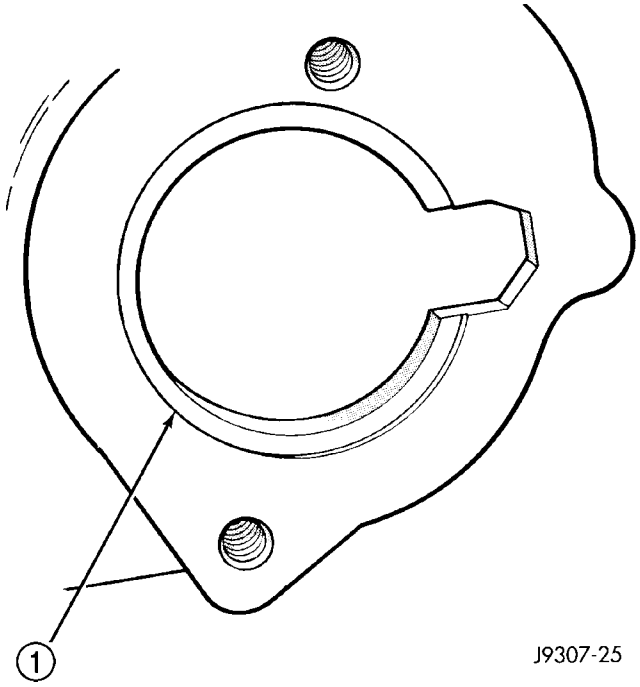

Fig. 12 Thermostat Recess

1 - GROOVE

(4) Install replacement gasket and thermostat housing.

CAUTION: Tightening the thermostat housing unevenly or with the thermostat out of its recess may result in a cracked housing.

(5) Tighten the housing bolts to 20 N·m (15 ft. lbs.) torque.

(6) Install hoses to thermostat housing.

(7) Install electrical connector to coolant temperature sensor.

(8) Be sure that the radiator draincock is tightly closed. Fill the cooling system (Refer to 7 - COOLING - STANDARD PROCEDURE).

(9) Start and warm the engine. Check for leaks.

FAN DRIVE VISCOUS CLUTCH

DESCRIPTION

CAUTION: Engines equipped with serpentine drive belts have reverse rotating fans and viscous fan drives. They are marked with the word REVERSE to designate their usage. Installation of the wrong fan or viscous fan drive can result in engine overheating.

The thermal viscous fan drive (Fig. 13) and (Fig. 14) is a silicone-fluid-filled coupling used to connect the fan blades to the water pump shaft. The coupling allows the fan to be driven in a normal manner. This is done at low engine speeds while limiting the top speed of the fan to a predetermined maximum level at higher engine speeds.

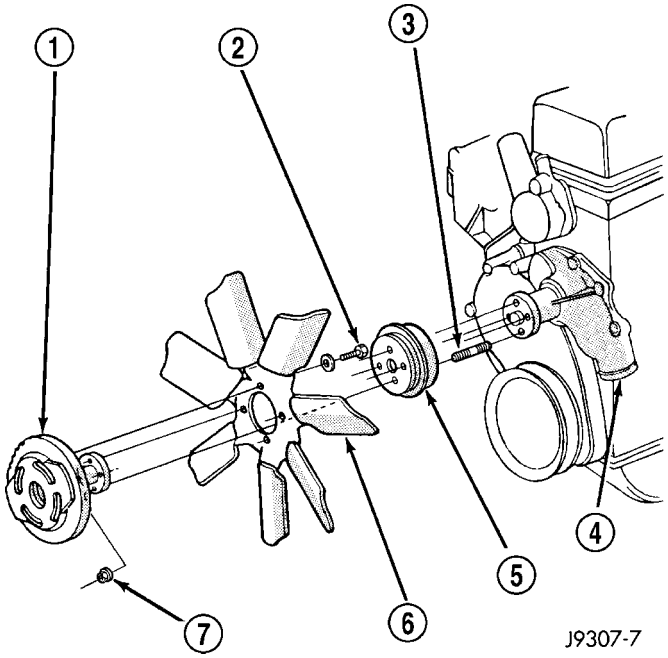

Fig. 13 Water Pump Mounted Fan Drive - 2.5L Engine

1 - THERMAL VISCOUS FAN DRIVE
2 - (4) FAN BLADE-TO-VISCOUS DRIVE BOLTS
3 - (4) FAN HUB-TO-PUMP PULLEY STUDS
4 - WATER PUMP
5 - WATER PUMP PULLEY
6 - FAN BLADE
7 - (4) FAN HUB-TO-PUMP PULLEY NUTS

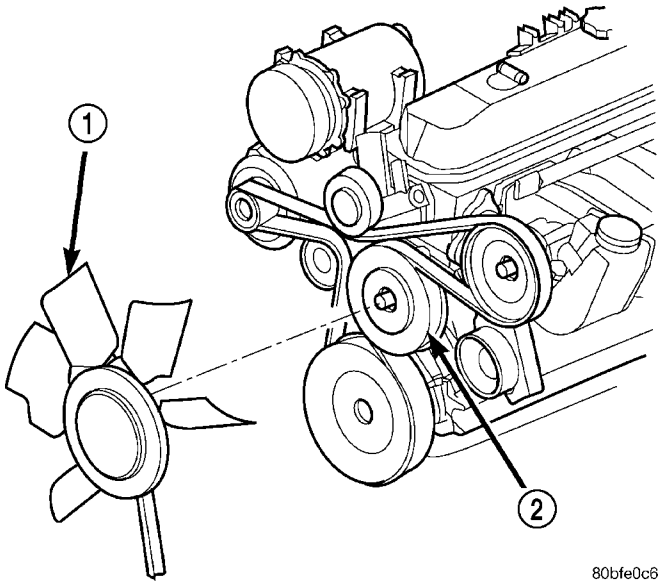

Fig. 14 Water Pump Mounted Fan Drive - 4.0L Engine

1 - FAN AND FAN DRIVE
2 - WATER PUMP PULLEY