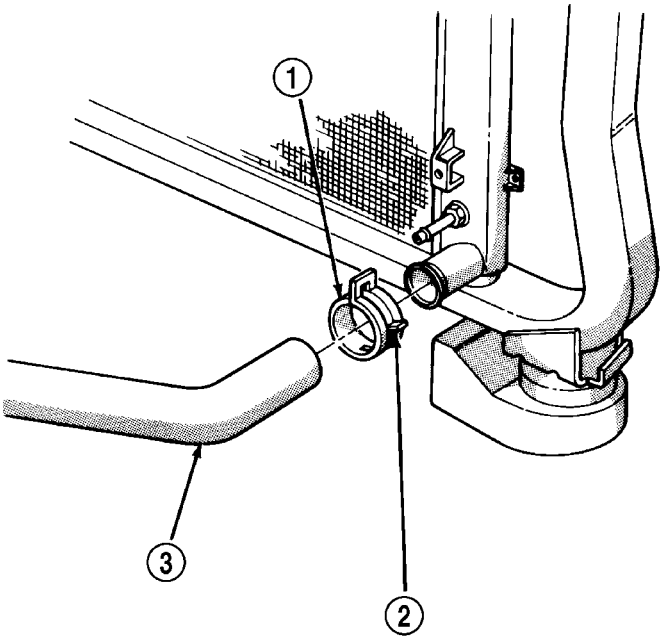

Fig. 20 Clamp Number/Letter Location - Typical

1 - TYPICAL CONSTANT TENSION HOSE CLAMP
2 - CLAMP NUMBER/LETTER LOCATION
3 - TYPICAL HOSE

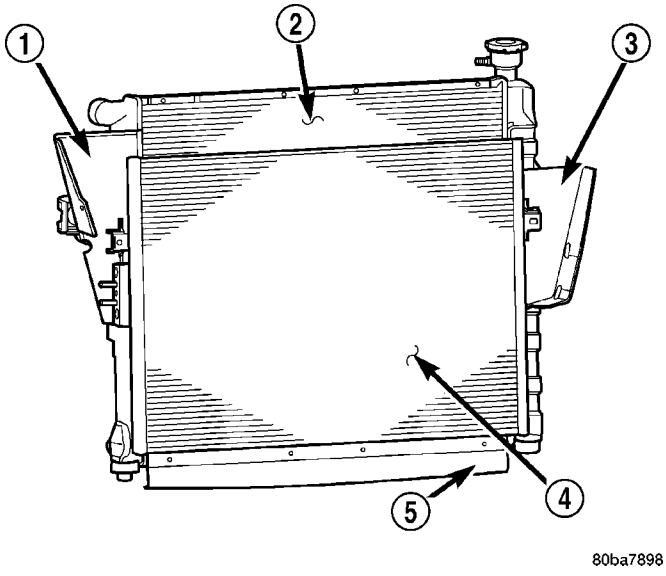

Fig. 21 Air Seals - Typical

1 - AIR DAM
2 - RADIATOR
3 - AIR DAM
4 - A/C CONDENSER
5 - AIR SEAL

(2) Observe the previous **WARNING.** Remove the radiator cap.

(3) Remove the condenser lower seal from the lower core support (Fig. 22).

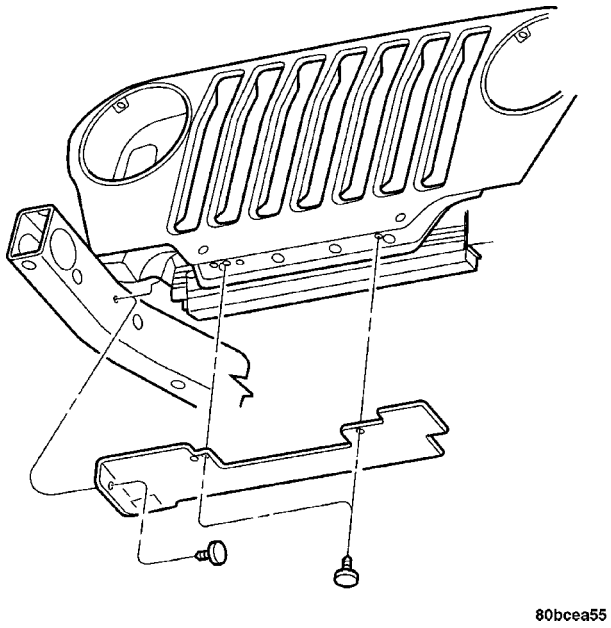

Fig. 22 Condenser Lower Seal

(4) Drain cooling system (Refer to 7 - COOLING - STANDARD PROCEDURE) drain coolant into a clean container for reuse.

(5) Remove radiator upper and lower hose clamps. Remove radiator hoses.

(6) Disconnect coolant reserve/overflow tank hose from radiator.

(7) 2.4L ONLY - Remove the electric cooling fan (Refer to 7 - COOLING/ENGINE/RADIATOR FAN - REMOVAL).

(8) 4.0L ONLY - Remove the reservoir tank and power steering reservoir and position out of the way.

(9) 4.0L ONLY - Remove the four fan shroud mounting bolts (Fig. 23). Position the fan shroud back over the fan blades.