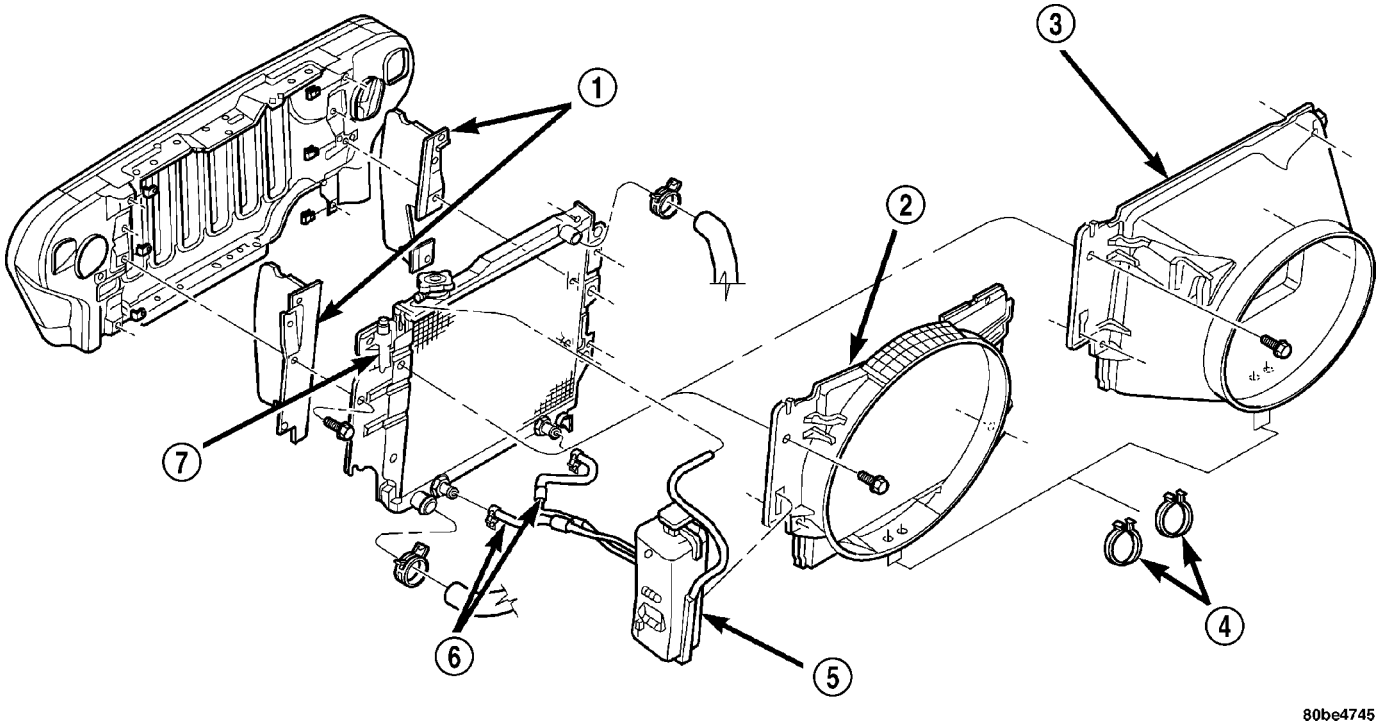

Fig. 23 Radiator - Remove/Install

1 - A/C CONDENSER SEALS
2 - FAN SHROUD (4.0L)
3 - FAN SHROUD (2.5L)
4 - TRANSMISSION OIL COOLER LINES RETAINER CLIPS
5 - COOLANT RECOVERY BOTTLE
6 - TRANSMISSION COOLER LINES (IF EQUIPPED)
7 - FRONT AXLE VENT HOSE

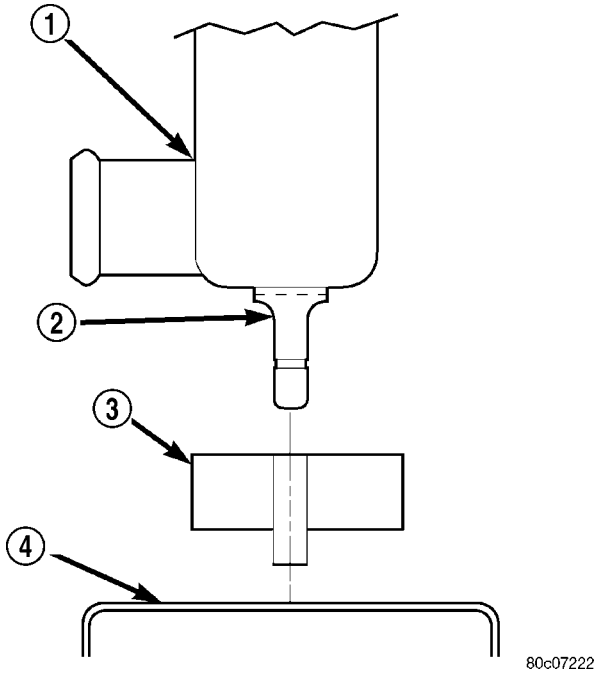

Fig. 24 Radiator Alignment Dowels - Typical

1 - RADIATOR
2 - ALIGNMENT DOWEL
3 - RADIATOR LOWER ISOLATOR
4 - RADIATOR LOWER CROSSMEMBER

(10) If equipped, disconnect and plug automatic transmission fluid cooler lines (Refer to 7 - COOLING/TRANSMISSION - STANDARD PROCEDURE).

(11) Remove six radiator mounting bolts. Position the front axle vent hose (Fig. 23) to the side.

(12) The lower part of radiator is equipped with two alignment dowel pins (Fig. 24). They are located on the bottom of radiator tank and fit into rubber grommets. These rubber grommets are pressed into the radiator lower crossmember.

(13) Lift radiator straight up and out of vehicle taking care not to damage radiator fins.

(14) When removing radiator, note position of the rubber seals located on the top and bottom of radiator (on certain models only) (Fig. 23). To prevent possible overheating, these seals must be installed to their original positions.

CLEANING

Clean radiator fins. With the engine cold, apply cold water and compressed air to the back (engine side) of the radiator to flush the radiator and/or A/C condenser of debris.

INSPECTION

The radiator cooling fins should be checked for damage or deterioration. Inspect cooling fins to make sure they are not bent or crushed, these areas result