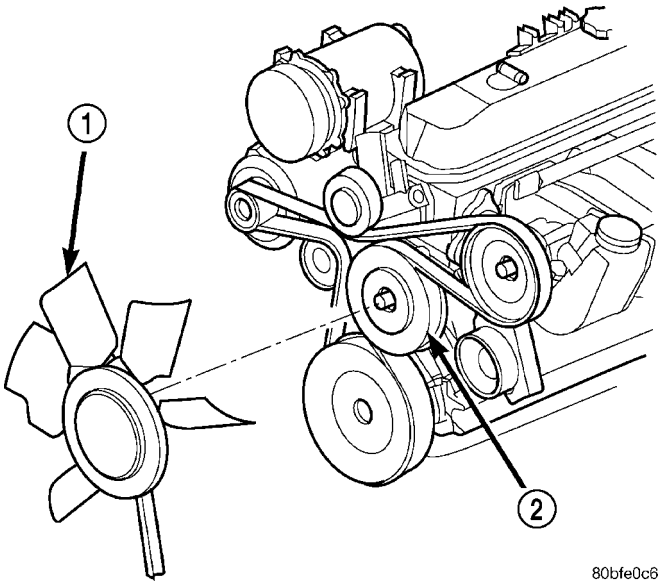

Fig. 30 Fan and Fan Drive Mounting - 4.0L Engine

1 - FAN AND FAN DRIVE
2 - WATER PUMP PULLEY

NOTE: The engine accessory drive belt must be removed prior to removing the fan.

(3) Remove accessory drive belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - REMOVAL).

(4) The thermal viscous fan drive/fan blade assembly is attached (threaded) to water pump hub shaft. Remove fan blade/viscous fan drive assembly from water pump by turning mounting nut counterclockwise as viewed from front. Threads on viscous fan drive are **RIGHT HAND.** Using a suitable fan wrench loosen the fan drive (Fig. 30).

(5) Remove power steering pump (Refer to 19 - STEERING/PUMP - REMOVAL).

WARNING: Constant tension hose clamps are used on most cooling system hoses. When removing or installing, use only tools designed for servicing this type of clamp, such as special clamp tool number 6094 (Fig. 31). Always wear safety glasses when servicing constant tension clamps.

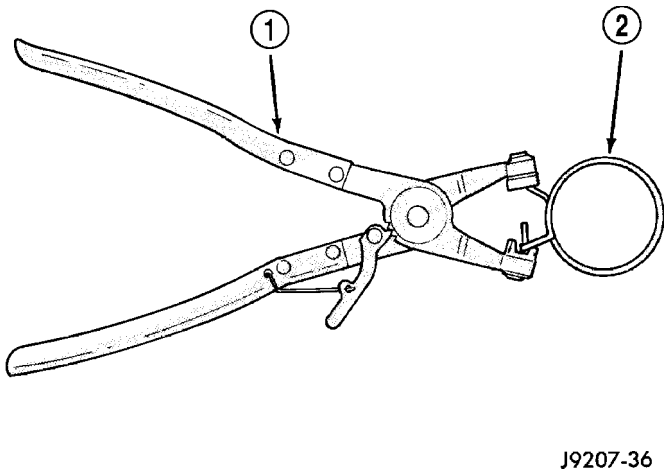

Fig. 31 Hose Clamp Tool - Typical

1 - HOSE CLAMP TOOL 6094
2 - HOSE CLAMP

CAUTION: A number or letter is stamped into the tongue of constant tension clamps (Fig. 32). If replacement is necessary, use only an original equipment clamp with matching number or letter.

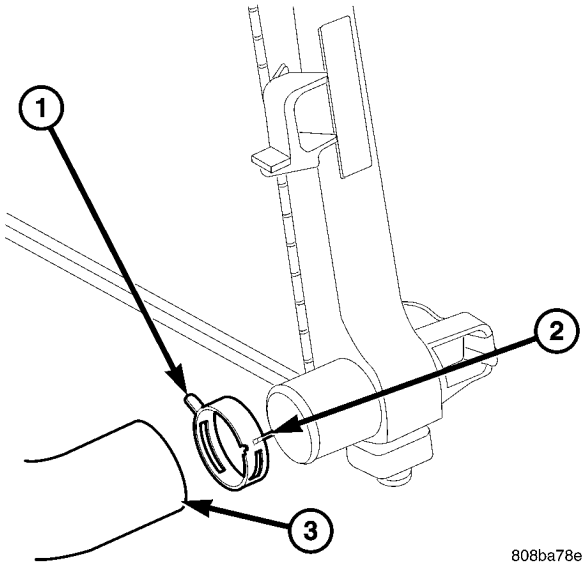

Fig. 32 Clamp Number/Letter Location

1 - TYPICAL CONSTANT TENSION HOSE CLAMP
2 - CLAMP NUMBER/LETTER LOCATION
3 - TYPICAL HOSE

(6) Remove lower radiator hose from water pump. Remove heater hose from water pump fitting.

(7) After removing fan blade/viscous fan drive assembly, **do not** place thermal viscous fan drive in horizontal position. If stored horizontally, silicone fluid in viscous fan drive could drain into its bearing assembly and contaminate lubricant.

(8) Remove the four pump mounting bolts (Fig. 33) and remove pump from vehicle. Discard old gasket. Note that one of the four bolts is longer than the other bolts.