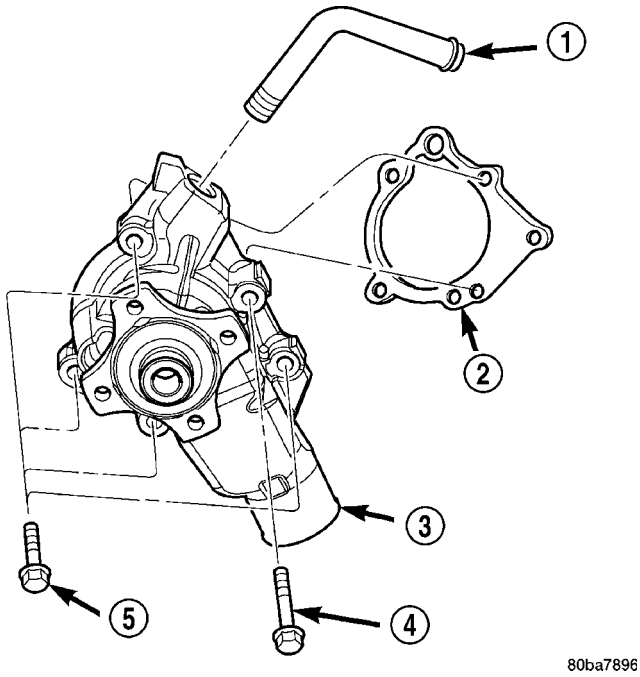

Fig. 33 Water Pump Remove/Install - 4.0L Engine

1 - HEATER HOSE FITTING
2 - PUMP GASKET
3 - WATER PUMP
4 - LONG BOLT
5 - BOLTS (4) SHORT

(9) If pump is to be replaced, the heater hose fitting must be removed. Note position of fitting before removal.

INSTALLATION

(1) If pump is being replaced, install the heater hose fitting to the pump. Use a sealant on the fitting such as Mopar® Thread Sealant With Teflon. Refer to the directions on the package.

(2) Clean the gasket mating surfaces. If the original pump is used, remove any deposits or other foreign material. Inspect the cylinder block and water pump mating surfaces for erosion or damage from cavitation.

(3) Install the gasket and water pump. The silicone bead on the gasket should be facing the water pump. Also, the gasket is installed dry. Tighten mounting bolts to 23 N·m (200 in. lbs.) torque. Rotate the shaft by hand to be sure it turns freely.

(4) Connect the radiator and heater hoses to the water pump.

(5) Install power steering pump (Refer to 19 - STEERING/PUMP - INSTALLATION).

(6) Thread the fan and fan hub into the water pump hub shaft.

CAUTION: When installing the serpentine engine accessory drive belt, the belt MUST be routed correctly. If not, the engine may overheat due to the water pump rotating in the wrong direction. for appropriate belt routing. You may also refer to the Belt Routing Label in the vehicle engine compartment.

(7) Install accessory drive belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - INSTALLATION).

(8) Fill cooling system with coolant (Refer to 7 - COOLING - STANDARD PROCEDURE).

(9) Connect battery cable to battery.

(10) Start and warm the engine. Check for leaks.

RADIATOR PRESSURE CAP

DESCRIPTION

All radiators are equipped with a pressure cap (Fig. 34). This cap releases pressure at some point within a range of 124-145 kPa (18-21 psi). The pressure relief point (in pounds) is engraved on top of the cap

The cooling system will operate at pressures slightly above atmospheric pressure. This results in a higher coolant boiling point allowing increased radiator cooling capacity. The cap contains a spring-loaded pressure relief valve. This valve opens when system pressure reaches the release range of 124-145 kPa (18-21 psi).

A rubber gasket seals the radiator filler neck. This is done to maintain vacuum during coolant cool-down and to prevent leakage when system is under pressure.