Operate tester pump to bring pressure to 117 kPa (17 psi) on gauge. If pressure cap fails to hold pressure of at least 110 kPa (16 psi) replace cap. Refer to the following **CAUTION**.

The pressure cap may test properly while positioned on tool 7700 (or equivalent). It may not hold pressure or vacuum when installed on radiator. If so, inspect radiator filler neck and cap's top gasket for damage. Also inspect for dirt or distortion that may prevent cap from sealing properly.

CAUTION: Radiator pressure testing tools are very sensitive to small air leaks, which will not cause cooling system problems. A pressure cap that does not have a history of coolant loss should not be replaced just because it leaks slowly when tested with this tool. Add water to tool. Turn tool upside down and recheck pressure cap to confirm that cap needs replacement.

CLEANING

Use only a mild soap and water to clean the radiator cap. Using any type solvent may cause damage to the seal in the radiator cap.

INSPECTION

Hold cap at eye level, right side up. The vent valve (Fig. 34) at bottom of cap should open. If rubber gasket has swollen and prevents vent valve from opening, replace cap.

Hold cap at eye level, upside down. If any light can be seen between vent valve and rubber gasket, replace cap. **Do not use a replacement cap that has a spring to hold vent shut.** A replacement cap must be the type designed for a coolant reserve/overflow system with a completely sealed diaphragm spring and a rubber gasket. This gasket is used to seal to radiator filler neck top surface. Use of proper cap will allow coolant return to radiator.

RADIATOR FAN

DESCRIPTION

The electric cooling fan replaces the engine driven mechanical fan. The electric cooling fan is integral to the fan shroud and is located between the radiator and the engine.

The electric fan is controlled by the electronic control module (ECM).

The electric cooling fan is not serviceable. Any failure of the fan blade, electric motor or fan shroud requires replacement of the fan module.

CAUTION: Do not attempt to service the electric cooling fan or fan blades separately, replace the cooling module as an assembly. Failure to do so may cause severe damage to the electric cooling fan assembly.

REMOVAL

2.4L

(1) Remove the coolant recovery bottle and position out of the way (Fig. 36).

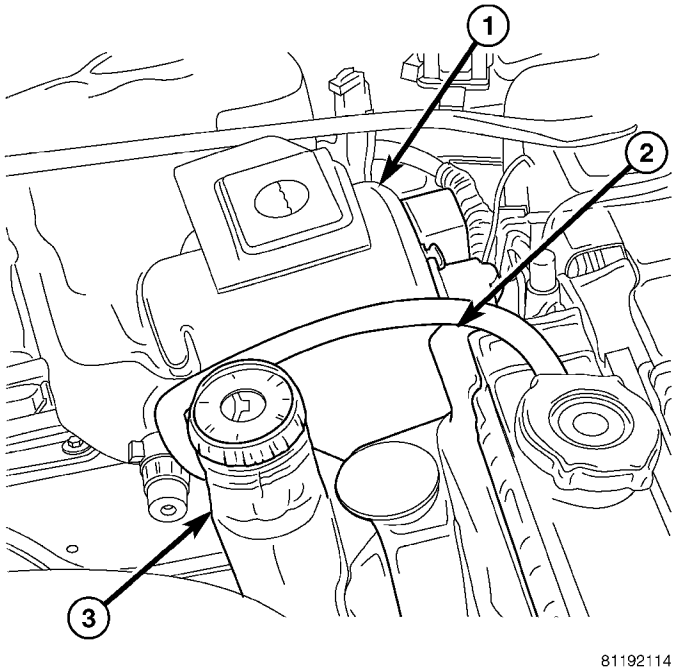

Fig. 36 Coolant Recovery Bottle

1 - COOLANT RECOVERY BOTTLE
2 - COOLING FAN ASSEMBLY
2 - POWER STEERING RESERVOIR

(2) Remove and position the power steering reservoir out of the way.

(3) Disconnect the electrical connector.

(4) Remove the mounting screws.

(5) Remove the cooling fan assembly (Fig. 37).